 


Use and Care Manual

Commercial Refrigerator

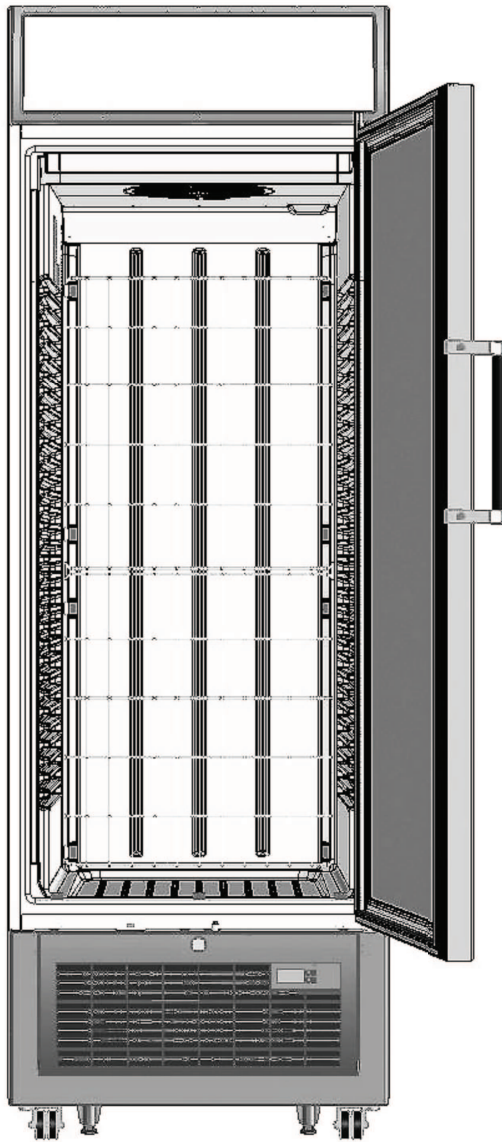

7084 825-01

BCDv 4613

IMPORTANT

Please Read and Follow these Instructions

These instructions contain Danger, Warning and Caution notes.

This information is important for safe and efficient installation and operation.

Always read and comply with all Danger, Warning and Caution notes!



DANGER

Danger indicates a hazard which will cause serious injury or death if precautions are not allowed.



WARNING

Warning indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury.



CAUTION

Caution indicates a potentially hazardous situation, which, if not avoided, may result in minor or moderate injury.

IMPORTANT

This indicates information that is especially relevant to a problem-free installation and operation.

California Proposition 65

This product contains chemicals known to the state of California to cause cancer or reproductive harm..

IMPORTANT

All types and models are subject to continuous improvement. The manufacturer reserves the right to make modifications into the shape, equipment and technology.

TABLE OF CONTENTS

Keep these operating instruction in a safe place and pass them on to the next owner, where applicable

Contents

Safety	4
Disposal of Old Appliance	4
Disposal of carton	4
Safety Instructions and Warnings	4
Important Safety Information	5
Electrical safety	5
Unpacking	6
Safety Regulation	6
Setting Up	6
Feature	7
Dimensions	7
Description of the Appliance	7
Operation	8
Operating Elements	8
Switching the Appliance On and Off	8
Setting the temperature	8
Interior light / Display light	8
Safety lock	8
Cleaning	9
Cleaning	9
Troubleshooting	10
Customer service	10
Appliance Information	10

SAFETY

Disposal of Old Appliance



DANGER

Risk of child entrapment.

Child entrapment and suffocation are not problems of the past.

Junked or abandoned refrigerators are still dangerous—even if they will sit for “just a few days.”

If you are getting rid of your old refrigerator, please follow these instructions to help prevent accidents.

Before you discard old appliances:

- Remove the doors.
- Leave the shelves in place so that children may not easily climb inside.
- Cut off the power cable from the discarded appliance. Discard separately from the appliance.
- Be sure to follow your local requirements for disposal of appliances.
- Contact the trash collection agency in your area for additional information.

Disposal of Carton



 
WARNING

Keep packaging materials away from children. Polythene sheets and bags can cause suffocation!

If possible, please recycle packaging material at a recycling facility.

Safety Instructions and Warnings

- Keep ventilation openings, in the appliance enclosure or in the built-in structure, clear of obstruction.
- Do not use mechanical devices or other means to accelerate the defrosting process, other than those recommended by the manufacturer.
- Do not damage the refrigerant circuit.
- Component parts shall be replaced with like components performed by factory authorized service personnel only.
- Do not use electrical appliances inside the refrigerator compartment, unless they are of the type recommended by the manufacturer.
- Standard EN 378 specifies that the room in which you install your appliance must have a volume of 1 m³ per 8g of R 600a refrigerant used in the appliance, so as to avoid the formation of inflammable gas/air mixtures in the room where the appliance is located in the event of a leak in the refrigerant circuit. The quantity of refrigerant used in your appliance is indicated on the type plate on the inside of the appliance.

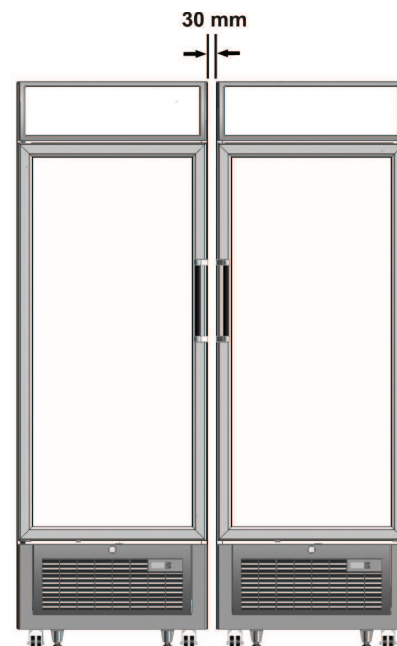

If several appliances are installed next to each other, leave a gap of 30 mm between them. If this gap is too narrow, condensation forms between the side walls.

Important Safety Information

- If the appliance is damaged on delivery, contact the supplier immediately before connecting it to the power source.
- To guarantee safe operation, ensure that the appliance is set up and connected as described in this manual.
- Disconnect the appliance from the power source if a fault occurs. Pull out the plug, turn off or disable the power source.
- When disconnecting the appliance, always pull it out by the plug; never pull on the cable.
- Any repairs and work on the appliance should only be performed by the customer service department. Unauthorized work may be dangerous to the user. The power source cable should only be changed or replaced by the customer service department.
- Do not store explosives or sprays using combustible propellants such as butane, propane, pentane, etc. in the appliance. Electrical components might cause leaking gas to ignite. You can identify such sprays by the printed contents or a flame symbol.
- To prevent possible injury due to an electrical shock, be sure to disconnect the power cord or turn off the circuit breaker before cleaning the appliance.
- To avoid injury or damage to the appliance, do not use steam cleaning equipment to clean the appliance.
- Do not operate the appliance in the presence of explosive fumes.
- To protect the appliance from possible damage, allow it to stand 1/2 to 1 hour in place before turning on the electricity. This allows the refrigerant and system lubrication to reach equilibrium.
- In the event of a power outage, minimize opening the appliance door. Do not attempt to re-freeze any previously frozen food that has thawed.

Electrical Safety

Connect this appliance to a 15 amp or 20 amp, 110- 120 VAC, circuit which is grounded and protected by a circuit breaker or fuse.

We recommend using a dedicated circuit for this appliance to prevent circuit overload and the chance of interruption to the appliance.

This appliance is equipped with a three-prong (grounding) polarized plug for your protection against possible shock hazards.

Where a two-prong wall receptacle is encountered, contact a qualified electrician and have it replaced with a properly grounded three-prong receptacle in accordance with all local codes and ordinances.

 


WARNING

Electrocution hazard.

Electrical grounding required.

- Do not remove the round grounding prong from the plug.
- Do not use extension cords or ungrounded (two-prong) adapters.
- Do not use a power cord that is frayed or damaged.
- Do not use a power strip

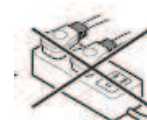

Failure to follow these instructions may result in fire, electrical shock or death.

UNPACKING

Safety Regulations

The appliance is designed to cool and store food and beverages.

IMPORTANT

The appliance is not intended for outdoor use.

The appliance is manufactured to operate within specific ambient temperature limits according to its climate rating.

The climate rating indicates the ambient temperature at which the appliance may be operated in order to deliver optimal refrigeration performance.

Climate Rating	Ambient Temperature	Relative humidity
4	86°F	55%

IMPORTANT

Do not operate the appliance outside the specified ambient temperature range.

- The refrigerant circuit has been tested for leaks.
- The appliance complies with UL 471 / CRG 471 and NSF 7.

We recommend cleaning the appliance before turning it on for the first time. See **Cleaning**.



WARNING

Do not allow children to play with the appliance. Children must not climb, sit or stand on the shelves or door.

Failure to follow these instructions may result in death or serious injury.

Setting Up



 
CAUTION

To avoid risk of personal injury or property damage, have two people unpack and move this appliance into place.

Avoid placing the appliance in direct sunlight or near the stove, range top, radiators and similar heat sources.


As soon as you uncrate the unit:

- Examine the unit and packaging for shipping damage. Contact the carrier immediately if you suspect there is any damage.
- Note the type (model number), service number, appliance / serial number, date of purchase and where purchased in the space provided in the back of this manual.

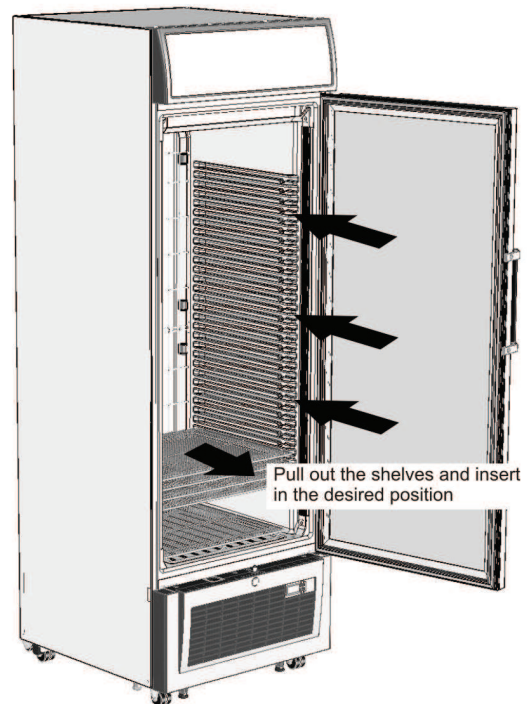


Dimensions

 A : 1957mm (without castor)
1999mm(with castor)
B : 670 mm
C : 730 mm
D : 1356 mm
E : 721 mm

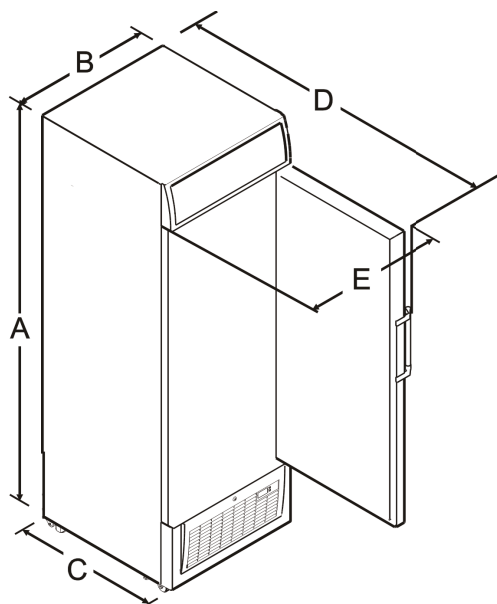


Description of the Appliance

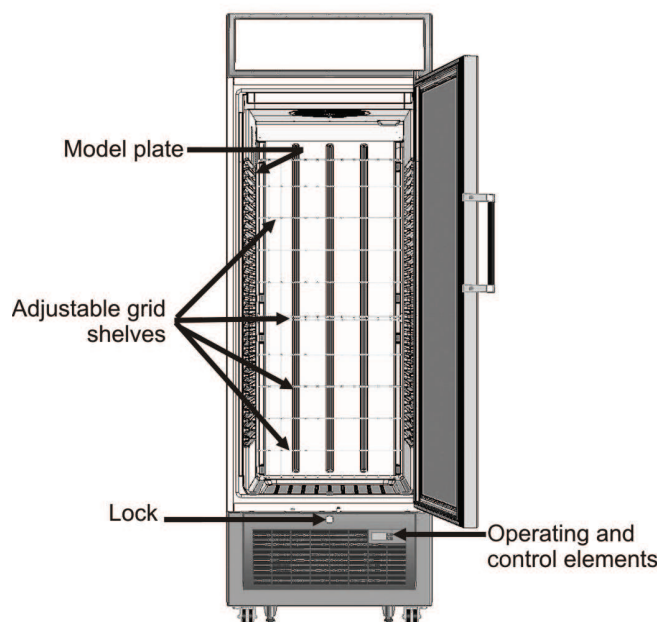 

IMPORTANT

 The maximum load per grid shelf is 132 lbs (60 kg).

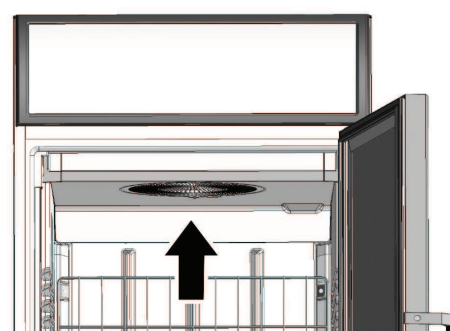


IMPORTANT

The ventilation slots on the inside must not be covered!

OPERATION

 Operating elements

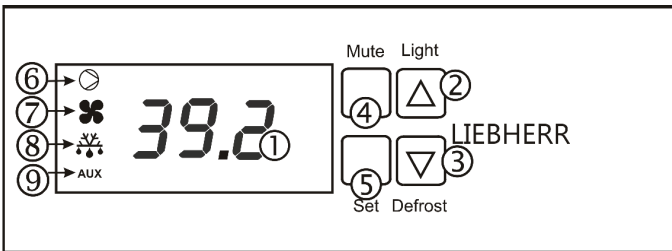

- ① Temperature display
- ② Up/Light button
- ③ Down/Defrost button
- ④ Mute button
- ⑤ Set button
- ⑥ Compressor running symbol
- ⑦ Evaporator fan running symbol
- ⑧ Defrost running symbol
- ⑨ Lighting activate symbol

Note :

During the cooling system is in defrost mode, the operating noise changes, and no cooling takes place.

Switching the appliance on and off



You are recommended to clean the appliance before switching in on for the first time (see **Cleaning**).


To switch the appliance on : Connect the appliance to the mains - the appliance is switched on.

To switch the appliance off : Pull out the mains plug.


If operation or power is interrupted, delay 10 minutes before restarting.

Setting the temperature

- Press the SET  button until the blinking default temperature appear on display panel.
- Press the DOWN/DEFROST  button to reduce the temperature. Defrost

- Press the UP/LIGHT  button to increase the temperature

 
- The temperature can be set between 35.6°F to 59°F.

- To save the setting, press the SET  button until the display showing the interior temperature.

Interior light Display light

LED lighting is used for interior and display.

- The interior light together with the display light can be turned on and off using the button ② . Press button ② more than 1 sec.

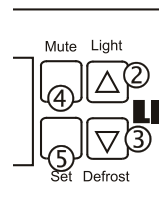

Important

The lighting may only be replaced by the customer service technician or by competent skilled personnel!

Caution - class 1M laser radiation. When cover is removed, do not look directly at light through optical instruments.

 
Safety lock

The lock is equipped with a safety mechanism.

Locking the appliance

- Insert the key as shown by arrow 1.
- Turn the key 180° as shown by arrow 2.

To unlock the appliance, the same procedure must be repeated in the same order.

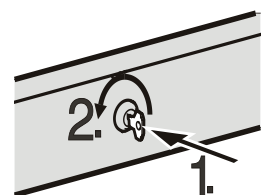

CLEANING

Cleaning



WARNING

 
- To prevent possible injury due to an electrical shock, be sure to disconnect the power cord or turn off the circuit breaker before cleaning the appliance.
- To avoid injury or damage, do not use steam cleaning equipment to clean the appliance.

Cleaning the appliance interior

- Clean the inside of the appliance and equipment parts with lukewarm water and a little detergent.
- Thoroughly dry all parts with a cloth.
- Do not damage or remove the model plate on the inside of the appliance. It is very important for servicing your appliance.

Cleaning the appliance outside

- Clean the door surface with a clean and soft cloth. If necessary, use a moist cloth (water + detergent).
- Ensure no cleaning water penetrate into the electrical components

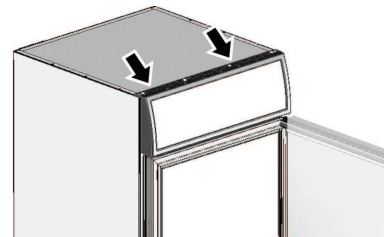

IMPORTANT

Do not use abrasive or scouring pads or sponges. Do not use concentrated cleaning agents. Never use abrasive or acid-based cleaners or chemical solvents

TROUBLESHOOTING


You may be able to correct the following faults by checking the possible causes yourself :

Problem	Possible Cause and Remedy
Appliance does not work	<ul style="list-style-type: none"> - Is the power source plug properly inserted in the socket? - Is the circuit breaker, or fuse in operating condition?
Motor seems to run too long	<ul style="list-style-type: none"> - Is the ambient temperature too hot? See Safety Regulations. - Has the appliance been opened too frequently or left open too long? - A large amount of food has been added.
The temperature is not cold enough	<ul style="list-style-type: none"> - Is the temperature setting correct? See Setting The Temperature. - Does a separately installed thermometer show the correct reading? - Is the ventilation system working properly? - Is the appliance set up too close to a heat source?

Customer Service



 If none of the above causes apply and you cannot rectify the fault yourself, contact the nearest customer service department stating the type of appliance ❶, service number ❷ and appliance number ❸ as indicated on the type plate.

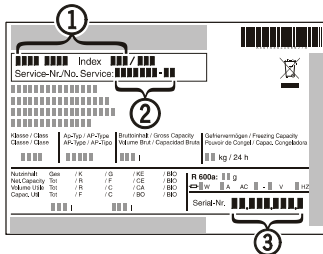

Appliance information

Record this information when the appliance is installed.

Type Designation : _____

Service Number : _____

Appliance/Serial Number : _____

Date of delivery : _____

Leave the appliance closed until the customer service engineer arrives to prevent any further cold loss.

Liebherr Appliances Kluang Sdn Bhd

No.7 Jln Firma 2 , Kaw.Perind.Kluang II, KM7, Jln Mersing, 86007 kluang, Johor, West Malaysia.
www.liebherr.com.my
