

Operating instructions

Wine storage cabinet

Page 18



Disposal notes

The appliance contains reusable materials and should be disposed of properly - not simply with unsorted household refuse. Appliances which are no longer needed must be disposed of in a professional and appropriate way, in accordance with the current local regulations and laws.



When disposing of the appliance, ensure that the refrigerant circuit is not damaged to prevent uncontrolled escape of the refrigerant it contains (data on type plate) and oil.

- Disable the appliance.
- Pull out the mains plug.
- Cut through the connection cable.



WARNING


Danger of suffocation due to packing material and plastic film!

Do not allow children to play with packaging material. Take the packaging material to an official collection point.

EPREL database

As from 1 March 2021, information about energy labelling and ecodesign requirements will be available in the European product database (EPREL). You can access the product database using the following link: <https://eprel.ec.europa.eu/>. You will be asked to enter the model identifier. You will find the model identifier on the type plate.

Description of the appliance

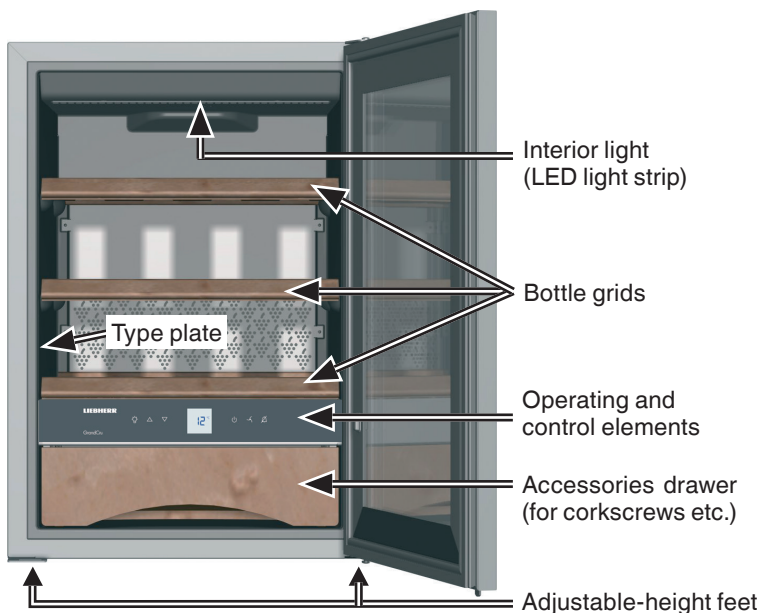


Climate rating

The climate rating indicates the room temperature at which the appliance may be operated in order to achieve full refrigeration performance.

The climate rating is indicated on the type plate.

The position of the type plate is shown in the section entitled **Description of the appliance**.

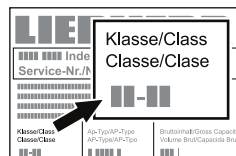

Climate rating	Room temperature
SN	+10°C to +32°C
N	+16°C to +32°C
ST	+16°C to +38°C
T	+16°C to +43°C
SN-ST	+10°C to +38°C
SN-T	+10°C to +43°C

Do not operate the appliance outside the specified room temperature range.


Range of appliance use


The appliance is suitable solely for storing wine in a domestic environment or similar. This includes, for example, use

- in staff kitchenettes, bed and breakfast establishments,
- by guests in cottages, hotels, motels and other forms of accommodation,
- in catering and similar services in the wholesale trade.


Use the appliance solely as is customary within a domestic environment. All other types of use are inadmissible. The appliance is not suitable for storing and cooling medicines, blood plasma, laboratory preparations or similar substances and products covered by the 2007/47/EC Medical Devices Directive. Any misuse of the appliance may result in damage to or spoilage of stored goods. Furthermore, the appliance is not suitable for operation in potentially explosive atmospheres.

Setting up

- Avoid positioning the appliance in direct sunlight or near cookers, radiators and similar sources of heat.
- The floor on which the appliance stands should be horizontal and level. Compensate for uneven floors with the adjustable feet.
- Always ensure that there is good ventilation and that the outward flowing air is able to escape. 
- Standard EN 378 specifies that the room in which you install your appliance must have a volume of 1 m³ per 8 g of R 600a refrigerant used in the appliance, so as to avoid the formation of inflammable gas/air mixtures in the room where the appliance is located in the event of a leak in the refrigerant circuit. The quantity of refrigerant used in your appliance is indicated on the type plate on the inside of the appliance.

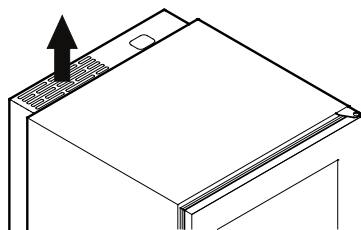

Dimensions

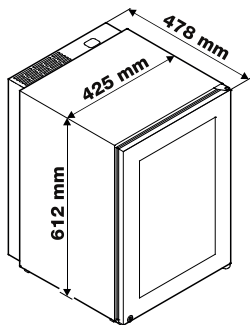

Electrical connection

Only operate the appliance with **alternating current (AC)**.

The permissible voltage and frequency are indicated on the type plate. The position of the type plate is shown in the section entitled **Description of the appliance**.


The socket must be properly earthed and protected by a fuse.

The tripping current of the fuse must be between 10 A and 16 A.

The socket must not be situated behind the appliance and must be easily accessible.


Do not connect the appliance using an extension cable or extension socket.

Do not use stand-alone inverters (conversion of direct current to alternating/three-phase current) or energy-saving plugs. Risk of damage to the electronic control system!

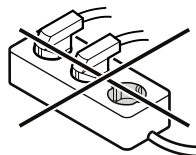



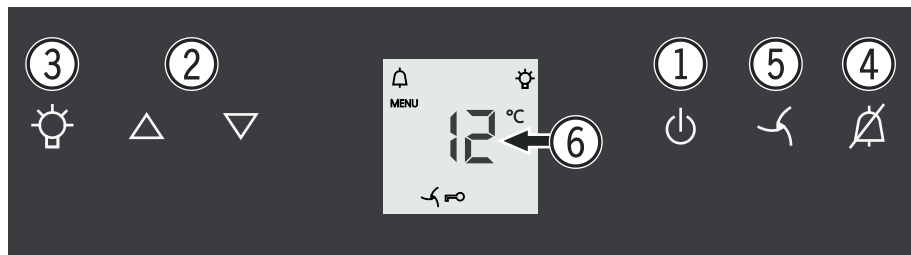

Operating and control elements


The electronic control panel has the new "**touch capacitance technology**". Any function can be activated by a fingertip touching the corresponding icon.



- ① On/Off button (switching the appliance on and off)
- ② Temperature setting buttons
- ③ Interior light On/Off button
- ④ Audible warning On/Off button
- ⑤ Fan switch
- ⑥ Temperature display

Symbols in the display


-  Alarm (symbol flashes if the temperature inside the appliance is too high or too low)
-  The interior fan runs constantly
-  Child lock is activated
-  The interior light is switched on constantly

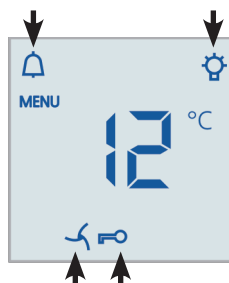


Switching the appliance on and off

Switching the appliance on

Press the  button until the temperature display lights up.

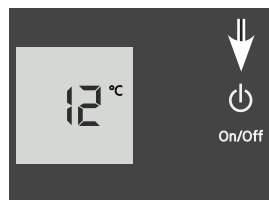

Switching the appliance off

Keep the  button pressed for approx. 3 seconds so that the temperature display goes out.


Setting the temperature

To reduce the temperature

Press the  button.

To increase the temperature

Press the  button.

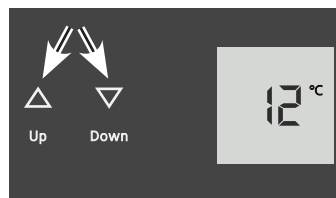

- While you are entering the temperature, the set temperature will flash on the display.
- You can change the settings in increments of 1°C briefly pressing the button again.
- The electronic controls will switch over automatically about 5 seconds after the last time you pressed the button, and the actual temperature will be displayed.

The temperature can be set at between +5°C and +20°C.

Fan switch


Thereby a climate which corresponds to that of a wine cellar is achieved inside the appliance. Corks are prevented from drying out due to an increased level of humidity.

Switching on

Press the  button. The  symbol will light up.

Switching off

Press the  button again. The  symbol will go out.

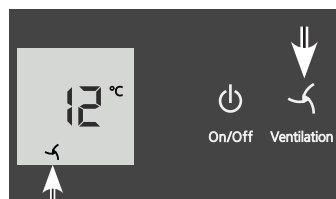



Audible warning signal

The audible warning signal helps to protect your wines against excessive temperatures.


It sounds when the door has been left open for longer than 60 seconds.

It sounds when the interior gets too warm or too cold.

The temperature display will also flash. The  symbol lights up.

The audible warning device is switched off by pressing the  button.

The temperature display will continue to flash until the cause of the alarm has been rectified.

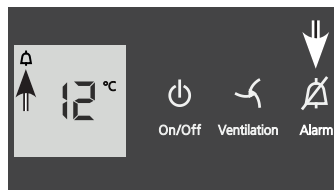

Interior light

The interior light is fitted on the inside at the top.


The interior light can be switched on and off using the **Light** button.

The  symbol lights up when the light is switched on.


Caution - class 1M laser radiation. When cover is removed, do not look directly at light through optical instruments.

The lighting may only be replaced by the customer service technician or by competent skilled personnel!

Furthermore, the brightness of the lighting can be adjusted.



Press and hold the  button and at the same time press the temperature setting buttons to increase or decrease the brightness.

▽ = darker , △ = brighter

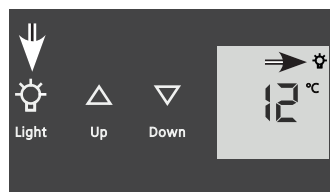

Setup mode



  




The following functions can be activated in setup mode:

 = child lock,  = display brightness








= Child lock

The child lock is designed to protect the appliance from being switched off accidentally.

Activating the child lock



- Activate setup mode by pressing the  button for 5 seconds.
 - The display reads .
- Press the  button.
 - The display reads .
- Press the  button again.
 - The  symbol will light up to indicate that the child lock is activated.
- Exit setup mode by pressing the  button.

Deactivating the child lock

- Activate setup mode by pressing the  button for 5 seconds.
 - The display reads .
- Press the  button.
 - The display reads .
- Press the  button again.
 - The  symbol will go out, indicating that the child lock is deactivated.
- Exit setup mode by pressing the  button.

h = Display brightness

Adjusting the display brightness

- Activate setup mode by pressing the  button for 5 seconds.
- Press the  button until **h** appears in the display.



Press the  button.

- The display reads **h 5**.

- Press the   buttons and set the brightness between

h 0 = minimum and

h 5 = maximum.

- When you reach the desired level, press the  button.
- Exit setup mode by pressing the  button.
- Close the door. The new setting will be activated after about 1 minute.

Equipment

Wooden shelves

The shelves are designed for the horizontal storage of wine bottles. This prevents the corks from drying out.

Accessories drawer

Accessories such as corkscrews etc. can be kept in the bottom drawer.

The shelves and drawer can be removed by simply pulling them towards you. To do this, the door must be open at least 90°.



Air exchange with activated charcoal filter


The way in which wines continue to mature depends on the ambient conditions. The quality of the air is therefore decisive for preserving the wine.

To guarantee optimum air throughput, the appliance is fitted with an activated charcoal filter at the top of the rear wall.

We recommend that you replace the illustrated filter once a year. Filters can be obtained from your dealer.

Changing the filter:

The filter can be removed by depressing the recesses on the left and right with a small screwdriver.

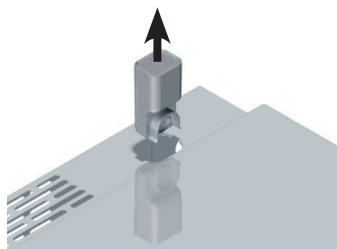


Storing wine

Four bottles can be stored side by side on a wooden shelf.



Tall wine bottles can also be stored crossways on the wooden shelves.

To ensure stable storage of the bottles, click the retaining plates provided onto the middle slat of the wooden shelf.

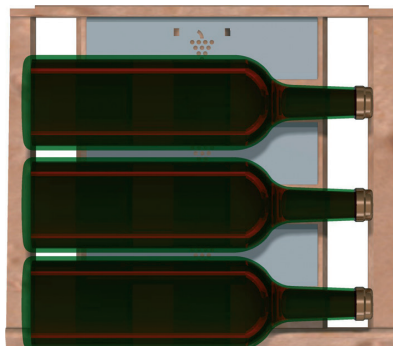

Defrosting

The appliance defrosts automatically.

Cleaning

Before cleaning, always switch off the appliance. Disconnect from the mains or remove/unscrew the fuse.

- Clean the side panels and door surfaces with a clean and soft cloth. If necessary, use a moist cloth (water + detergent). Alternatively, use a micro-fibre cloth.
- Clean the inside of the appliance, except the wooden grid shelves, with lukewarm water and a little detergent. Do not use abrasive or acid cleaners or chemical solvents.

Do not use steam cleaners because of the risk of injury and damage.

- Ensure that no cleaning water penetrates into the electrical components or ventilation grille.
- Do not damage or remove the type plate on the inside of the appliance. It is very important for servicing purposes.

Shutting your appliance down

If your appliance is to be shut down for any length of time, switch it off and disconnect the plug or switch off or unscrew the fuse. Clean the appliance and leave the door open in order to prevent unpleasant smells.

The appliance complies with the relevant safety regulations and EU Directives 2014/30/EU and 2014/35/EU.

Malfunctions


- **F1 appears in the display.**
 - The appliance has suffered a fault. Contact the customer service department.

You may be able to rectify the following faults by checking the possible causes yourself.

- **Appliance does not function:**
 - Is the appliance switched on?
 - Is the plug correctly fitted in the mains socket?
 - Is the fuse intact?
- **Loud running noise:**
 - Is the appliance set up firmly on the floor?
 - Does the appliance cause nearby items of furniture or objects to vibrate? Please note that noises caused by the refrigerant circuit cannot be avoided.
- **The temperature is not low enough:**
 - Is the temperature setting correct (see "Setting the temperature")?
 - Does the separately installed thermometer show the correct reading?
 - Is the ventilation system working properly?
 - Is the appliance set up too close to a heat source?

If none of the above causes apply and you cannot rectify the fault yourself, contact the nearest customer service department stating the type designation (1), service number (2) and appliance number (3) as indicated on the type plate.

The position of the type plate is shown in the section entitled **Description of the appliance.**

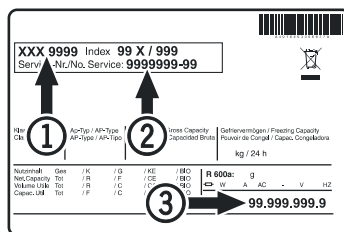

Safety instructions and warnings

- To prevent injury or damage to the unit, the appliance should be unpacked and set up by two people.
- In the event that the appliance is damaged on delivery, contact the supplier immediately before connecting to the mains.
- To guarantee safe operation, ensure that the appliance is set up and connected as described in these operating instructions.
- Disconnect the appliance from the mains if any fault occurs. Pull out the plug, switch off or remove the fuse.
- When disconnecting the appliance, pull on the plug, not on the cable.
- Any repairs and work on the appliance should only be carried out by the customer service department, as unauthorised work could prove highly dangerous for the user. The same applies to changing the mains power cable.
- Do not allow naked flames or ignition sources to enter the appliance. When transporting and cleaning the appliance, ensure that the refrigerant circuit is not damaged. In the event of damage, make sure that there are no ignition sources nearby and keep the room well ventilated.
- Do not stand on the plinth, drawers or doors or use them to support anything else.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities or lack of experience and knowledge unless they have been given initial supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.
- Avoid prolonged skin contact with cold surfaces or chilled/frozen food. This could cause pain, numbness and frostbite. In the case of prolonged skin contact, protective measures should be taken, e.g. gloves should be worn.
- Do not consume food which has been stored for too long, as it could cause food poisoning.
- Do not store explosives or sprays using combustible propellants such as butane, propane, pentane etc. in the appliance. Electrical components might cause leaking gas to ignite. You may identify such sprays by the printed contents or a flame symbol.
- Do not use electrical appliances inside the appliance.
- If you have a lockable appliance, do not keep the key near the appliance or within reach of children.
- The appliance is designed for use in enclosed areas. Do not operate the appliance outdoors or in areas where it is exposed to splash water or damp conditions.
- The LED light strip illuminates the interior of the appliance. It is not suitable for lighting a room.
- When transporting or operating the appliance at an altitude of more than 1500 m above sea level, the glass pane in the door can break due to the reduction in air pressure. Broken fragments are sharp-edged and can cause serious injury.

Wall mounting

The appliance can be wall-mounted. There are two mounting holes 1 at the back of the appliance

Make sure the wall and fastenings can withstand the weight of the appliance when fully loaded. The empty appliance weighs 31 kg.

Important!

To ensure sufficient ventilation through the ventilation slots, the four wall spacers 2 must always be inserted, regardless of whether the appliance is wall-mounted or standing on the floor against a wall.

Simply insert the spacers in the openings provided.

