



## Many thanks for your trust.

Congratulations on your purchase of this cigar storage unit. In buying this product, which is distinguished by its perfect user-friendliness, impeccable reliability and high quality, you have chosen a top class appliance. We hope that you enjoy your new cigar storage unit - and that you get a lot of pleasure from your exclusive cigars.

### Optimum humidity and temperature are key.

The very best humidors keep cigars at an even and constant relative humidity. Experts put the ideal level at 68-75% at an interior temperature of between 16 and 20°C. These climatic conditions allow the characteristic flavours of the cigar to unfold, the cigar will burn evenly and your enjoyment of the cigar and its taste will be enhanced. With the Liebherr cigar storage unit you can ensure constant humidity and a constant temperature - and control each one individually.

### Naturally Spanish cedarwood.


The interior fittings of the Liebherr cigar storage unit are made of Spanish cedarwood. This top quality wood is used for the shelves and presentation boxes. Spanish cedarwood is used because it ensures an even climate inside the appliance, it helps the cigars to mature and its aroma enhances the unique flavour of exclusive cigars.

## EPREL database

As from 1 March 2021, information about energy labelling and ecodesign requirements will be available in the European product database (EPREL). You can access the product database using the following link: <https://eprel.ec.europa.eu/>. You will be asked to enter the model identifier. You will find the model identifier on the type plate.


Inhalt	Seite
Setting up .....	22
Range of appliance use .....	22
Dimensions.....	2
Electrical requirement .....	23
Operating and control elements.....	23
Switching on for the first time .....	24
Setting the temperature .....	24
Adjusting the humidity.....	25
Lighting .....	25
Audible warning signal .....	26
Control elements.....	26
Setup mode .....	27
Equipment .....	29
Alternative interior layouts.....	30
Cleaning .....	32
Malfunctions .....	33
Safety instructions and warnings .....	34
Disposal notes .....	35
Wall mounting .....	35
Shutting your appliance down.....	35

Description of appliance and equipment

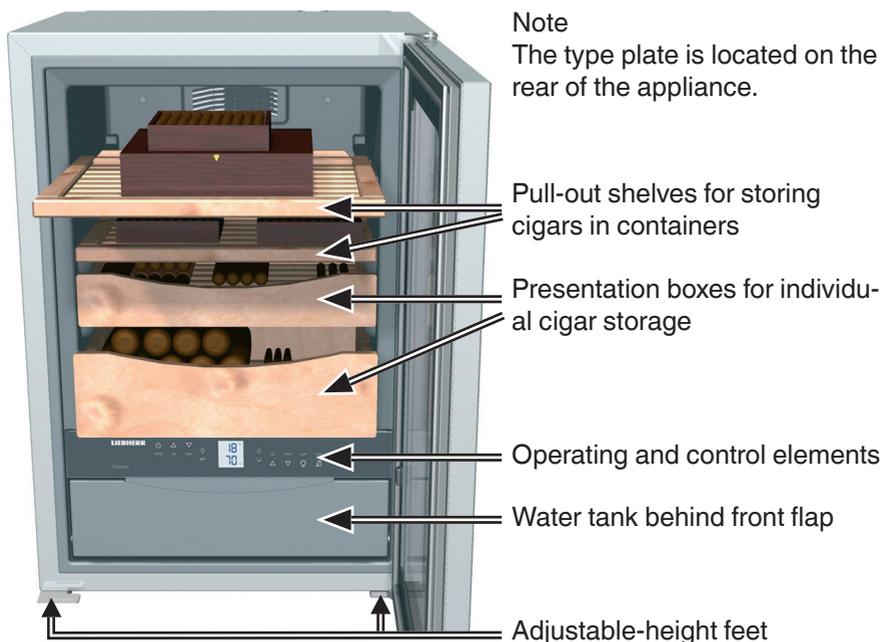

## Setting up

- Avoid locating the appliance in direct sunlight or near heat sources such as an oven or a radiator.
- The floor should be level and even. You can compensate for an uneven floor by adjusting the adjustable feet.
- Please make sure the appliance is properly ventilated. The ventilation slots must not be covered!
- Standard EN 378 specifies that the room in which you install your appliance must have a volume of 1 m<sup>3</sup> per 8 g of R 600a refrigerant used in the appliance, so as to avoid the formation of inflammable gas/air mixtures in the room where the appliance is located in the event of a leak in the refrigerant circuit. The quantity of refrigerant used in your appliance is indicated on the type plate of the appliance.
- The appliance is set to operate within specific ambient temperature limits according to its climate rating. These temperature limits should not be exceeded. The appliance has the following climate rating: N = +16°C to +32°C.
- When installing two appliances next to each other, always leave a gap of 50 mm to prevent condensation forming in the gap.

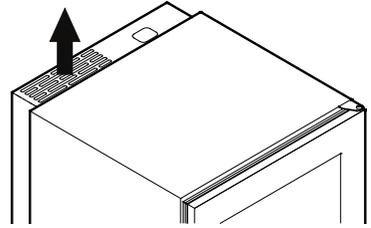

## Range of appliance use


This appliance is designed for storing cigars only.

The appliance is not suited for storing and cooling pharmaceuticals, blood plasma, laboratory preparations or similar substances and products subject to the Medical Devices Directive 2007/47/EC.

Any misuse of the appliance may result in damage to or spoilage of the stored goods.

Furthermore, the appliance is unsuited for use in areas exposed to an explosion hazard.

## Dimensions

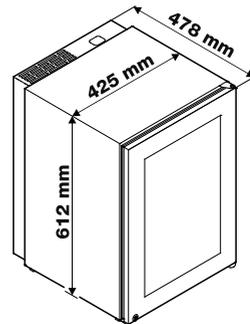


## Electrical requirement

Power supply (AC) and voltage at the operating point must comply with the details on the type plate. The type plate is located on the rear of the appliance. The socket must be fused with a 10 A fuse or higher, it must be away from the rear of the appliance and must be easily accessible.

## Operating and control elements

The electronic control panel has the new "touch capacitance technology". Any function can be activated by touching the corresponding icon.

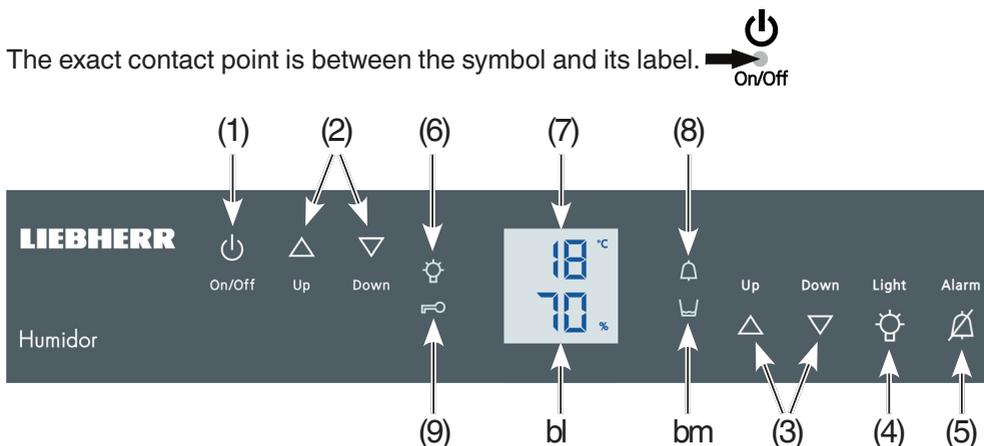

### Operating elements

- ① Appliance ON/OFF
- ② Temperature setting buttons (for setting the interior temperature)
- ③ Humidity setting buttons (for setting the interior humidity)
- ④ Interior light ON/OFF
- ⑤ Mute alarm

### Control elements

- ⑥ Interior light On LED
- ⑦ Temperature display
- ⑧ Alarm LED (flashes to indicate a malfunction)
- ⑨ Child lock LED
- ⑩ Humidity display

**bl** Top up water tank

## Switching on for the first time

Before switching on the appliance, fill the water tank with 1 litre of distilled water.

Use distilled water only!

Fold down the front flap completely and if necessary slide it into the appliance as far as it will go. Lift the water tank slightly, remove and fill with water.

Replace the water tank, sliding it in as far as it will go. Pull out the front flap completely and fold upwards at a 90° angle.

To switch on: Press the On/Off button. The display will flash.

The appliance will take 24 hours to reach the correct level for storing cigars (temperature, humidity).

The factory setting is +18°C and 70% humidity.

To switch off: Press the On/Off button for 3 seconds until the display goes dark.



## Setting the temperature

To reduce the temperature:  
Press the Down button.

To increase the temperature:  
Press the Up button.

- While you are entering the temperature, the set temperature will flash on the display.

- The electronic controls will switch over automatically about 5 seconds after the last time you pressed the button, and the interior temperature will be displayed. The temperature can be set between +16°C and +20°C.



## Adjusting the humidity

To reduce the humidity:  
Press the Down button.

To increase the humidity:  
Press the Up button.

- While you are setting the humidity,  
the display will flash.

- About 5 seconds after the button was last pressed, the actual interior humidity will be displayed.


The humidity can be adjusted between 68% and 75%.



## Lighting

The light is integrated into the door frame and can be switched on and off by pressing the Light button.


The  LED lights up when the light is operational.

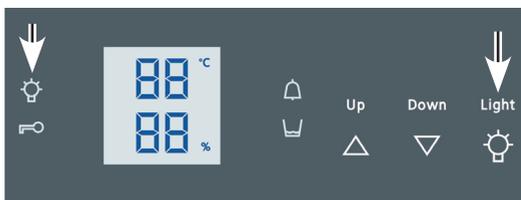

The brightness of the light can also be adjusted.

- Press and hold the Light button and at the same time press the humidity setting buttons to increase or decrease the brightness.

Down = darker,  
Up = brighter.

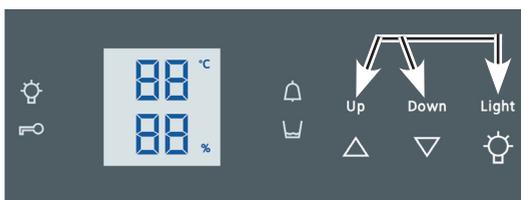

## Audible warning signal


The audible warning signal sounds in the event of a malfunction.

It will always sound when the door has been left open for longer than 60 seconds.

It will also sound if the interior becomes too cold or too warm or if the humidity is too high or too low.

The corresponding display will also flash. The  LED will light up.

Stop the signal by pressing the Alarm button.

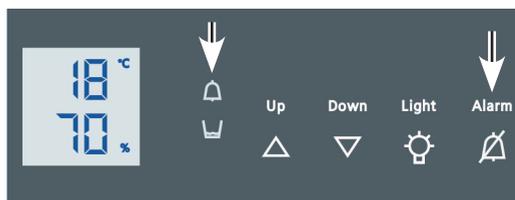

## Control elements

 LED lights up when the lighting is operational.

 LED lights up when the child lock is active.

 LED flashes when the temperature or humidity inside the appliance is too high or too low.

 LED lights up when the water tank needs topping up.



### Important!

This alarm will activate when the water level drops to 400 ml (sufficient to allow the appliance to run properly for another 6 weeks). When topping up the water, always remove any impurities such as cigar leaves.

If the water tank is very dirty, clean it and refill with fresh water.

## Setup mode

The following functions can be activated in setup mode:

 = Child lock

 = Display brightness

 = Child lock

The child lock is designed to protect the appliance from being switched off accidentally.

### Activating the child lock

- Activate setup mode by pressing the  button for 5 seconds.

- The display reads  

- Press the  button.

- The display reads  

- Press the  button again.

- The  symbol will light up to indicate that the child lock is activated.

- Exit setup mode by pressing the  button.

### Deactivating the child lock

- Activate setup mode by pressing the  button for 5 seconds.

- The display reads  

- Press the  button.

- The display reads  

- Press the  button again.

- The  symbol will go out, indicating that the child lock is deactivated.

- Exit setup mode by pressing the  button.

**h** = Display brightness

Adjusting the display brightness

- Activate setup mode by pressing the  button for 5 seconds.

- Press the  button until **h** appears in the display.

Press the  button.

- The display reads



- Press the   buttons and set the brightness between

**h 0** = minimum and

**h 5** = maximum.

- When you reach the desired level, press the  button.
- Exit setup mode by pressing the  button.
- Close the door. The new setting will activate after about 1 minute.

## Equipment


### Air exchange with activated charcoal filter

To guarantee optimum air throughput, the appliance is fitted with an activated charcoal filter at the top of the rear wall.

We recommend that you replace the illustrated filter once a year. Filters can be obtained from your dealer.

#### Changing the filter:

The filter can be removed by depressing the recesses on the left and right with a small screwdriver.

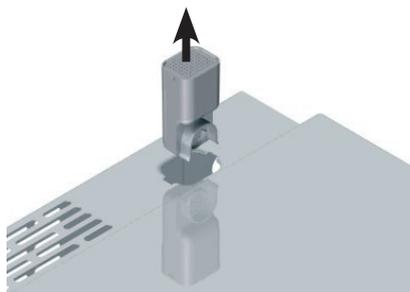

### Spanish cedarwood shelves

The presentation boxes are designed for storing cigars individually.

The other shelves are for storing cigars in various containers or boxes.

All shelves are fitted with a pull-out stop and can be pulled out by 100 mm.

To remove completely, pull the shelf out as far as it will go, lift slightly at the front and remove. The door must be open at an angle of at least 90°.

Note: To ensure optimum operation, there must always be at least two cedarwood shelves or boxes inside the appliance, one of which must always be inserted immediately above the control panel.



## Alternative interior layouts

The different fitting layouts for optimum cigar storage are illustrated and described below.

### Alternative 1

(as supplied)

Use this layout to store large numbers of cigars individually in the presentation boxes and small cigar boxes on the shelves.



### Alternative 2

(with top shelf removed)

Use this layout to store large cigar boxes.



### Alternative 3

(with both presentation boxes removed)

This layout is only suitable for storing large cigar boxes (see figure).



### Important!

1. To ensure constant humidity, there must be at least two pull-out shelves or presentation boxes in the appliance at all times.
2. To ensure adequate air circulation there must always be a shelf or presentation box immediately above the control panel.
3. The pull-out shelves should only be used for storing cigar boxes. Do not use them for storing individual cigars!

# Cleaning

Before cleaning, always switch off the appliance. Disconnect from the mains or switch off or unscrew the fuse.

- Remove all cigars from the appliance and store them in a suitable place.
  - Remove all shelves and presentation boxes.
  - Clean the inside, the door seal and the inside of the glass with a clean, damp cloth.  
Important: Never use detergents or other substances that emit odours.
  - Always keep the door closed when cleaning the outside of the appliance. Make sure no detergent odours penetrate into the appliance.
  - Clean the side panels and door surfaces with a clean and soft cloth. If necessary, use a moist cloth (water + detergent). Alternatively, use a microfibre cloth.
- 
- Fold down the front flap, lift the water tank slightly and remove, as illustrated.  
This tray can be washed with water and detergent either manually or in a dishwasher. After cleaning, always make sure the tray is thoroughly rinsed with clean water before replacing.
  - Dry the interior and the water tank thoroughly with a clean cloth and replace the water tank.
  - Switch the appliance back on and replace the cigars.
  - Do not damage the type plate on the back of the appliance. It is very important for servicing purposes.





## Safety instructions and warnings

- To prevent injury or damage to the unit, the appliance should be unpacked and set up by two people.
- In the event that the appliance is damaged on delivery, contact the supplier immediately before connecting to the mains.
- To guarantee safe operation, ensure that the appliance is set up and connected as described in these operating instructions.
- Disconnect the appliance from the mains if any fault occurs. Pull out the plug, switch off or remove the fuse.
- When disconnecting the appliance, pull on the plug, not on the cable.
- Any repairs and work on the appliance should only be carried out by the customer service department, as unauthorised work could prove highly dangerous for the user. The same applies to changing the mains power cable.
- Do not stand on the plinth, drawers or doors or use them to support anything else.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities or lack of experience and knowledge unless they have been given initial supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.
- If you have a lockable appliance, do not keep the key near the appliance or within reach of children.
- Do not use electrical appliances inside the appliance.
- Do not damage the refrigerant circuit pipes.
- Do not allow naked flames or ignition sources to enter the appliance. When transporting and cleaning the appliance ensure that the refrigerant circuit is not damaged. In the event of damage, make sure that there are no ignition sources nearby and keep the room well ventilated.

The appliance complies with the relevant safety regulations and EU Directives 2014/30/EU and 2014/35/EU.

All types and models are subject to continuous improvement and the manufacturer therefore reserves the right to make modifications to the shape, equipment and technology.

## Disposal notes

- Keep packaging materials away from children - polythene sheets and bags can suffocate!
- Please return the packaging material to an official collection point.

Your old appliance: This contains some reusable materials and should be disposed of properly - not simply with unsorted household refuse.



- Disable discarded appliances by removing the plug and cutting through the connection cable. Render the catch unusable so that children cannot become trapped inside.
- Ensure that the refrigerant circuit is not damaged when the appliance that is no longer needed is taken away for disposal.
- Details of the refrigerant used can be found on the type plate.
- Appliances which are no longer needed must be disposed of in a professional and appropriate way, in accordance with the current local regulations and laws.

## Wall mounting


The appliance can be wall-mounted. There are two mounting holes 1 at the back of the appliance

Make sure the wall and fastenings can withstand the weight of the appliance when fully loaded. The empty appliance weighs 31 kg.

### Important!

To ensure sufficient ventilation through the ventilation slots, the four wall spacers 2 must always be inserted, regardless of whether the appliance is wall-mounted or standing on the floor against a wall.

Simply insert the spacers in the openings provided.

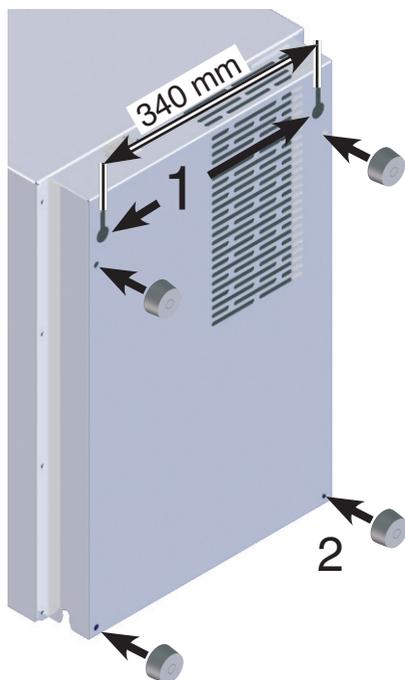

## Shutting your appliance down

If your appliance is to be shut down for any length of time, switch it off and disconnect the plug or remove the fuse. Clean the appliance and leave the door open in order to prevent unpleasant smells.

