



Installation Guide

Quality, Design and Innovation





home.liebherr.com/fridge-manuals



LIEBHERR

General safety instructions

Contents


1	General safety instructions	2
2	Installation conditions	3
2.1 2.2	LocationInstalling multiple appliances	3
2.3	Mains connection	4
3	Appliance dimensions	4
4 4.1	Recess dimensions	5
5 5.1	Custom panel weights	7
6 6.1 6.2	Water connection* Dimensions for the water connection Water pressure	7
7.2	Transporting appliance	7
8	Transporting the appliance	7
9	Unpacking the appliance	7
•		
10 10.1	Setting up the appliance	8
11	Disposing of packaging	8
12	What the symbols mean	8
13 13.1	**** freezer compartment door* Moving the door hinge	9
14	Reversing the door	9
15 15.1 15.2	Connecting the appliance to the water supply* Connecting the hose	11 11 11
16	Installing the appliance in the recess	12
17.1 17.2 17.3	Cabinet fronts Dimensions Mounting the cabinet front(s) Setting the clearance to avoid collision	18 18 19 19
18 18.1	Water tank Inserting the water tank	20
19 19.1	Water filter Inserting the water filter	20
20	Connecting device	20

The manufacturer is continually working on the further development of all types and models. Please be aware that we reserve the right to make changes to the shape, equipment and technology.

	Symbol	Explanation
	Read instruc	
		Please read tions careful of your new

Read instructions


Please read the information in these instructions carefully to understand all of the benefits of your new appliance.

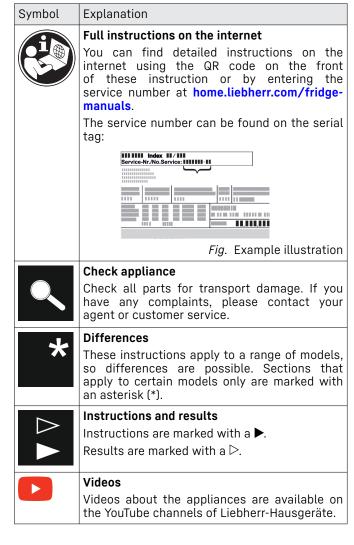

1 General safety instructions

- Please keep this assembly manual in a safe place so you can refer back to it at any time.
- If you pass the appliance on, please hand this assembly manual to the next user.
- Read this assembly manual carefully before installation and use to ensure safe and correct use of the appliance. Follow the instructions, safety instructions and warning messages included at all times. They are important for ensuring you can operate and install the appliance safely and without any problems.
- First read the general safety instructions in the "General safety instructions" section of the operating instructions, which accompany these installation instructions, and follow them. If you cannot find the operating instructions, you can download the operating instructions from the internet by entering the service number at home.liebherr.com/fridge-manuals. The

 service number can be found on the serial



tag:

 Observe the warning messages and other detailed information in the other sections when installing the appliance:

<u> </u>	DANGER	identifies a situation involving direct danger which, if not obviated, may result in death or severe bodily injury.
À	WARNING	identifies a dangerous situation which, if not obviated, may result in death or severe bodily injury.
<u> </u>	CAUTION	identifies a dangerous situation which, if not obviated, may result in minor or medium bodily injury.
	NOTICE	identifies a dangerous situation which, if not obviated, may result in damage to property.
	Note	identifies useful instructions and tips.

2 Installation conditions



WARNING

Fire hazard due to dampness!

If live parts or the mains lead become damp this may cause short circuits.

► The appliance is designed for use in enclosed areas. Do not operate the appliance outdoors or in areas where it is exposed to splash water or damp conditions.

Intended use

- Install and use the appliance in indoor spaces only.
- Use the appliance only once installed.

2.1 Location



→ WARNING

Leaking coolant and oil!

Fire. The coolant contained in the appliance is eco-friendly, but also flammable. The oil contained in the appliance is flammable. Escaping coolant and oil can ignite if the concentration is high enough and in contact with an external heat source.

- Do not damage the pipelines of the coolant circuit and the compressor.
- If the appliance is installed in a very humid environment, condensation can build up on the outside of the unit.

Always ensure good airlow and ventilation in the installation location.

The more refrigerant there is in the appliance, the larger the space that it is installed in must be. If the space is too small, any leak may create a flammable mixture of gas and air. For every 8 g of refrigerant, the installation space must be at least 1 m³. Information regarding the coolant can be found on the serial tag inside the appliance.

2.1.1 Supporting floor

- The floor of the installation site must be horizontal and even.
- If you are installing the unit in a cabinet standing on an uneven floor: level the cabinet.

2.1.2 Positioning

- Do not install appliance in direct sunlight or next to an oven, radiator or similar.
- Only fit the appliance into solid kitchen units.

2.2 Installing multiple appliances

NOTICE

Risk of damage due to condensate!

▶ Do not install the appliance directly alongside a further refrigerator/freezer.

NOTICE

Risk of damage due to condensation!

 Do not install the appliance directly above another refrigerator or freezer.

These appliances are designed for a variety of installation options. Combine appliances only if the appliance is suitable. The following table shows the installation options by model:

Installation option	Model
Single	All models
Side-by-side (SBS)	Model names starting with S .
Stacked	Models up to a maximum recess height of 880 mm and with a heated cover can be "stacked".
	Upper appliance: up to a maximum recess height of 140 mm

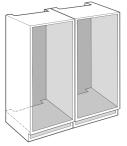


Fig. 1

Build each appliance into a separate recess.

Appliance dimensions

2.3 Mains connection



WARNING

Danger of fire due to incorrect positioning!

If the mains cable or plug touches the back of the appliance, the vibration can damage the mains cable or the plug resulting in a short circuit.

- ► Make sure the mains cable is not trapped under the appliance when you position the appliance.
- ► Stand the appliance so that it is not touched by connectors or main cables.
- ► Do not connect any appliances to sockets in the area of the back of the appliance.
- ▶ Do **not** place and operate multi-sockets/power distributors and other electronic devices (such as halogen transformers) at the back of the appliances.



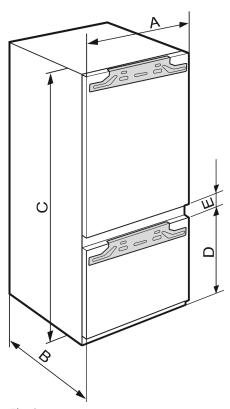


Fig. 2

	A (mm)	B (mm)	C (mm)	D (mm)	E (mm)
ICB/c/bi/ci 512				549	
IC/c/d/e 513				695	
S/ICN/c/d/e/h 513					
S/ICN/ci/di/cx 513					
ICBN/ci/di/cx 513	559	546	1770		15
ICBN/h 513					
IC/B/N/bsci51					
IKG 51Ve03 / IKGN 51Vc03 / IKGN 51Ve03					


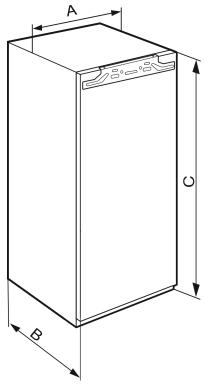


Fig. 3

		- ()	0()
	A (mm)	B (mm)	C (mm)
IFNd 35			712
IFNbi/ci 35			, 12
IR/bi/ci 39			
IR/c/d/e 39			
SIBai 39			872
SIBa20i 39			
S/IF/N/d 39			
S/IFN/ci 39	-		
IRd 40			
IRBc 40			1022
IRBbi 40			
IR/d/e 41			
IRB/bx/c/d/i			
41 IRB/bi/ci/ 41			1213
IRBbsbi41			
SIFNdi 41			
IRd 45	_		
IRBc 45			
IRB/bi/ci 45	559	546	
IRBbx 45			1395
IRBbsbi45			
SIFNdi 45			
IRBdi 48			1572
IR/d/e 51			
IRD/di 51			
IRB/d/h 51			
IRB/ci/h/cx			
51 IRBP/ci/di/cx			
51			
IRB/P/bsci/51			1770
SIFN/e/h 51			
SIFN/di/dx 51			
SIFNbsdi51			
IK 51Ve00 / IK			
51Ve01 / IKB 51Vc50i / IKB			
51Vc50i / IKB			

4 Recess dimensions

4.1 Internal dimensions

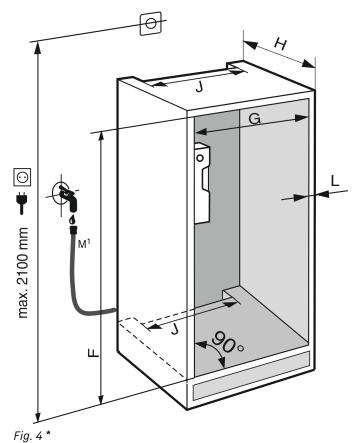

M¹): Only for IRBci 5180 / 5182, ICBN/ci/cx/di/h 5163 / 5173 / 5183, ICN/ci/cx 5173, SIFN/di/dx/h 5188*

Recess dimensions

	F (mm)*	G (mm)*	H (mm)*	J (mm)*	L (mm)*	
IFNd 35 IFNbi/ci 35	714 -730					
IR/bi/ci 39 IR/c/d/e 39 SIBai 39 SIBa20i 39 S/IF/N/d 39 S/IFN/ci 39	874 – 890					
IRd 40 IRBc 40 IRBbi 40	1024 - 1040	560 – 570	min. 550,			
IR/d/e 41 IRB/bx/c/d/i 41 IRB/bi/ci/41 IRBbsbi 41 SIFNdi 41	1216 – 1236			recom- mended 560	min. 500	max. 19
IRd 45 IRBc 45 IRB/bi/ci 45 IRBbx 45 IRBbsbi 45 SIFNdi 45	1397 – 1413					
IRBdi 48	1574 – 1590					

	F (mm)*	G (mm)*	H (mm)*	J (mm)*	L (mm)*
IR/d/e 51 IRD/di 51 IRB/d/h 51 IRB/ci/h/ cx 51 IRBP/ci/di /cx 51 IRBP/ci/di /cx 51 SIFN/e/h 51 SIFN/di/d x 51 SIFNbsdi 51 ICB/c/bi/ ci 512 IC/c/d/e 513 S/ICN/c/d/e/h 513 S/ICN/ci/di/cx 513 ICBN/ci/di/cx 513	1772 <i>-</i> 1788	560 - 570	min. 550, empfohl en 560	min. 500	max. 19

The specified energy consumption was determined with a kitchen unit depth of 560 mm. The appliance will work properly at a kitchen unit depth of 550 mm, but at a slightly higher energy consumption.

- ► Check the wall thickness of adjacent cabinets: It must be at least 16 mm.
- ▶ Only fit the appliance into stable, solid kitchen units.
- Secure the unit against tipping.

 Align the cabinets with a spirit level and a try square. If necessary, level them by putting something underneath them.
- Make sure floor and the side panels of the cabinet are at right angles to each other.

5 Custom panel weights

5.1 Weight

NOTICE

An excessively heavy custom panel can potentially cause damage!

If the custom panel is too heavy, damage to the hinges cannot be ruled out, which may compromise the functionality of the unit.

▶ Before fitting the custom panel, ensure the custom panel does not exceed the permissible weight.

Recess height (mm)	Maximum weight of custom panel (kg)
720	16
880	16
1020	13
1220	19
1400	21
1580	22
1780	26

Single-door fridges and freezers

6 Water connection*

If your appliance has a fixed water connection, a hose is supplied with it.

Note

You can purchase a hose of a different length as an accessory.

Overview of dimensions for the water connection:	(see 6.1 Dimensions for the water connection)
Requirements for the water pressure:	(see 6.2 Water pressure)
Make the water connection:	(see 15 Connecting the appliance to the water supply*)

6.1 Dimensions for the water connection

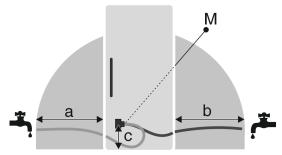


Fig. 5

- (a) Maximum available hose length
- (b) Maximum available hose length
- (c) Distance of solenoid valve to floor
- (M) Solenoid valve

а	b	С
~ 1200 mm	~ 1200 mm	~ 55 mm

6.2 Water pressure

The water connection line and solenoid valve of the appliance are suitable for a water pressure of up to 1 MPa (10 bar).

To ensure that the appliance functions correctly (flow rate, ice cube size, noise level), maintain the following water pressure:

Water pressure:		
bar	MPa	
1.5 to 6.2	0.15 to 0.62	

Water pressure when using the water filter:		
bar	MPa	
2.8 to 6.2	0.28 to 0.62	

If the pressure is higher than 6.2 bar:

- ► Fit a pressure reducer.
- ► Make the water connection. (see 15 Connecting the appliance to the water supply*)

7 Transporting appliance

- ▶ On initial setup: Transport the appliance in its packaging.
- ► When transporting after initial setup (e.g. relocation): Transport the appliance unloaded.
- Transport the appliance upright.
- ▶ Use two people to transport the appliance.

8 Transporting the appliance

- ► Transport the appliance only in suitable packaging.
- ► Transport the appliance upright.
- ▶ Do not transport the appliance on your own.

9 Unpacking the appliance

Before you connect the appliance, report any damage immediately to the delivery company.

- ► Check the appliance and the packaging for damage during transport. Contact the supplier immediately if you suspect any level of damage.
- Remove all materials from the back or the side walls of the appliance that may prevent proper installation or ventilation.
- ▶ Remove all protective films from the appliance. Do not use sharp or pointed objects for this.
- ► Take the power cable from the rear of the appliance. Remove the cable brackets when you do this, otherwise there will be noise caused by vibrations!

10 Setting up the appliance



CAUTION

Risk of injury due to heavy appliance!

Have two people transport the appliance to its installation site.

Disposing of packaging



WARNING

Danger of injury and damage due to the appliance being unstable!

The appliance can topple over.

Secure the appliance as described in the instructions.



WARNING

Fire hazard and danger of damage!

► Do not place appliances emitting heat e.g. microwaves, toasters etc. on the appliance!

If possible, have the appliance installed in the kitchen unit by a professional.

Do not install the appliance on your own.

10.1 After installation

► Remove all transport safety components.


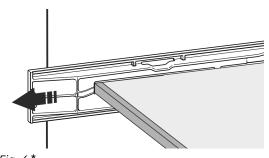


Fig. 6 *▶ Pull off the transport lock on the appliance door.

 

Clean the appliance (see User Guide, Cleaning the appliance).

11 Disposing of packaging



WARNING

Danger of suffocation due to packing material and plastic film!

▶ Do not allow children to play with packing material.


The packaging is made of recyclable materials:


- corrugated board/cardboard
- expanded polystyrene parts
- polythene bags and sheets
- polypropylene straps
- nailed wooden frame with polyethylene panel*
- ► Take the packaging material to an official collecting point.

12 What the symbols mean



Risk of injury here! Follow the safety notes!

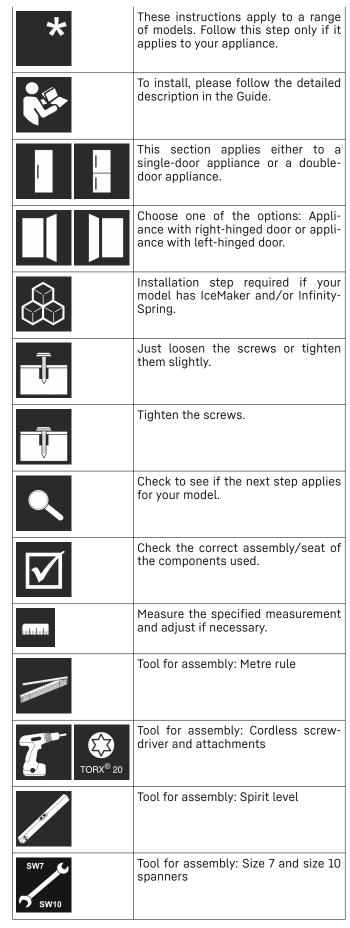

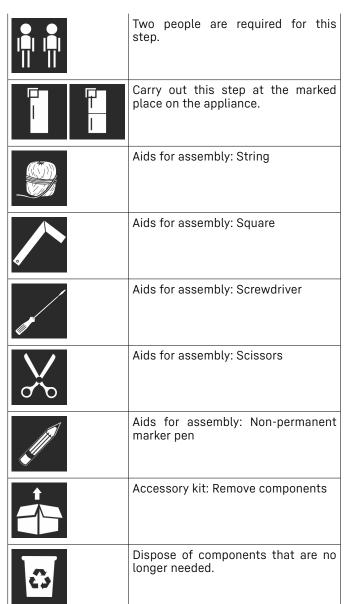

13 **** freezer compartment door*

It is very easy to reposition the hinge of the **** freezer compartment door if the main door hinge is swapped. If the main door of the appliance can be opened to more than 115° (1), you can open the freezer compartment without repositioning the hinge. If the opening angle (2) of the appliance door is less than this, the hinge must be repositioned.

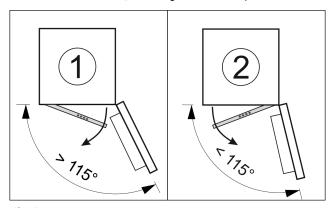


Fig. 7

13.1 Moving the door hinge

The slider for moving the door hinge is located on the back of the **** freezer compartment door at the bottom.

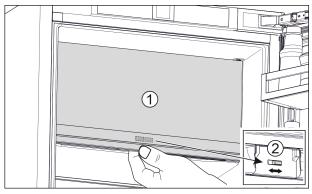


Fig. 8

- ► Close the **** freezer compartment door (1).
- ► Grab the **** freezer compartment door from below.
- ► Move the slider (2) either to the right or to the left.

14 Reversing the door

Tool







Fig. 9

NOTICE

Live parts!

Damage to electrical components.

▶ Disconnect the power plug before reversing the door.

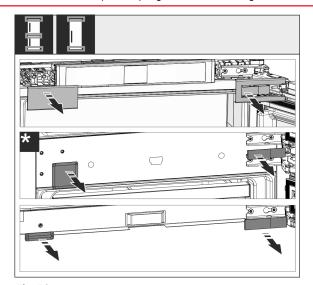


Fig. 10

▶ Remove covers.

Reversing the door

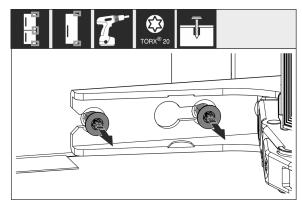


Fig. 11

▶ Loosen the screws on **all** hinges but do not remove them.

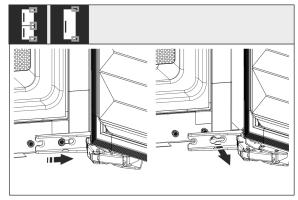


Fig. 12

Removing the door: Push the door forward and then out, unhang it and put it to one side.

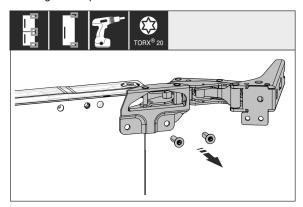


Fig. 13

► Unscrew all hinges and set aside together with the screws.

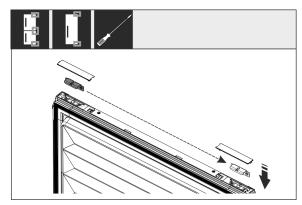


Fig. 14

► Loosen and shift the bracket at the top and bottom of the door. The bracket must be shifted so you can screw on the hinges.

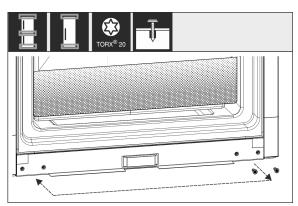


Fig. 15

► Shift the screws to fasten the hinge. Do not screw tightly after shifting – you need to hang the hinges later.

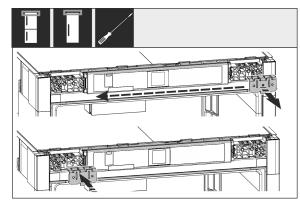


Fig. 16

► Move the fixing bracket to the opposite side.

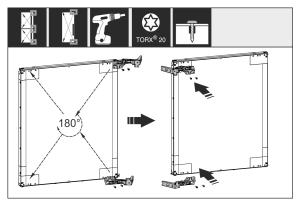


Fig. 17

► Turn all hinges 180° to the opposite side and screw firmly.

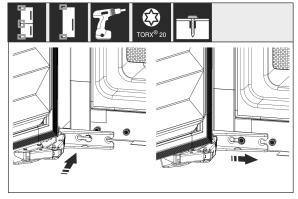


Fig. 18

- ▶ Refitting the door: Hang the door with its hinges and tighten the screws.
- ► Check all screws and retighten if necessary.

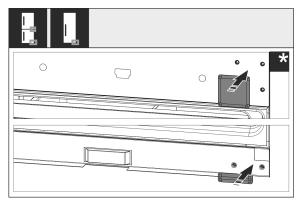


Fig. 19

► Reassemble the bottom and centre cover. Only replace the remaining covers after installing the appliance back into the cabinet.

15 Connecting the appliance to the water supply*

Make sure that the following requirements are fulfilled:

- ☐ The dimensions for the water supply connection are known and complied with. (see 6.1 Dimensions for the water connection)
- ☐ The correct water pressure is maintained. (see 6.1 Dimensions for the water connection)
- Water is supplied to the appliance via a cold water pipe which can withstand the operating pressure and is connected to the drinking water supply.
- □ All equipment and devices used to supply water must comply with the regulations in force in the respective country.
- ☐ The rear of appliance is accessible so that you can connect the appliance to the drinking water supply.
- ☐ The supplied hose is used. Old hoses have been disposed of.
- ☐ The hose connector contains a filter with a seal.
- □ There is a tap between the hose line and the domestic water connection so that you can turn off the water supply if necessary.
- □ The tap is not directly behind the appliance and is easily accessible. This way, you can push the appliance as far as possible into the cabinet recess and can quickly turn off the tap if necessary.



WARNING

Risk of electric shock from water!

- ▶ Before connecting to the water pipe: Disconnect the appliance from the mains.
- Before connecting to water supply lines: Shut off the water supply.
- Make sure that only qualified personnel connect the device to the drinking water supply.



WARNING

Risk of poisoning due to contaminated water!

Only connect to the drinking water supply.

15.1 Connecting the hose

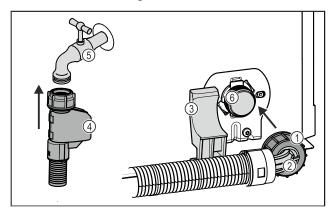


Fig. 20

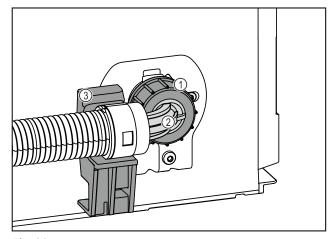


Fig. 20

- (1) Nut
- (2) Angled hose end
- (3) Bracket
- (4) Straight hose end
- **(5)** Tap
- (6) Solenoid valve: The solenoid valve is at the bottom on the back of the appliance. It has an R3/4 connecting thread.

NOTICE

Risk of damage from incorrect installation!

- ▶ Do not damage or kink the hose.
- Do not damage or kink the hose during installation in the cabinet recess.

Connecting the hose to the appliance:

- Position and hold the angled hose end Fig. 20 (2) horizontally on the bracket Fig. 20 (3).
- ▶ Screw on the nut *Fig. 20 (1)* on by hand until it is firmly in place.
- \triangleright The hose is connected to the appliance.

Connecting the hose to the tap:

- ► Connect the straight hose end Fig. 20 (4) to the tap Fig. 20 (5).
- \triangleright The hose is connected to the tap.

15.2 Checking the water system

Before you completely install the appliance in the cabinet recess, Liebherr recommends checking the water system for leaks

- ▶ Put in the InfinitySpring water tank. (see 18 Water tank)
- ► Put in the InfinitySpring water filter. (see 19 Water filter)
- Slowly turn on the tap.
- Check the hose, water feed and connections for leaks.
- The water system has now been checked for leaks.

 $\,\triangleright\,$ The water system is not leaking: You can install the appliance completely in the cabinet recess.

Note

InfinitySpring: Before the first use, you must put the InfinitySpring into operation. To do this you must bleed and clean the water system. (see Quick Start Guide or operating instructions)

IceMaker: Before the first use, you must clean the IceMaker. (see Quick Start Guide or operating instructions)

16 Installing the appliance in the recess

Tool



Fig. 21
Supplied assembly parts

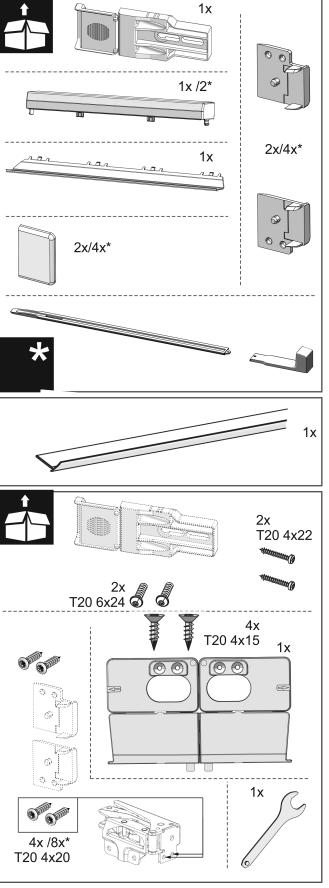


Fig. 22

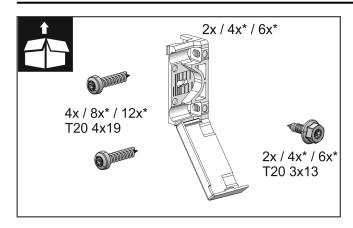


Fig. 23

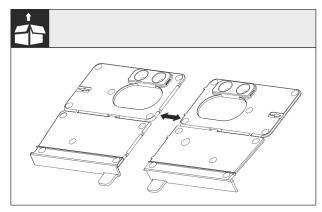


Fig. 24

Separate the floor mounting bracket Fig. 24 () at the perforation.

NOTICE

Correct installation depth of the appliance.

▶ Using the mounting bracket ensures the correct installation depth of the appliance.

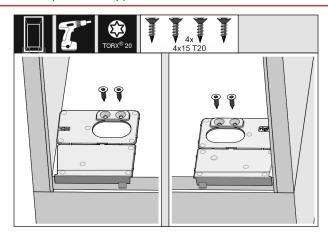


Fig. 25

► Screw the mounting brackets on the left and right of the recess floor, flush to the side wall.

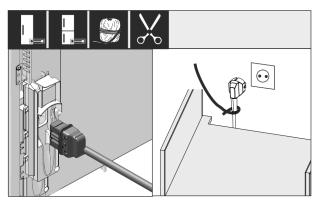


Fig. 26

- ► Remove the power cable from the package and plug it into the back of the appliance.
- ▶ Use a string to route the power plug cord to the accessible socket.

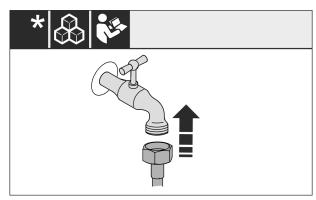


Fig 27

▶ If necessary, install the water connection at this point, following the instructions in the User Guide.*

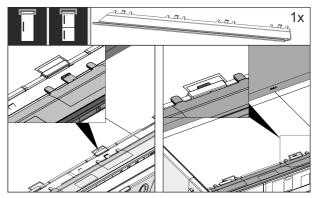


Fig. 28

▶ Insert the adapter panel on the top of the appliance. The panel can be moved to both sides.

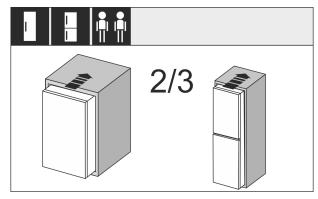


Fig. 29

▶ Insert the appliance 2/3 of the way into the recess.

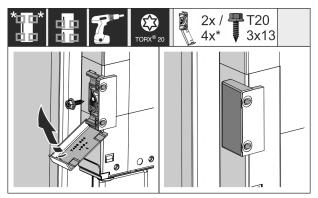


Fig. 30

- ➤ Fit the mounting bracket. Attach the mounting bracket at the height of the custom door panel handle. For a large door, use four mounting brackets.
- ► After assembly, fold the covers onto the bracket.


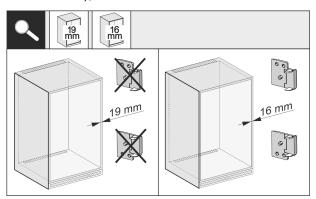



Fig. 31

Check whether the unit side wall is 16 mm or 19 mm thick.

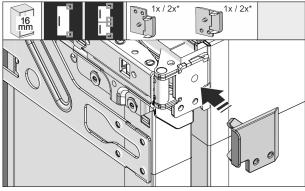

Fia. 32

- ▶ 16 mm thick unit side walls: Put a spacer on all hinges.
- ▶ 19 mm thick unit side walls: You do not need a spacer.

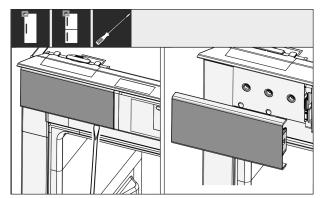

Fia. 33

► Use a screwdriver to loosen the cover at the top left and remove it.

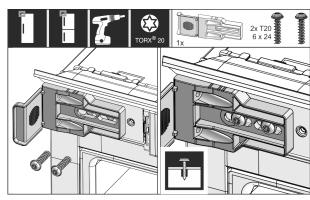


Fig. 34

► Loosely tighten the mounting bracket screw. The bracket should still be easy to move.

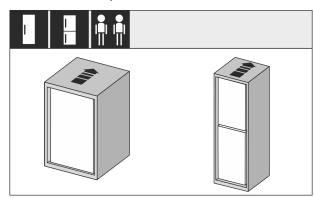


Fig. 35

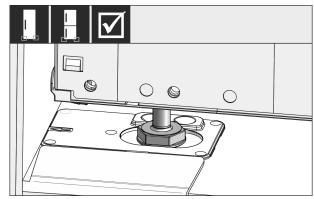


Fig. 36

▶ Push the appliance all the way into the unit recess. The adjustable feet must rest in the recesses in the brackets on both sides.

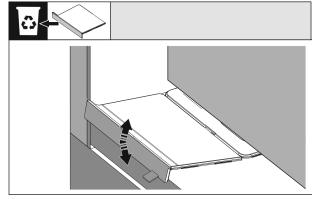


Fig. 37

Remove the floor mounting bracket stopper. Loosen the stopper by moving it and, if necessary, pull it off using pliers.

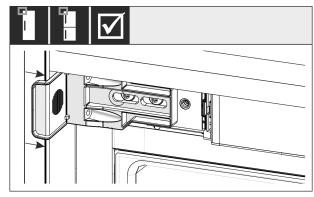


Fig. 38

► Check that the appliance is flush in the cabinet recess. The mounting bracket must be attached to the side wall of the cabinet recess.

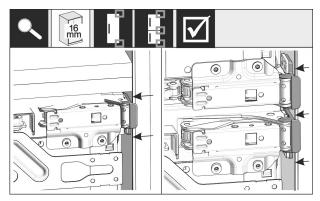


Fig. 39

Note

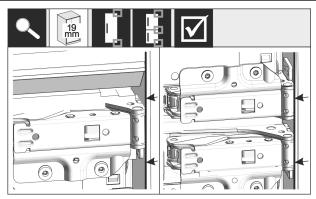


Fig. 40

▶ 19 mm thick unit side walls: Align the front of the hinges flush with the unit side wall.

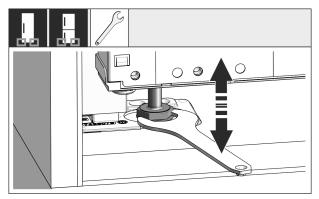


Fig. 41

► If necessary, use the adjustable feet to correct the tilt of the appliance.

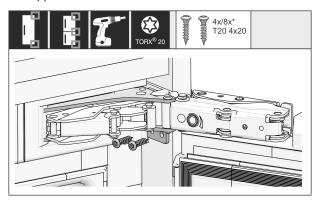


Fig. 42

► Screw on the appliance on the hinge side.

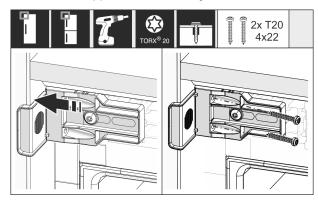


Fig. 43

- ▶ Move the bracket so it sits flush on the side wall of the cabinet recess.
- ► Tighten all the screws securely.

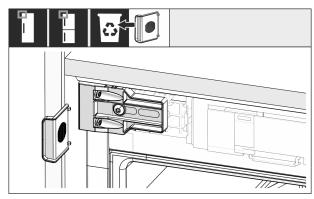


Fig. 44

Remove the stop from the bracket on the handle side and dispose of it.

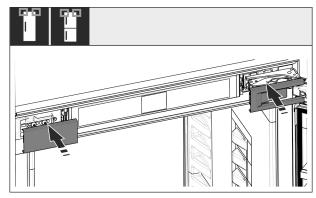


Fig. 45

▶ Put covers into position.

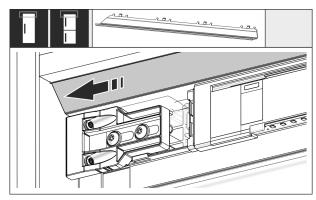


Fig. 46

- ► Slide the panel so that it sits flush with the side of the cabinet wall.
- ► If necessary: Shorten the sealing strip as necessary with a sharp pair of scissors.
- ► Position the sealing strip below the top cover and press it in. The sealing strip is magnetic.

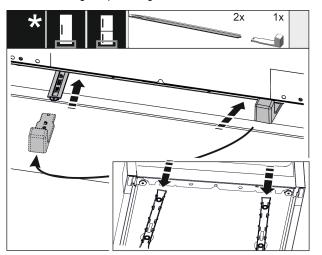


Fig. 47

The height adjustment is only supplied as standard for recess heights of 1400 mm and above. It is used for sound optimisation. Both parts of the height adjuster are included in the accessory kit.

Stabilise the bottom of the appliance at the rear:

- ▶ Plug the grip into the height adjuster rail.
- ▶ Push the rail into the bottom of the appliance.
- ▶ Pull off the grip.
- ▶ Do the same thing with the second rail.

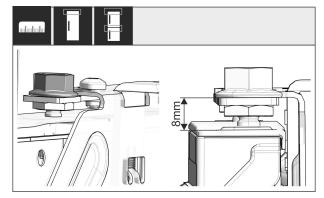


Fig. 48

- Close the door.
- ► Check the preset of 8 mm from the upper edge of the appliance door to the crosspiece support.

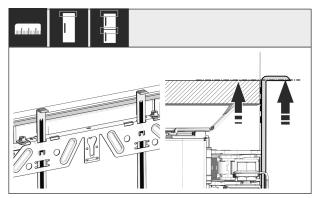


Fig. 49

▶ Push the assembly aids to the unit door height. Lower stop edge of the assembly aid = upper edge of the door to be assembled.

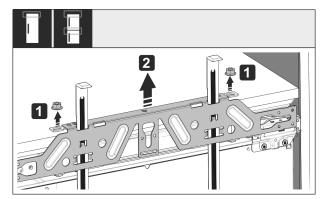


Fig. 50

- ► Loosen locknuts Fig. 50 (1).
- ► Remove crosspiece Fig. 50 (2).

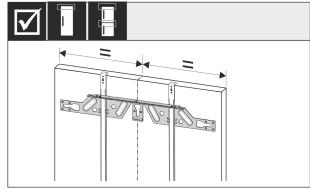


Fig. 51

► Hang the crosspiece on the inside of the unit door and make sure it is central.

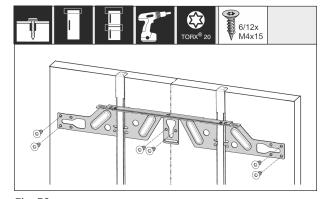


Fig. 52

► Fix the crosspiece using at least 6 screws for chipboard doors and at least 4 screws for panel doors.

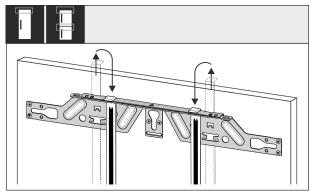


Fig. 53

Remove the fitting aids, turn round and insert into the adjacent opening.

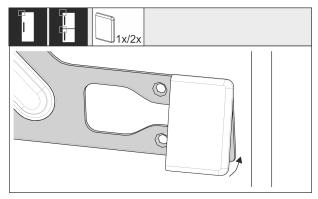


Fig. 54

▶ Put the cover on the crosspiece on the handle side.

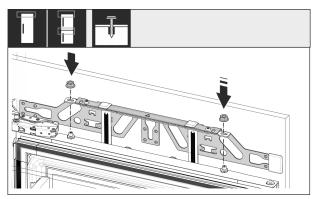


Fig. 55

► Attach the custom panel and loosely screw the lock nuts onto the adjusting bolts.

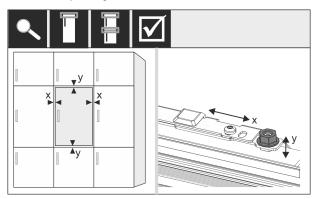


Fig. 56

Align the custom panel in the X and Y direction using the adjusting bolts.

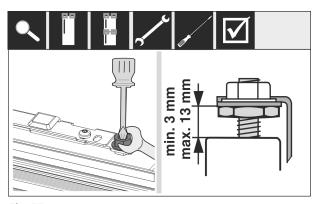


Fig. 57

- ► Tighten the lock nuts.
- ► Check the adjusted height.

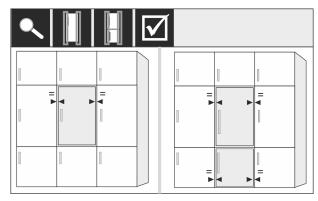


Fig. 58

For front panels thicker than 19 mm:

 Check the dimensions, weights and information in the following sections: (see 5 Custom panel weights) (see 17 Cabinet fronts)

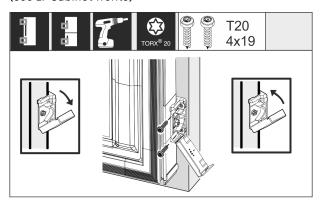


Fig. 59

Mounting the fastening bracket on the custom panel:

- ▶ Open the cover.
- Mounting the fastening bracket on the custom panel:
- ► Align the front edge of the mounting bracket parallel with the custom door panel edge and screw the bracket down tightly
- Mounting the fastening bracket on the custom panel:
- ► Fold up the cover.

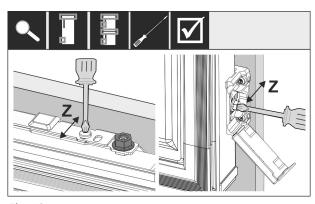


Fig. 60

Align the custom panel in the Z direction:

- ► Loosen the adjusting screw on the crosspiece and the screw on the mounting bracket.
- Move the door.

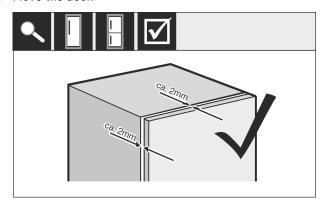


Fig. 61

- ► Check the gap between the custom panel and the unit body.
- ► Check all the screws and tighten them if necessary.

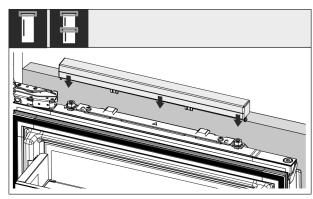


Fig. 62

▶ Put on the top cover.

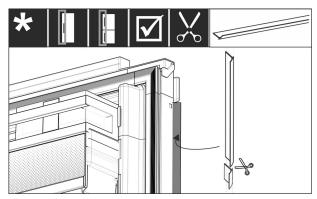


Fig. 63

► Cut the sealing strip to the required length.

► Insert the sealing strip between the front panel and the appliance door.

To make sure the appliance is correctly installed and there will not be any icing up, condensation or malfunctions, the following criteria apply:

- The door must close properly.
- The custom door panel must not touch the body of the unit.
- The seal on the upper corner on the handle side must be fitted securely.
- ► Check recess installation according to the criteria above.

17 Cabinet fronts

17.1 Dimensions

Depending on your model, you will need one or two cabinet doors. The size of the cabinet door(s) depends on the overall recess size and cabinet unit thickness.

Note

Observe the appliance and recess dimensions and follow the installation diagrams . See the relevant catalogue for the installation diagrams.

General requirements:

- Please refer to our catalogues for appliance-specific recommendations on size and weight for fixed door installations.
- The body of the unit should be at least 16 mm thick but not more than 19 mm.
- When mounting a 2-door cabinet door, observe the recommended clearances.

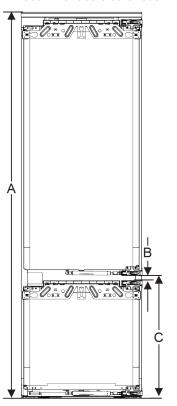


Fig. 64 Clearances for a 2-door cabinet door

Recess height 178-2 drawers			
Appliance height (A) (mm)	1770		
Distance (B) (mm)	15		
Clearance (C) door-on-door (mm)	549+15 (21 5/8 + 5/8)		

Recess height 178-3 drawers			
Appliance height (A) (mm)	1770		
Distance (B) (mm)	15		
Clearance (C) door-on-door (mm)	695+15 (27 3/8 + 5/8)		

Other cabinet door above, below or next to it:

- The vertical gap between custom panels must be 4 mm.
- The horizontal gap between custom panels must be 4 mm. Check the risk of them clashing here. (see 17.3 Setting the clearance to avoid collision)

Weight and hinges:

- Heavy cabinet fronts increase the stress on the hinge.
 The hinge may be damaged. As such, refer to the catalogue for the maximum weight specification for your appliance.
- If the cabinet front exceeds the maximum permitted weight, an appliance with door-tracking device can help by loading the weight over several concealed hinges on the cabinet.
- If you use long unit fronts that protrude far above the appliances, we recommend an additional door hinge (e.g. Kamat), which must have the same pivot point as the fixed door hinge used with your appliance. By using another hinge (Kamat), the weight is shared over several points. The use of a milled compensating fastening is recommended for high unit fronts to counteract warping (convex/concave).

17.2 Mounting the cabinet front(s)

When installing, note:

- Cabinet front must be installed symmetrically to the refrigerator door.
- Adjoining cabinet front is exactly level.
- Adjoining cabinet front has the same edge radius as the front of the appliance.
- Cabinet front is flat and tension-free.
- The front panel has a minimum depth setting of approx.
 2 mm to the body.
- ► Install the appliance in the recess. (see 16 Installing the appliance in the recess)
- ► Fasten the front panel to the appliance door. (see 16 Installing the appliance in the recess)
- ► Check that the front panel can close unobstructed. (see 17.3 Setting the clearance to avoid collision)

17.3 Setting the clearance to avoid collision

After installing the cabinet front(s), check that the cabinet fronts do not collide.

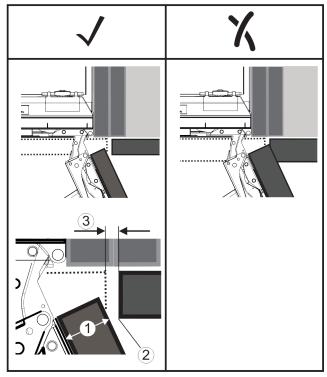


Fig. 65

- (1) Front thickness (FD)
- (2) Edge radius (R)
- (3) Clearance (S)

	R (2) = 0 mm		R = 1,2 mm		R = 2 mm		R = 3 mm	
FD(1) (mm)	Gmin	Gmax	Gmin	Gmax	Gmin	Gmax	Gmin	Gmax
16	0,3	0,9	0,1	0,4	0,1	0,2	0,1	0,2
19	0,7	2,4	0,3	1,9	0,23	3,25	0,1	0,8
20	2	4,3	1,5	3,6	1	3,1	0,6	2,7
22	3,5	6,3	3	5,6	2,6	5,3	2,1	4,6
24	5,5	8,3	5	7,8	4,5	7,4	4	6,9
26	7,6	10,7	7	10,3	6,6	9,9	6,2	9,4

Fig. 66 Table of clearance limits

 G_{min} = min. clearance in mm

 G_{max} = max. clearance in mm

Note

When making adjustments, always make sure that the cabinet front suits the general appearance.

Check the collision factors and adjust them accordingly:

- ▶ Determine the front thickness and edge radius.
- ▶ Refer to the table for the min./max. clearance dimensions.
- ► Check the clearance size against the table.
- ▶ Do one of the following depending on the measured clearance size.

Clearance	Description
S > G _{max}	If the clearance size is greater than the two limits, you do not need to make any adjustments.
S < G _{min}	If the clearance size is below the limits, you must increase it. Another option is to increase the edge radius.
$G_{min} \le S \le G_{max}$	If the clearance is between the two limits, you have to be careful. This will quickly lead to collisions.

18 Water tank

Depending on your model, the InfinitySpring water tank is behind the lowest drawer in the fridge or BioFresh compartment

18.1 Inserting the water tank

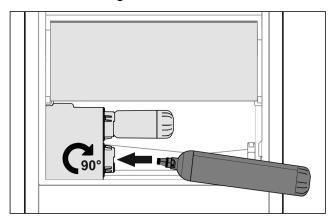


Fig. 67

- ► Remove the drawer compartment.
- ► Insert the water tank and rotate approx. 90° clockwise until it clicks in.
- ► Check that the tank is sealed and no water leaks out.
- ► Insert the drawer compartment.
- ► Vent the water system (see the Installation Instructions, Water Connection)

Instead of the water filter you can insert an additional water tank

Note

You can purchase this water tank as an optional extra.

19 Water filter

Depending on your model, the water filter is behind the lowest drawer in the fridge or BioFresh compartment.

It filters out deposits in the water and reduces the taste of chlorine.

- □ Replace the water filter at least every 6 months, or if there is a significant reduction in the flow rate.
- ☐ The water filter contains carbon and can be disposed of with the regular household waste.

Note

Water filters are available from the Liebherr-Hausgeräte store at home.liebherr.com/shop/de/deu/zubehor.html.

19.1 Inserting the water filter

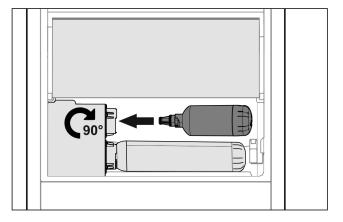


Fig. 68

- ► Remove the drawer compartment.
- ▶ Insert the water filter and rotate approx. 90° clockwise until it clicks in.
- ▶ Check that the filter is sealed and no water leaks out.
- ► Insert the drawer compartment.

<u>^!\</u>

CAUTION

New water filters can contain suspended matter.

Draw 3 l of water from the InfinitySpring and dispose of it.

> The water filter is now ready for use.

20 Connecting device



WARNING

Failure to connect properly Fire hazard.

- ▶ Do not use an extension cable.
- ▶ Do not use distributor blocks.

NOTICE

Failure to connect properly

Damage to the electronics.

Do not connect the appliance to a stand-alone inverter, e.g. solar power systems and petrol generators.

Note

Only use the supplied mains cable.

 A longer mains cable can be ordered from Customer Service.

Ensure that the following conditions are met:

- The type of current and voltage at the installation site match the information on the serial tag .
- The socket is earthed according to the regulations and fused.
- The fuse tripping current is between 10 and 16 A.
- The socket is easily accessible.
- Check the electrical connection.
- ► Connect the mains plug to the power supply.
- > The Liebherr logo appears on the screen.
- > The display switches to the standby symbol.



home.liebherr.com/fridge-manuals



Issue date: 20230905 Part number index: 7088416-00