

Installation instructionsMulti-temperature wine cabinet

Page 10



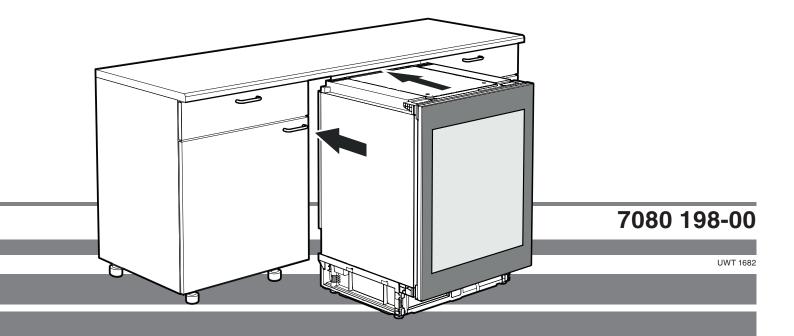

Supplied accessories

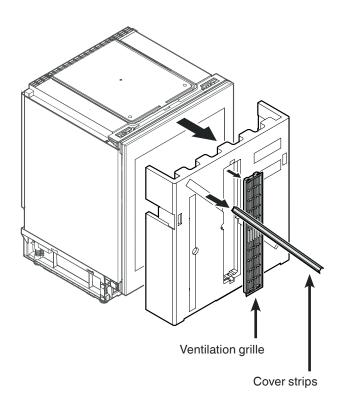


Mounting the dust filter


The supplied dust filter prevents that dirt enters the motor compartment, reducing the refrigeration performance. Therefore always install the dust filter.



Remove the protective film from the dust filter.

Insert the filter at the bottom and click into place at the top.

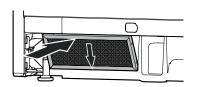


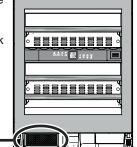


Appliance venting

The required air flow is directed through the plinth.


It is important to use the provided ventilation grille for the ventilation opening.

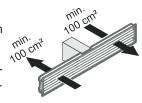


Cut-out section in the plinth panel

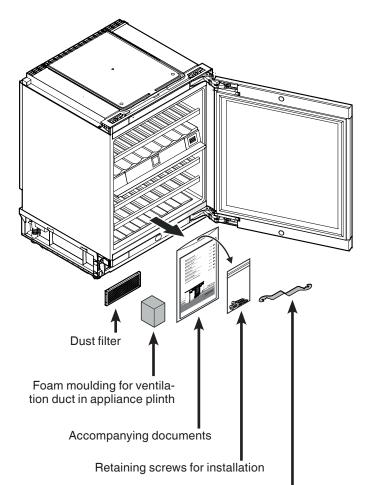

Spanner to adjust the height of the appliance

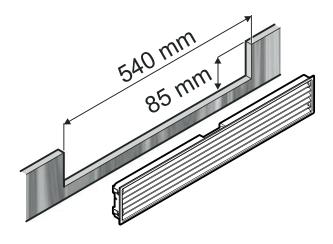

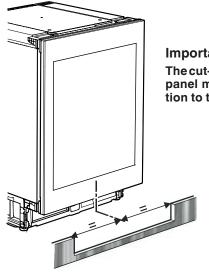

Important

The cut-out section in the plinth panel must be centred in relation to the appliance.

Appliance dimensions

597 mm 532 mm View from above 240 mm d"a" 39 mm Maximum door opening angle Side view 816 mm 76 mm mm 102 mm Height when adjustable feet have been

Maximum height adjustment = 50 mm

screwed in as far as they will go.

Installation dimensions


Important

1128 mm

In order to avoid any problems when installing the appliance and to avoid damage to the appliance, the following conditions must be complied with.

The floor on which the appliance stands must be horizontal and level.

The kitchen unit must be aligned horizontally and vertically.

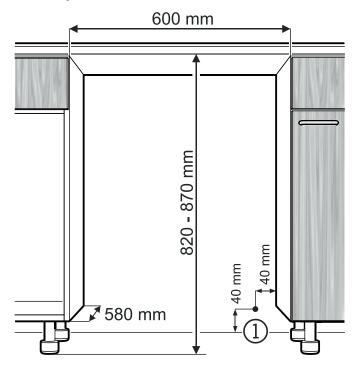


(1) In this area, the power cord comes out of the appliance rear.

Free length of the power cord = 2000 mm

Choose the position of the socket considering these specifications.

The socket must not be situated behind the appliance and must be easily accessible.


Dimensions of appliance door

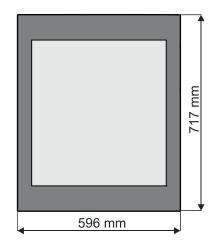


Installing the appliance


1. Remove cover (1).

Apply the cover strips to the leading edge of the appliance housing on the left and right.

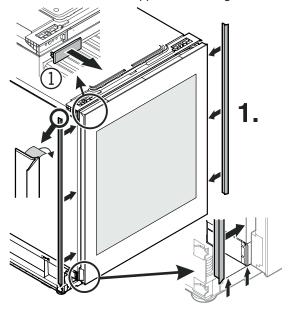

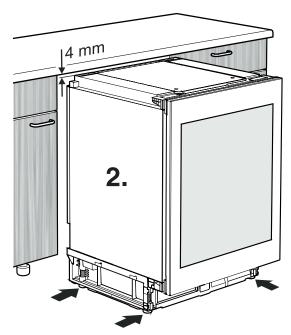

Adjust the height of the appliance to 4 mm less than the recess height by turning the adjustable feet clockwise.

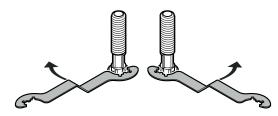


Turn the spanner anticlockwise to raise the appliance front and clockwise to lower it.

Position the spanner accordingly


Important


The appliance must be aligned horizontally and vertically. If the appliance is not level, the main body of the appliance can be deformed and the door will not close properly.

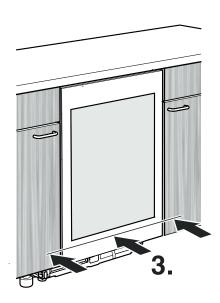



3. Slide in the appliance until the front surface of the appliance door is flush with the unit fronts.


When sliding in the appliance, make sure that the mains cable is not damaged!

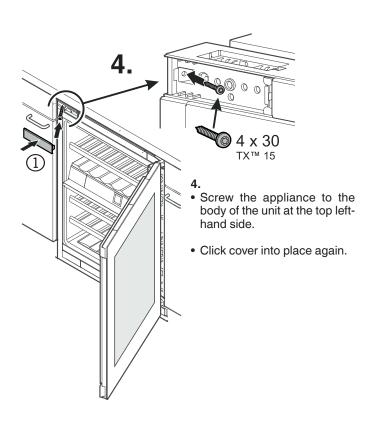

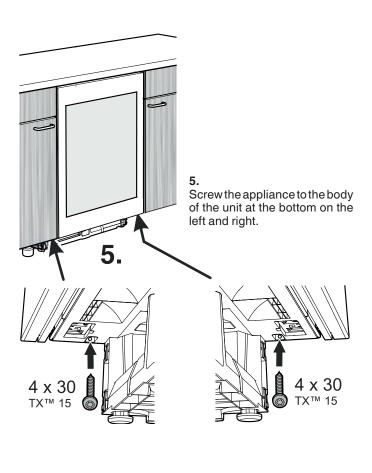

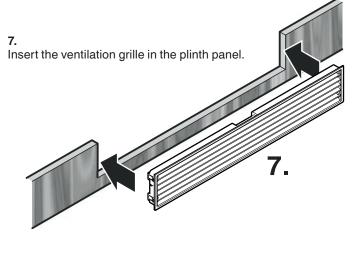

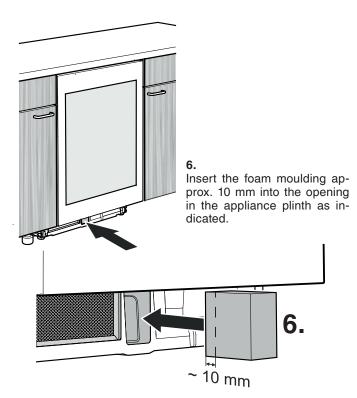

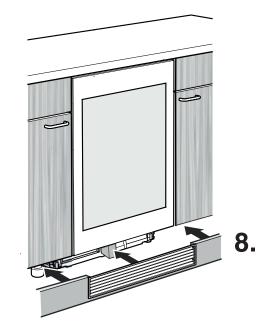

Fit the plinth panel. In doing so, the foam moulding is pushed backwards into its final position.

Important

The foam moulding must be touching the ventilation grille.


Important


If the foam moulding is not installed, the appliance will not achieve its full refrigeration performance during operation.


Changing over door hinges


Door hinges should only be changed by a trained expert.


Changing the door hinges must be done by two people.

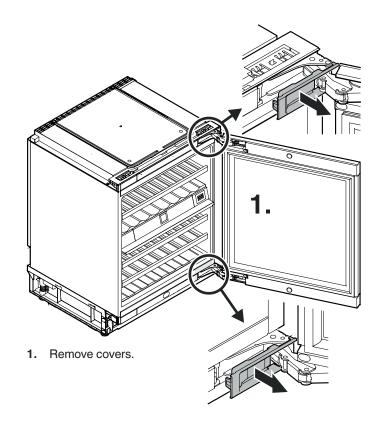

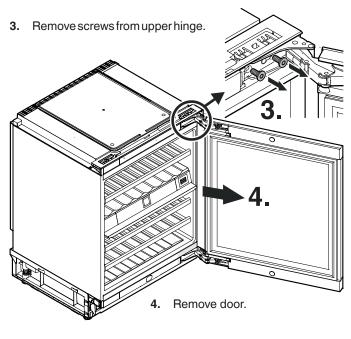


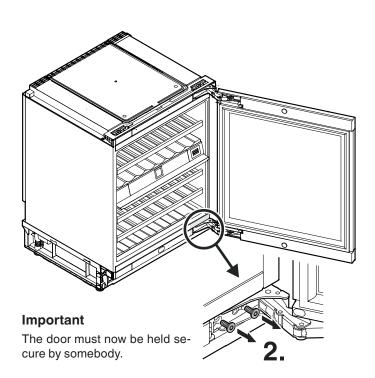

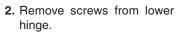


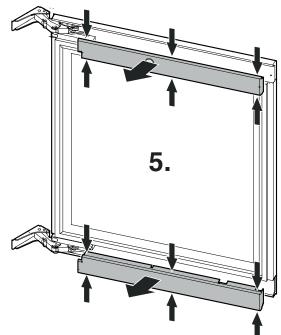

5. Compress the covers in the places shown, release and remove.

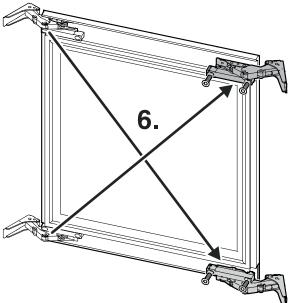



6. Unscrew hinges and re-fit on the opposite side at diagonals to the original position.

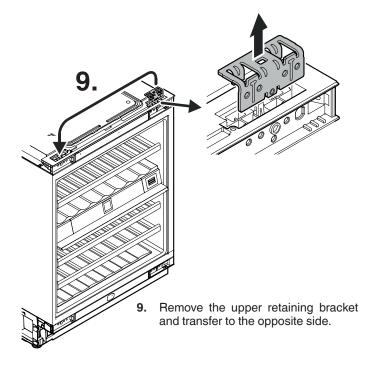


7.

7. Fit covers and click into place.

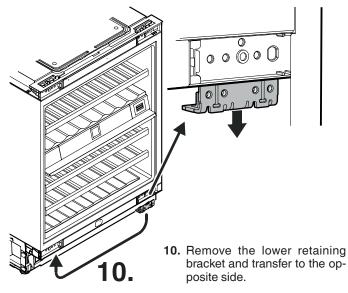


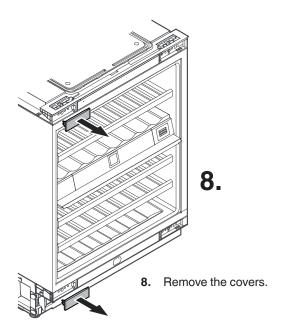


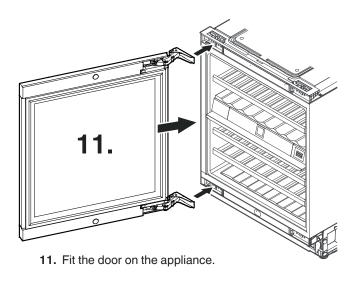

Important


The door must now be held secure by somebody.

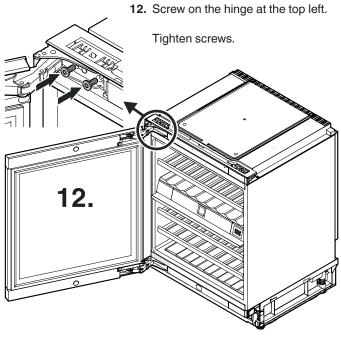


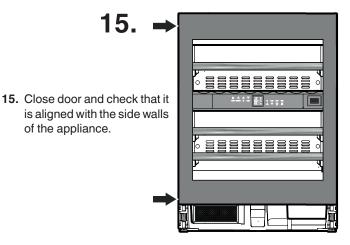


Adjusting the lateral tilt of the door


If the door is at an angle, adjust the angle.

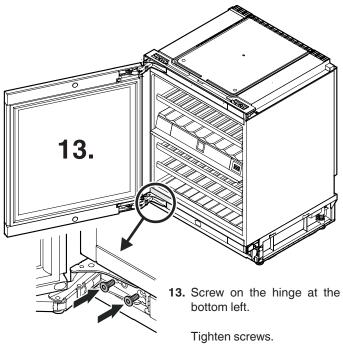

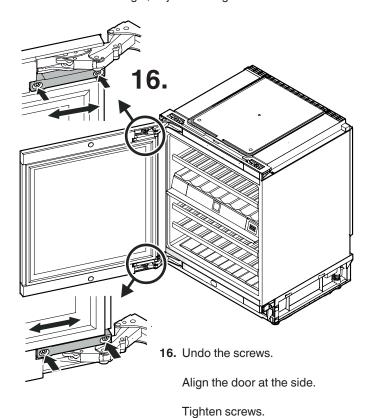

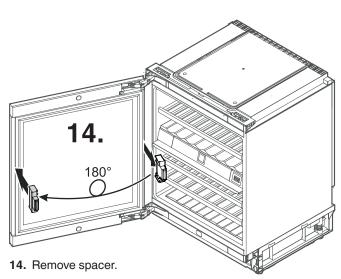

Turn spacer through 180° and re-fit on the opposite side.

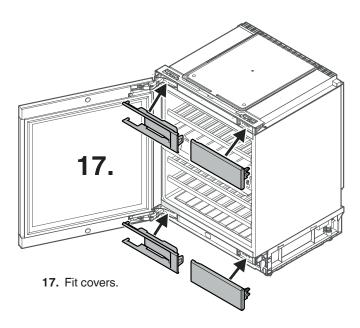





Liebherr Hausgeräte Lienz GmbH Dr.-Hans-Liebherr-Strasse 1 A-9900 Lienz Österreich www.liebherr.com

