
Installation instructions Multi-temperature wine cabinet

Page 14

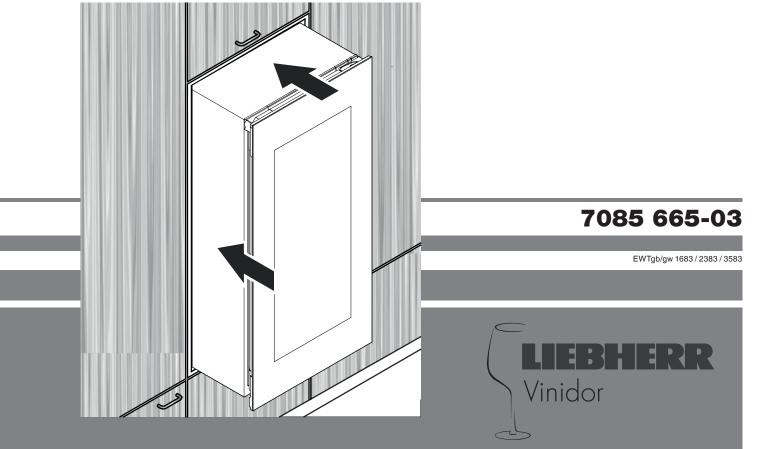



EN

Content

| Scope of delivery | 14 |
|----------------------------|----|
| Appliance dimensions | 14 |
| Transporting the appliance | 15 |
| Installation dimensions | |
| Appliance venting | |
| Changing over door hinges | |
| Installing the appliance | 20 |
| Adjusting the door | 24 |
| | |


Scope of delivery

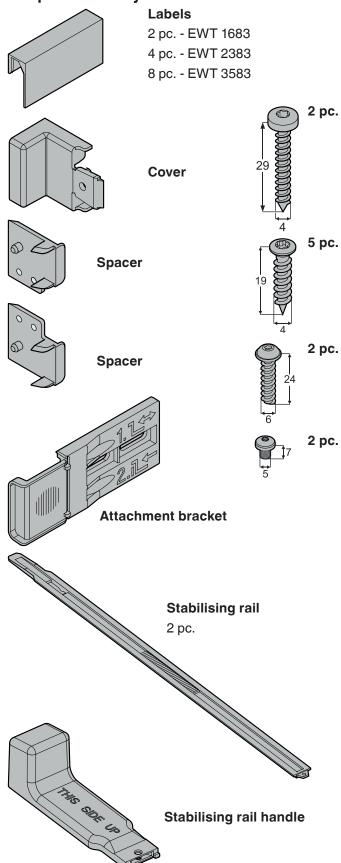

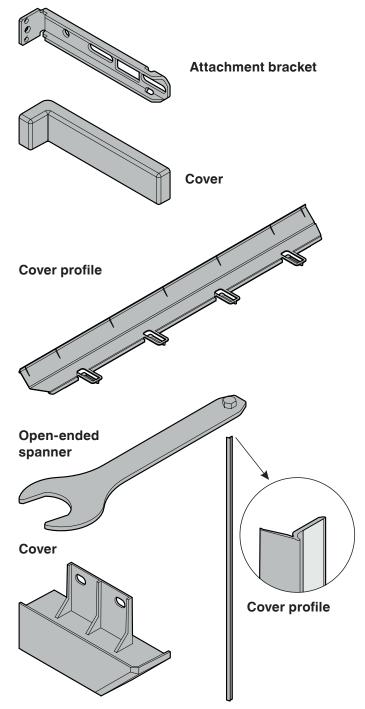


Appliance dimensions


| Α | 510 mm |
|---|---------------------------------|
| в | EWT 16 906 mm EWT 23 1233 mm |
| | EWT 35 1816 mm |
| С | 572 mm |
| | EWT 16 872 mm |
| D | EWT 23 1218 mm |
| | EWT 35 1770 mm |
| E | 595 mm |
| F | 557 mm |
| G | 254 mm |
| Н | 1100 mm |
| I | 115° |
| | EWT 16 26.5 mm |
| J | EWT 23 7.5 mm |
| | EWT 35 27 mm |
| | EWT 16 7.5 mm |
| K | EWT 23 7.5 mm EWT 35 19 mm |
| | |

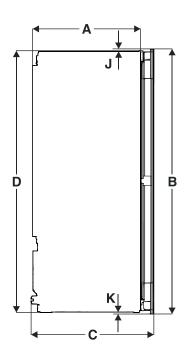

Front view

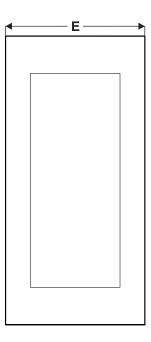

View from above

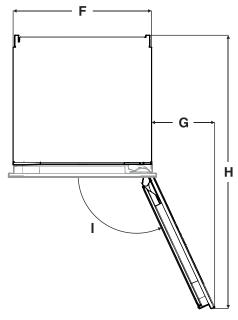


Transporting the appliance

 $Danger of injury \, or \, damage \, as \, a \, result of incorrect \, transport!$

- Transport the appliance in a packed condition.
- Transport the appliance upright.
- Do not transport the appliance without assistance.



An appliance which has not been built in can topple over!

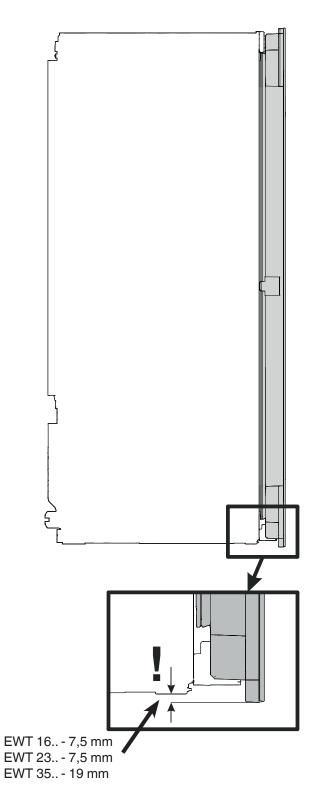


Installation dimensions

Important note

In order to avoid any problems when installing the appliance and to avoid damage to the appliance, the following conditions must be complied with.

The kitchen unit must be aligned horizontally and vertically!

Minimum wall thickness of the body of the unit = 16 mm.

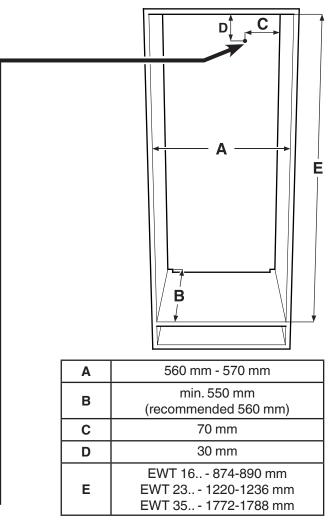

In this area, the mains power cable comes out of the appliance rear.

Free length of the mains power cable:




Choose the position of the socket considering these specifications.

The socket must not be situated behind the appliance and must be easily accessible.

Appliance venting



The clear ventilation crosssection must be at least 200 cm^2 from the lower ventilation opening right to the upper one.

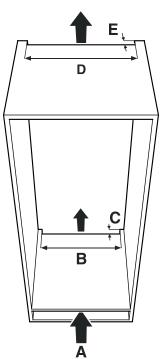


| Α | min. 200 cm ² | | |
|---|--------------------------|--|--|
| В | min. 500 mm | | |
| С | min. 40 mm | | |
| D | min. 500 mm | | |
| E | min. 40 mm | | |

Types of air outlet

1 Directly above the appliance

- ② Above the top unit
- ③ From the front of the top unit with decor grille

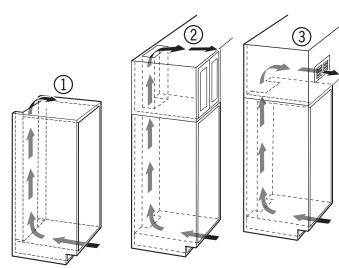

Important note

When using decor grilles, it must be taken into account that the clear ventilation cross-section corresponds to the sum of the individual openings in the grille.

A cut-out section of merely 200 cm² for installing the ventilation grille is thus not sufficient.

Changing over door hinges

Door hinges should only be changed by a trained expert.

Changing the door hinges must be done by two people.




High door weight.

Danger of injury and damage to property. Only complete the modification work if you can lift a weight of 35 kg.




Risk of injury due to the door dropping out! If the fastening parts are not screwed into place firmly enough, the door may drop out. This may lead to severe injuries. What is more, the door may not close and therefore the appliance may fail to cool properly.

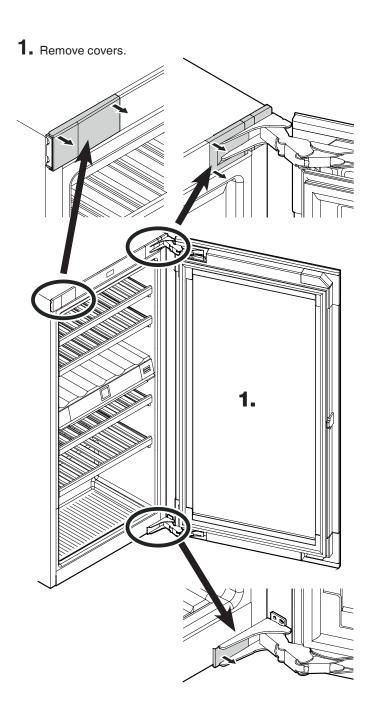


2. Remove the transportation safety component.




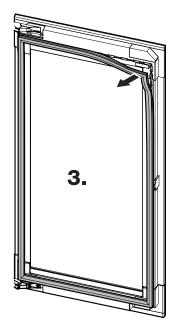


4. Remove cover.

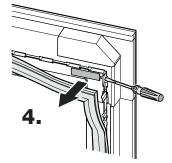


5. Remove cover.

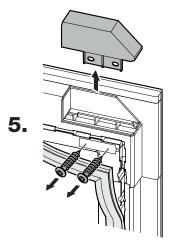

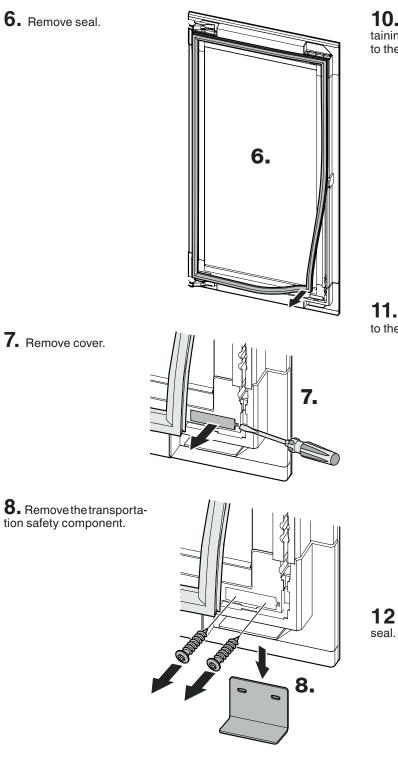


10. Remove the upper re-taining bracket and transfer to the opposite side.

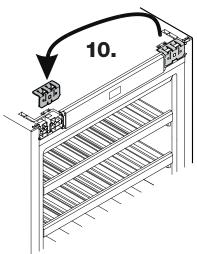


11. Transfer the stop to the opposite side.

13. Remove cov-

ers.

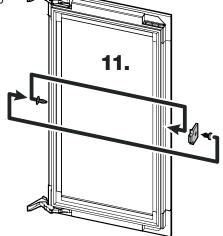

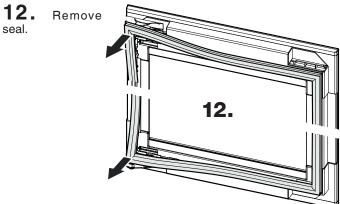


13.


9. Remove the door.

The door must now be held secure by somebody.


Carefully place the door on a soft surface.

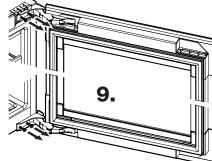

Risk of injury if hinges fold! - Leave hinges open.

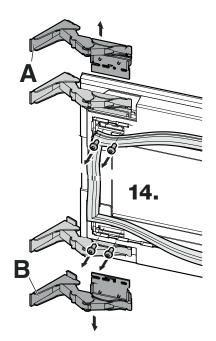


15. Unscrew the attachment plates from the hinges and resecure them to the other relevant hinge (the "Top" attachment plate must remain at the top + the "Bottom" attachment plate at the bottom). Re-fit the hinges on the opposite side of the door at diagonals to the original position.

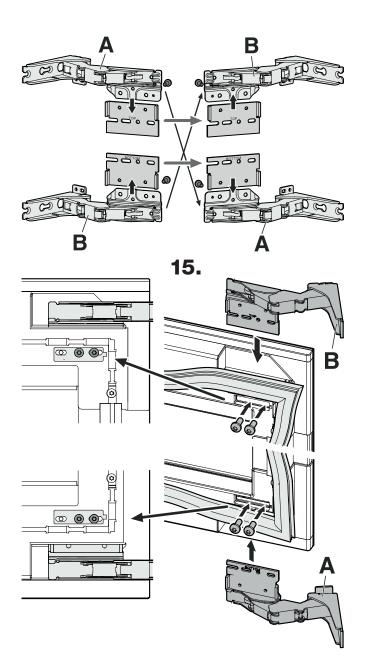


16. Screw on covers.


18. Fit seal.

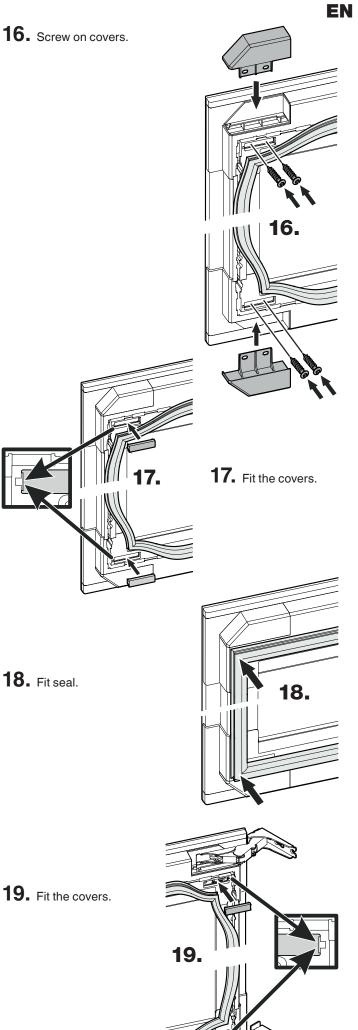


19

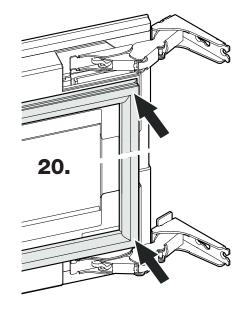

21. Fit the door on the appliance. **Notice** The door must now be held secure by somebody.

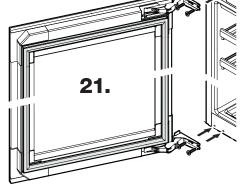

22. Fit covers and click into place.

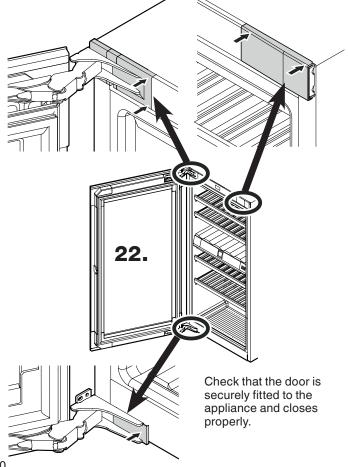

Installing the appliance

The installation work should only be carried out by trained personnel.

Two people are required for the installation work.

Note

Check the installation dimensions before installation. The intermediate panel and side wall of the kitchen unit must be perpendicular to each other.




Fire hazard due to dampness!

If live parts or the mains power cable become damp this may cause short circuits.

- The appliance is designed for use in enclosed areas. Do not operate the appliance outdoors or in areas where it is exposed to splash water or damp conditions.

- Only use the appliance when it is installed.

1. EWT 3583 - Remove the transportation safety component.

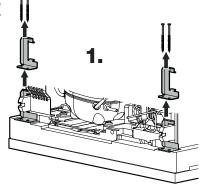

2. Route the mains cable towards the socket.


🕂 WARNING! 🛛

Fire hazard from short-circuiting!


- When pushing the appliance into the recess, take care not to crush, jam or damage the mains power cable.

- Do not operate the appliance with a defective mains power cable.


3. Slide the appliance two-thirds of the way into the kitchen unit. When sliding in the appliance, make sure that the mains cable is not damaged.

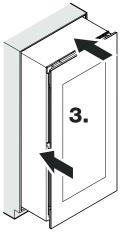


- 4. Screw in the adjustable feet as far as they will go.
- 4.
- **6.** Remove the transportation safety component.

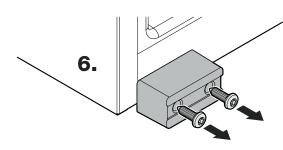



7. Only if the wall thickness is less than 19 mm: Fit the spacers.

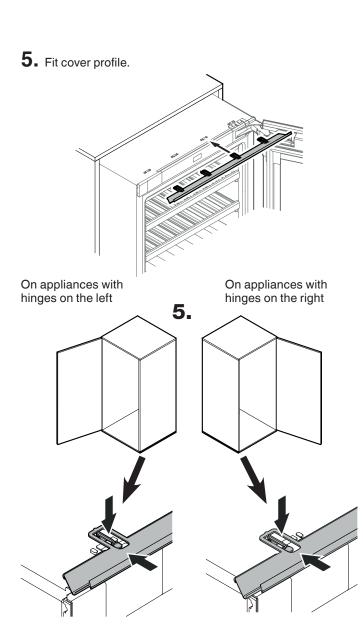

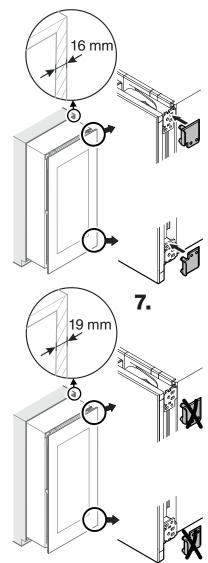


8. Remove cover.

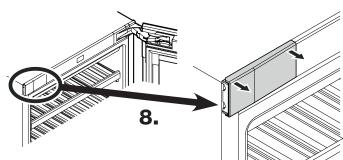


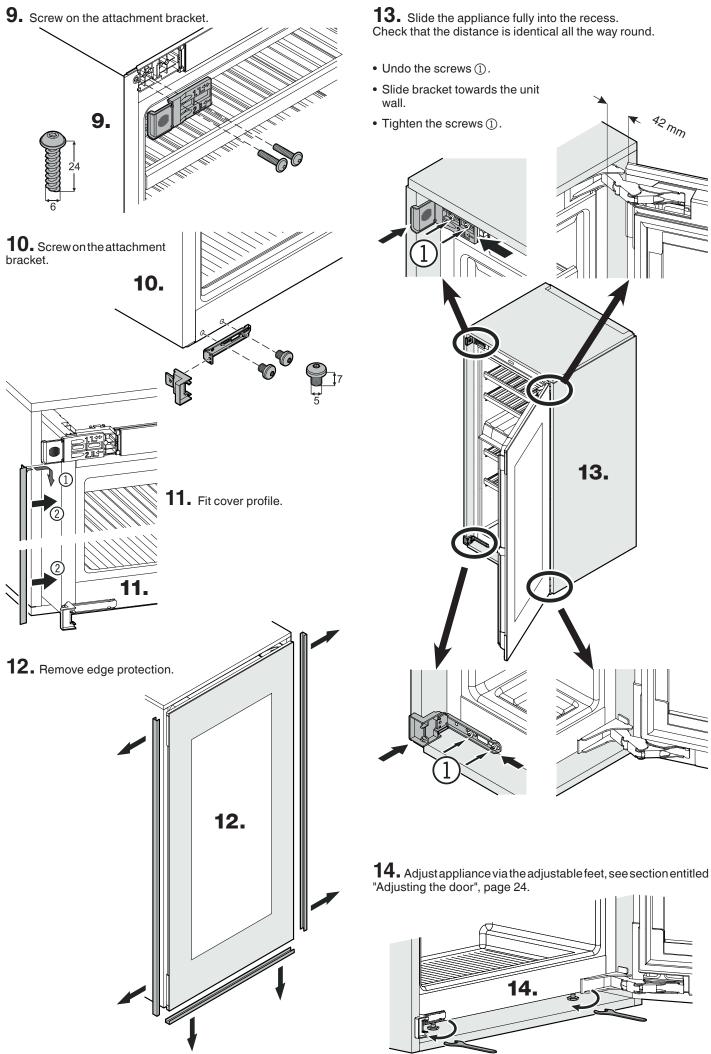


15. Secure the appliance to the kitchen unit using screws through the hinges and attachment brackets.

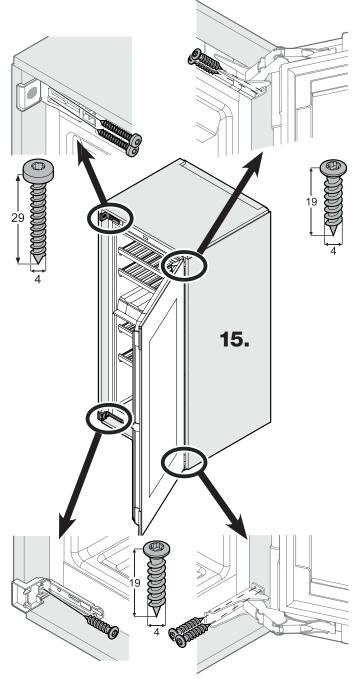


16. Snap off and remove the front part of the stop bracket.

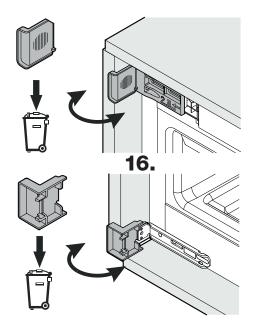


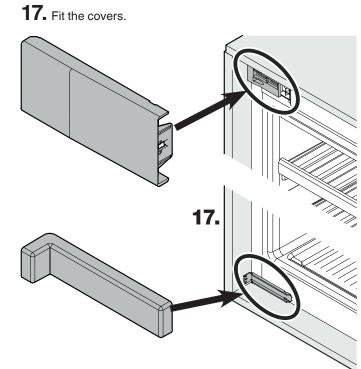


18. Stabilise the appliance at the back at the bottom: Fit the handle ① to the stabilising rail ② and slide the stabilising rail into the floor of the appliance.

Remove the handle and repeat this procedure with the second stabilising rail.

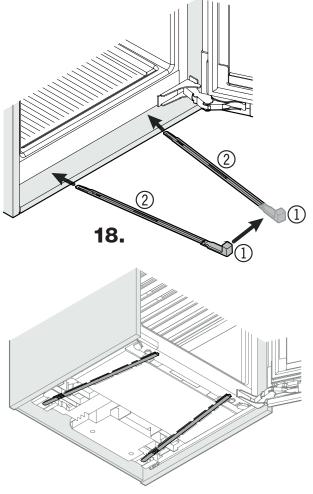


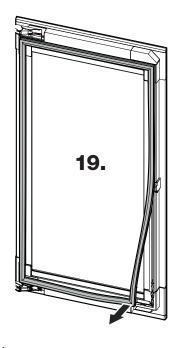


20. Remove cover.

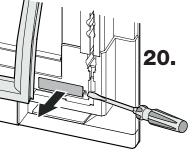


21. Remove the transportation safety component.

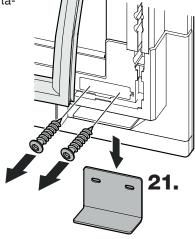

22. Screw on the cover.

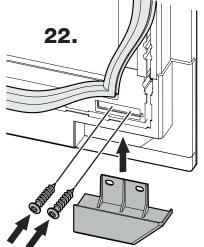


23. Fit cover.

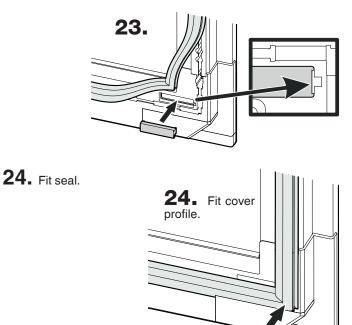


Check that the door is securely fitted to the appliance and closes properly.


Installation is now complete.

Adjusting the door

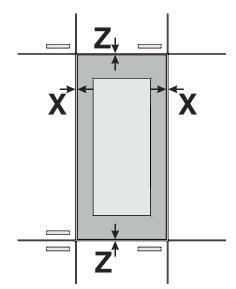


1. Remove seal.

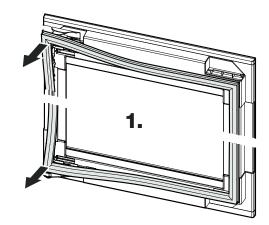

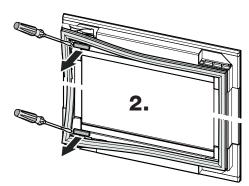


3.


- Remove screws (1).
- Transfer to position 2.
- Undo screws ③.
- Adjust clearance.
- Tighten screws (1) and (3).

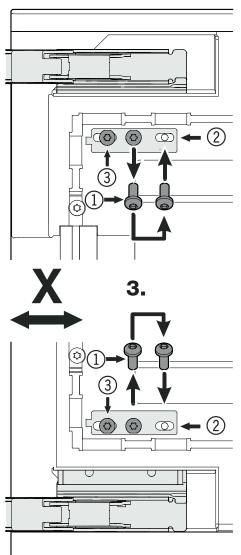


4. Fit the covers.

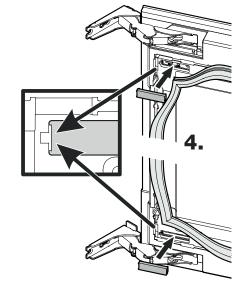

5. Fit seal.

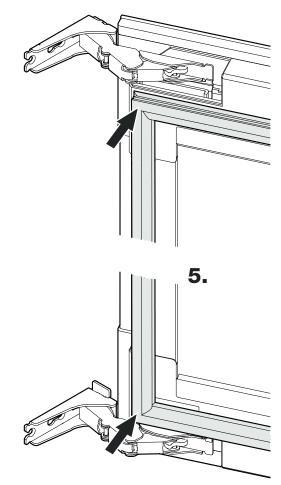



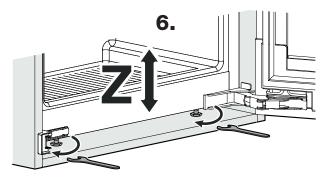



Liebherr Hausgeräte Lienz GmbH Dr.-Hans-Liebherr-Strasse 1 A-9900 Lienz Österreich www.liebherr.com







home.liebherr.com/fridge-manuals




General safety instructions

Contents

| 1 | General safety instructions | 2 |
|-----------------------------------|---|-----------------------------|
| 2 2.1 2.2 2.3 | Installation conditions Location Installing multiple appliances Mains connection | 3 3 3 4 |
| 3 | Appliance dimensions | 4 |
| 4 4.1 | Recess dimensions Internal dimensions | 5 5 |
| 5 | Ventilation requirements | 6 |
| 6 | Custom panel weights | 6 |
| 7 7.1 7.2 | Water connection* Dimensions for the water connection Water pressure | 6 7 7 |
| 8 | Transporting appliance | 7 |
| 9 | Unpacking the appliance | 7 |
| 10 10.1 | Setting up the appliance After installation | 7 7 |
| 11 | Disposing of packaging | 8 |
| 12 | What the symbols mean | 8 |
| 13 13.1 | **** freezer compartment door* Moving the door hinge | 9 9 |
| 14 | Reversing the door | 9 |
| 15 15.1 15.2 | Connecting the appliance to the water supply* Connecting the hose Checking the water system | 11 11 11 |
| 16 | Installing the appliance in the recess | 12 |
| 17 17.1 17.2 17.3 | Cabinet fronts Dimensions Mounting the cabinet front(s) Setting the clearance to avoid collision | 18 18 19 19 |
| 18 18.1 | Water tank* Inserting the water tank | 20 20 |
| 19 19.1 | Water filter* Inserting the water filter | 20 20 |
| 20 | Connecting the appliance to the power supply | 20 |

The manufacturer is continually working on the further development of all types and models. Please be aware that we reserve the right to make changes to the shape, equipment and technology.


| Symbol | Explanation |
|--------|--|
| | Read instructions Please read the information in these instruc- tions carefully to understand all of the benefits of your new appliance. |

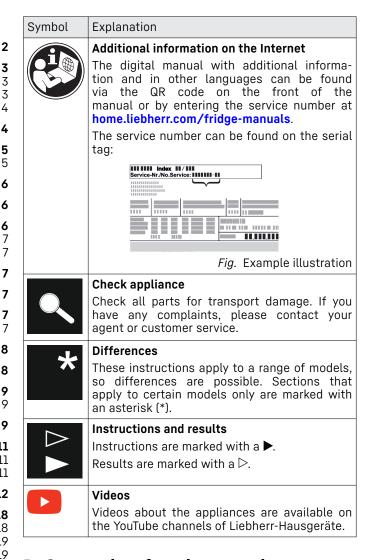

1 General safety instructions

- Please keep this assembly manual in a safe place so you can refer back to it at any time.
- If you pass the appliance on, please hand this assembly manual to the next user.
- Read this assembly manual carefully before installation and use to ensure safe and correct use of the appliance. Follow the instructions, safety instructions and warning messages included at all times. They are important for ensuring you can operate and install the appliance safely and without any problems.
- First read the general safety instructions in the "General safety instructions" section of the operating instructions, which accompany these installation instructions, and follow them. If you cannot find the operating instructions, you can download the operating instructions from the internet by entering the service number at home.liebherr.com/fridge-manuals. The

 service number can be found on the serial



tag:

Observe the warning messages and other detailed information in the other sections when installing the appliance:

| Â | DANGER | identifies a situation involving direct danger which, if not obvi- ated, may result in death or severe bodily injury. |
|-------------|---------|--|
| \triangle | WARNING | identifies a dangerous situation which, if not obviated, may result in death or severe bodily injury. |
| \triangle | CAUTION | identifies a dangerous situation which, if not obviated, may result in minor or medium bodily injury. |
| | NOTICE | identifies a dangerous situation which, if not obviated, may result in damage to property. |
| | Note | identifies useful instructions and tips. |

2 Installation conditions



Fire hazard due to dampness!

If live parts or the mains lead become damp this may cause short circuits.

The appliance is designed for use in enclosed areas. Do not operate the appliance outdoors or in areas where it is exposed to splash water or damp conditions.

Intended use

- Install and use the appliance in indoor spaces only.
- Use the appliance only once installed.

2.1 Location



Leaking coolant and oil!

Fire. The coolant contained in the appliance is eco-friendly, but also flammable. The oil contained in the appliance is flammable. Escaping coolant and oil can ignite if the concentration is high enough and in contact with an external heat source.

- Do not damage the pipelines of the coolant circuit and the compressor.
- If the appliance is installed in a very humid environment, condensation can build up on the outside of the unit.

Always ensure good airlow and ventilation in the installation location.

The more refrigerant there is in the appliance, the larger the space that it is installed in must be. If the space is too small, any leak may create a flammable mixture of gas and air. For every 8 g of refrigerant, the installation space must be at least 1 m^3 . Information regarding the coolant can be found on the serial tag inside the appliance.

2.1.1 Supporting floor

- The floor of the installation site must be horizontal and even.
- If you are installing the unit in a cabinet standing on an uneven floor: level the cabinet.

2.1.2 Positioning

- Do not install the appliance in direct sunlight or near radiators or similar sources of heat.
- You can install the appliance directly next to an oven.
- If the appliance is installed directly next to an oven, the energy consumption may increase slightly. This is dependent on the service life and usage intensity of the oven.
- Only fit the appliance into solid kitchen units.

Note

Please contact Customer Services to acquire a kit to limit the door opening angle to 90° for appliances with soft close mechanisms.*

2.2 Installing multiple appliances

NOTICE

Risk of damage due to condensate!

► Do not install the appliance directly alongside a further refrigerator/freezer.

NOTICE

- Risk of damage due to condensation!
- Do not install the appliance directly above another refrigerator or freezer.

These appliances are designed for a variety of installation options. Combine appliances only if the appliance is suitable. The following table shows the installation options by model:

| Installation option | Model |
|-----------------------|--|
| Single | All models |
| Side-by-side (SBS) | Model names starting with S . |
| Stacked | Models up to a maximum recess height of 880 mm and with a heated cover can be "stacked". |
| | Upper appliance: up to a maximum recess height of 140 mm |

Appliance dimensions

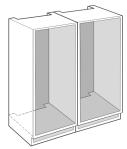


Fig. 1

Build each appliance into a separate recess.


2.3 Mains connection

Danger of fire due to incorrect positioning!

If the mains cable or plug touches the back of the appliance, the vibration can damage the mains cable or the plug resulting in a short circuit.

- Make sure the mains cable is not trapped under the appliance when you position the appliance.
- Stand the appliance so that it is not touched by connectors or main cables.
- Do not connect any appliances to sockets in the area of the back of the appliance.
- Do not place and operate multi-sockets/power distributors and other electronic devices (such as halogen transformers) at the back of the appliances.

3 Appliance dimensions

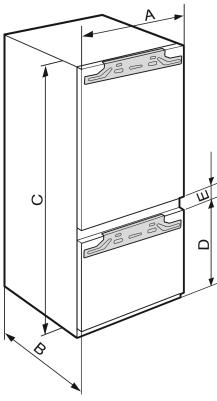

| | A (mm) | B (mm) | C (mm) | D (mm) | E (mm) |
|--|-----------|-----------|-----------|-----------|-----------|
| ICB 512 | | | | 549 | |
| IC 513 S/ICN 513 ICBN 513 ICBN 513 IC/B/N/bsci 51 IKG 51Ve03 / IKGN 51Vc03 / IKGN 51Ve03 / IKGBN 51Vd23i | 559 | 546 | 1770 | 695 | 15 |
| ICN563 ICBN563 | | | 1938 | | |

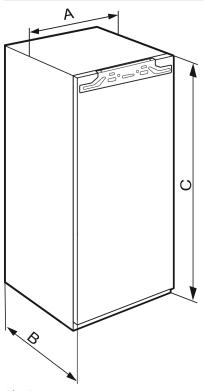


Fig. 3

Fig. 2

| | A (mm) | B (mm) | C (mm) |
|---|--------|--------|--------|
| IFN 35 | | | 712 |
| IR 39 SIBai 39 SIBa20i 39 S/IF/N 39 | | | 872 |
| IR 40 IRB 40 | | | 1022 |
| IR 41 IRB 41 IRBbsbi 41 SIFN 41 | | | 1213 |
| IR 45 IRB 45 IRBbsbi 45 SIFN 45 | 559 | 546 | 1395 |
| IRB 48 | | | 1572 |
| IR 51 IRD 51 IRB 51 IRBbsci 51 IRBP 51 IRBPbsci 51 SIFN 51 SIFN 51 IK 51Ve00 / IK 51Ve01 / IKB 51Vc50i / IKB 51Vc51i | | | 1770 |

4 Recess dimensions

4.1 Internal dimensions

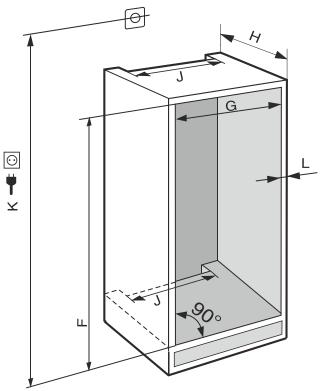


Fig. 4 **(K):** max. 2100 mm

Observe the following information for devices with a fixed water connection:

- Water connection (see 7 Water connection*)
- Connecting the device to the water supply (see 15 Connecting the appliance to the water supply*)

| IFN(i) 35 | | |
|--------------------------|--------------------------------------|--|
| F (mm) 714 to 730 | | |
| G (mm) | 560 to 570 | |
| H (mm) | min. 550, recommended 560 | |
| J (mm) | min. 500 | |
| L (mm) | max. 19 | |
| IFN(i) 39 | / IR(i) 39 / SIBa20i 3905 / SIFNi 39 | |
| F (mm) | 874 to 890 | |
| G (mm) | 560 to 570 | |
| H (mm) | min. 550, recommended 560 | |
| J (mm) | min. 500 | |
| L (mm) | max. 19 | |
| IR(B)(i) 4 | 0 | |
| F (mm) | 1024 to 1040 | |
| G (mm) | 560 to 570 | |
| H (mm) | min. 550, recommended 560 | |
| J (mm) | min. 500 | |
| L (mm) | max. 19 | |

Ventilation requirements

| F (mm) | 1216 to 1236 | |
|------------|------------------------------|--|
| G (mm) | 560 to 570 | |
| H (mm) | min. 550, recommended 560 | |
| J (mm) | min. 500 | |
| L (mm) | max. 19 | |
| IR(B)(i) 4 | 45 / IRBbsbi 4570 / SIFNi 45 | |
| F (mm) | 1397 to 1413 | |
| G (mm) | 560 to 570 | |
| H (mm) | min. 550, recommended 560 | |
| J (mm) | min. 500 | |
| L (mm) | max. 19 | |
| IRBi 48 | | |
| F (mm) | 1574 to 1590 | |
| G (mm) | 560 to 570 | |
| H (mm) | min. 550, recommended 560 | |
| J (mm) | min. 500 | |
| L (mm) | max. 19 | |

IR(B)(P)..(i) 51.. / IRD..i 51.. / IRBbsci 5170 / IRBbsci 5171 / IRBPbsci 5170 / IKB 51Vc50i / IKB 51Vc51i / IK 51Ve00 / IK 51Ve01 / SICN..i 51.. / SIFN..(i) 51.. / SIFNbsdi 51..

| F (mm) | nm) 1772 to 1788 | |
|----------------------------------|-------------------------|--|
| G (mm) | 560 to 570 | |
| H (mm) min. 550, recommended 560 | | |
| J (mm) | min. 500 | |
| L (mm) | max. 19 | |

The specified energy consumption was determined with a kitchen unit depth of 560 mm. The appliance will work properly at a kitchen unit depth of 550 mm, but with a slightly higher energy consumption.

- Check the wall thickness of adjacent cabinets: They must have a minimum of 16 mm .
- ▶ Only fit the appliance into stable, solid kitchen units. Secure the unit against tipping.
- Align the cabinets with a spirit level and a try square. If necessary, level them by putting something underneath them.
- Make sure floor and the side panels of the cabinet are at right angles to each other.

5 Ventilation requirements

NOTICE

Covered vents!

Damage. Appliance can overheat, which can reduce the service life of various parts of the appliance and lead to operational impairments.

- Always make sure there is good ventilation.
- ► Always keep vents or ventilation grids in the appliance housing and in the kitchen furniture (fully integrated appliance) unobstructed.
- Always keep the fan air vents unobstructed.

Always follow the required ventilation gaps:

- The depth of the ventilation shaft at the back of the cabinet must be at least 38 mm.
- At least 200 cm² is required for the ventilation gap cross sections in the plinth and the housing cabinet.
- As a rule, the larger the ventilation cross-section, the more efficiently the appliance will run.

Sufficient ventilation is required for the operation of the appliance. The ventilation grids provided ensure an effective ventilation cross-section on the appliance of 200 cm². If you replace the ventilation grids with a cover plate the ventilation cross-section must be as least as large as the ventilation grid provided by the manufacturer.

6 Custom panel weights

NOTICE

An excessively heavy custom panel can potentially cause damage!

If the custom panel is too heavy, damage to the hinges cannot be ruled out, which may compromise the functionality of the unit.

Before fitting the custom panel, ensure the custom panel does not exceed the permissible weight.

| Recess height (mm)* | Maximum weight of custom panel (kg)* | | | |
|----------------------------------|--------------------------------------|--|--|--|
| 720 | 16 | | | |
| 880 | 16 | | | |
| 1020 | 13 | | | |
| 1220 | 19 | | | |
| 1400 | 21 | | | |
| 1580 | 22 | | | |
| 1780 | 26 | | | |
| Single-door fridges and freezers | | | | |

| | height | Maximum weight of custom panel (kg)* | | | | |
|-------|--------|--------------------------------------|--------------------------------|--|--|--|
| (mm)* | | Fridge compartment door* | Freezer compart- ment door* | | | |
| 1780 | | 18 | 12 | | | |
| 1940 | | 18 12 | | | | |

Customising combinations

7 Water connection*


If your appliance has a fixed water connection, a hose is supplied with it.

Note

You can purchase a hose of a different length as an accessory.

| Overview of dimensions for the water connection: | (see 7.1 Dimensions for the water connection) |
|--|---|
| Requirements for the water pressure: | (see 7.2 Water pressure) |
| Make the water connec- tion: | (see 15 Connecting the appli- ance to the water supply*) |

7.1 Dimensions for the water connection

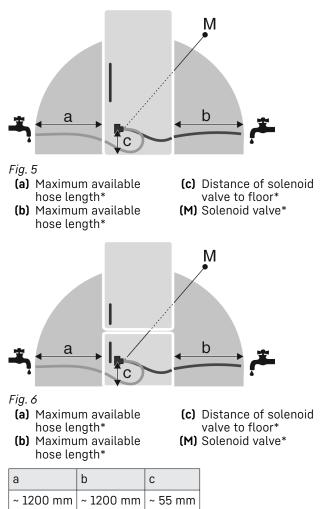

7.2 Water pressure

The water connection line and solenoid valve of the appliance are suitable for a water pressure of up to 1 MPa (10 bar).

To ensure that the appliance functions correctly (flow rate, ice cube size, noise level), maintain the following water pressure:

| Water pressure: | | | |
|--|--------------|--|--|
| bar | MPa | | |
| 1.5 to 6.2 | 0.15 to 0.62 | | |
| Water pressure when using the water filter:* | | | |
| bar* | MPa* | | |
| 2.8 to 6.2 | 0.28 to 0.62 | | |

If the pressure is higher than 6.2 bar:

- Fit a pressure reducer.
- Make the water connection. (see 15 Connecting the appliance to the water supply*)

8 Transporting appliance

Note when transporting the appliance:

- Transport the appliance upright.
- ► Use two people to transport the appliance.

During first use:

Transport the appliance packaged.

When transporting appliances after initial commissioning (e. g. moving or cleaning):

- Empty the appliance.
- Secure the door against unintentional opening.

9 Unpacking the appliance

Before you connect the appliance, report any damage immediately to the delivery company.

- Check the appliance and the packaging for damage during transport. Contact the supplier immediately if you suspect any level of damage.
- Remove all materials from the back or the side walls of the appliance that may prevent proper installation or ventilation.
- Remove all protective films from the appliance. Do not use sharp or pointed objects for this.

10 Setting up the appliance

Risk of injury due to heavy appliance!

Have two people transport the appliance to its installation site.

Danger of injury and damage due to the appliance being unstable!

The appliance can topple over.

Secure the appliance as described in the instructions.

Fire hazard and danger of damage!

Do not place appliances emitting heat e.g. microwaves, toasters etc. on the appliance!

If possible, have the appliance installed in the kitchen unit by a professional.

Do not install the appliance on your own.

10.1 After installation

▶ Remove all transport safety components.



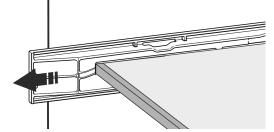


Fig. 7 *

 

Disposing of packaging

 Pull off the transport lock on the appliance door.



 Clean the appliance (see User Guide, Cleaning the appliance).

11 Disposing of packaging

Danger of suffocation due to packing material and plastic film!

Do not allow children to play with packing material.

The packaging is made of recyclable materials:

- corrugated board/cardboard
- expanded polystyrene parts
- polythene bags and sheets
- polypropylene straps
- nailed wooden frame with polyethylene panel*
- Take the packaging material to an official collecting point.

12 What the symbols mean

| | Risk of injury here! Follow the safety notes! |
|------|---|
| * | These instructions apply to a range of models. Follow this step only if it applies to your appliance. |
| R.F. | To install, please follow the detailed description in the Guide. |
| | This section applies either to a single-door appliance or a double-door appliance. |
| | Choose one of the options: Appli- ance with right-hinged door or appliance with left-hinged door. |
| | Installation step required if your model has IceMaker and/or Infini- tySpring. |
| | Just loosen the screws or tighten them slightly. |


| | | Tighten the screws. |
|---------|-------------|---|
| * i- | | Check to see if the next step applies for your model. |
| | | Check the correct assembly/seat of the components used. |
| ic | malandari | Measure the specified measure- ment and adjust if necessary. |
| | | Tool for assembly: Metre rule |
| ıg | | Tool for assembly: Cordless screwdriver and attachments A lengthwise bit insert is recom- mended for good access to the screws. |
| e | R STATE | Tool for assembly: Spirit level |
| a p | SW7 SW10 | Tool for assembly: Size 7 and size 10 spanners |
| 9 | | Two people are required for this step. |
| a - | | Carry out this step at the marked place on the appliance. |
| - r | | Aids for assembly: String |
| r - | | Aids for assembly: Square |
| n | | Aids for assembly: Screwdriver |
|] | | Aids for assembly: Scissors |

**** freezer compartment door*

| A THE A | Aids for assembly: Non-permanent marker pen |
|---------|--|
| | Accessory kit: Remove compo- nents |
| 3 | Dispose of components that are no longer needed. |

13 **** freezer compartment door*

It is very easy to reposition the hinge of the **** freezer compartment door if the main door hinge is swapped. If the main door of the appliance can be opened to more than 115° (1), you can open the freezer compartment without repositioning the hinge. If the opening angle (2) of the appliance door is less than this, the hinge must be repositioned.

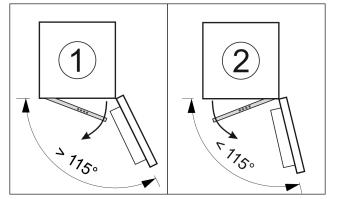



13.1 Moving the door hinge

The slider for moving the door hinge is located on the back of the **** freezer compartment door at the bottom.

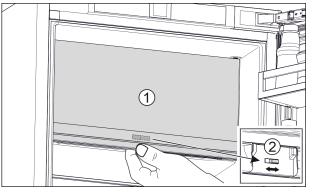


Fig. 9

- Close the **** freezer compartment door (1).
- Grab the **** freezer compartment door from below.
- Move the slider (2) either to the right or to the left.

14 Reversing the door

Tool





Fig. 10

NOTICE

Live parts!

Damage to electrical components.Disconnect the power plug before reversing the door.

20

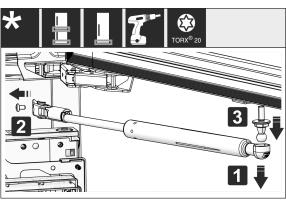


Fig. 11 *

Removing the soft stop damper: Remove the soft stop damper from the ball stud (1). Unscrew the retainer (2). Remove the ball stud with a screwdriver (3).*

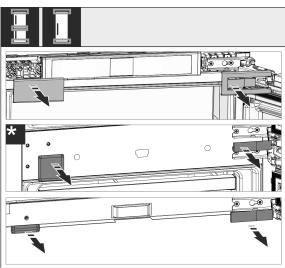


Fig. 12

Remove covers.

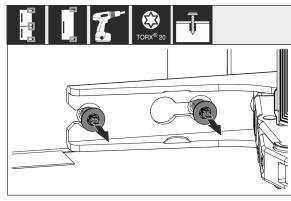


Fig. 13

▶ Loosen the screws on **all** hinges but do not remove them.

Reversing the door

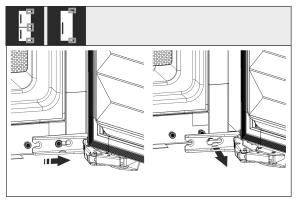


Fig. 14

Removing the door: Push the door forward and then out, unhang it and put it to one side.

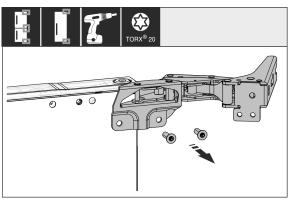


Fig. 15

Unscrew all hinges and set aside together with the screws.

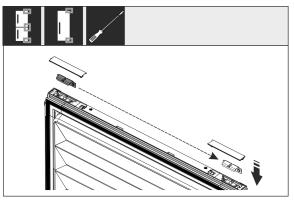


Fig. 16

Loosen and shift the bracket at the top and bottom of the door. The bracket must be shifted so you can screw on the hinges.

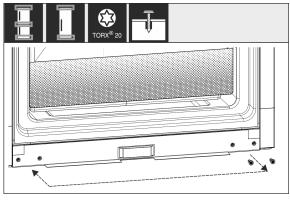


Fig. 17

Shift the screws to fasten the hinge. Do not screw tightly after shifting – you need to hang the hinges later.


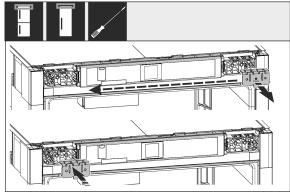


Fig. 18

• Move the fixing bracket to the opposite side.

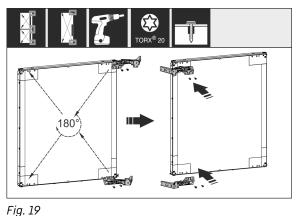

► Turn all hinges 180° to the opposite side and screw firmly.

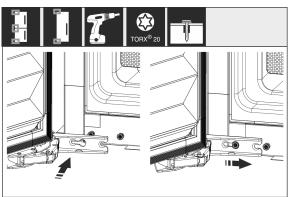


Fig. 20

Refitting the door: Hang the door with its hinges and tighten the screws.

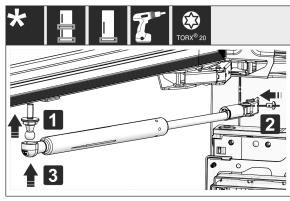


Fig. 21 *

- Refitting the closing dampers: Screw in the ball studs (1), tighten the bracket (2) and hang the closing dampers in the ball studs.*
- Check all screws and retighten if necessary.

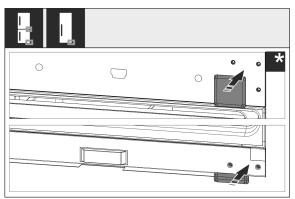


Fig. 22

Reassemble the bottom and centre cover. Only replace the remaining covers after installing the appliance back into the cabinet.

15 Connecting the appliance to the water supply*

Make sure that the following requirements are fulfilled:

- □ The dimensions for the water supply connection are known and complied with. (see 7.1 Dimensions for the water connection)
- □ The correct water pressure is maintained. (see 7.1 Dimensions for the water connection)
- □ Water is supplied to the appliance via a cold water pipe which can withstand the operating pressure and is connected to the drinking water supply.
- □ All equipment and devices used to supply water must comply with the regulations in force in the respective country.
- □ The rear of appliance is accessible so that you can connect the appliance to the drinking water supply.
- □ The supplied hose is used. Old hoses have been disposed of.
- $\hfill\square$ The hose connector contains a filter with a seal.
- There is a tap between the hose line and the domestic water connection so that you can turn off the water supply if necessary.
- □ The tap is not directly behind the appliance and is easily accessible. This way, you can push the appliance as far as possible into the cabinet recess and can quickly turn off the tap if necessary.

Risk of electric shock from water!

- Before connecting to the water pipe: Disconnect the appliance from the mains.
- Before connecting to water supply lines: Shut off the water supply.
- Make sure that only qualified personnel connect the device to the drinking water supply.

Risk of poisoning due to contaminated water!

Only connect to the drinking water supply.

15.1 Connecting the hose

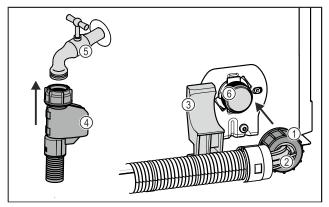


Fig. 23

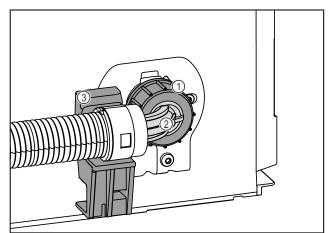


Fig. 23

(1) Nut

- (2) Angled hose end
- (3) Bracket
- (4) Straight hose end
- (**5**) Tap
- (6) Solenoid valve: The solenoid valve is at the bottom on the back of the appliance. It has an R3/4 connecting thread.

NOTICE

- Risk of damage from incorrect installation!
- Do not damage or kink the hose.
- Do not damage or kink the hose during installation in the cabinet recess.

Connecting the hose to the appliance:

- Position and hold the angled hose end Fig. 23 (2) horizontally on the bracket Fig. 23 (3).
- Screw on the nut *Fig. 23 (1)* on by hand until it is firmly in place.
- Dash The hose is connected to the appliance.

Connecting the hose to the tap:

- Connect the straight hose end Fig. 23 (4) to the tap Fig. 23 (5).
- \triangleright The hose is connected to the tap.

15.2 Checking the water system

Before you completely install the appliance in the cabinet recess, Liebherr recommends checking the water system for leaks.

- Put in the InfinitySpring water tank. (see 18 Water tank*) *
- Put in the InfinitySpring water filter. (see 19 Water filter*)
- ▶ Slowly turn on the tap.
- Check the hose, water feed and connections for leaks.

- \triangleright The water system has now been checked for leaks.
- \triangleright The water system is not leaking: You can install the appliance completely in the cabinet recess.

Note

InfinitySpring: Before the first use, you must put the InfinitySpring into operation. To do this you must bleed and clean the water system. (see Quick Start Guide or operating instructions)*

IceMaker: Before the first use, you must clean the IceMaker. (see Quick Start Guide or operating instructions)*

16 Installing the appliance in the recess

Tool



Fig. 24 Supplied assembly parts

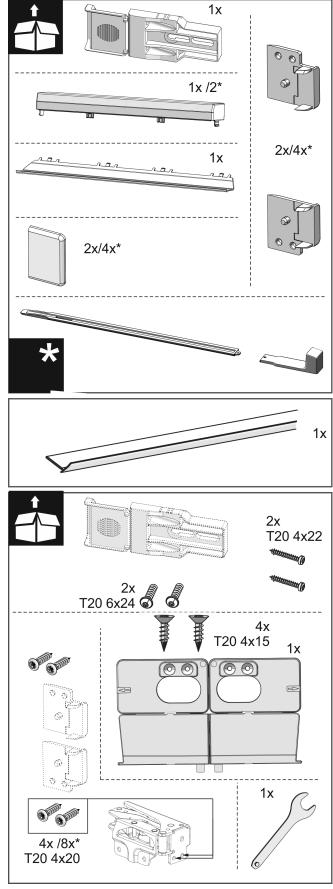


Fig. 25

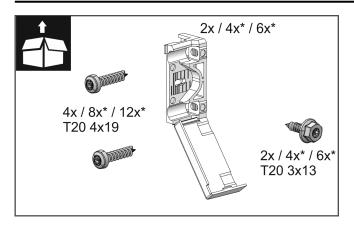


Fig. 26

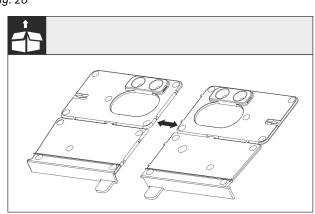


Fig. 27

Separate the floor mounting bracket Fig. 27 () at the perforation.

NOTICE

Correct installation depth of the appliance.

Using the mounting bracket ensures the correct installation depth of the appliance.

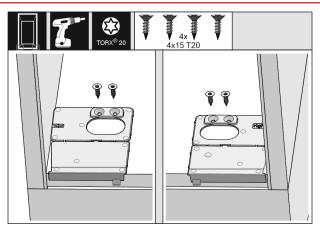


Fig. 28

Screw the mounting brackets on the left and right of the recess floor, flush to the side wall.

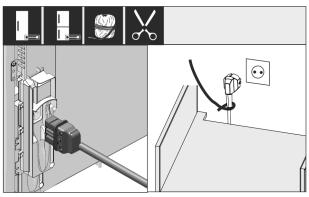


Fig. 29

- Remove the power cable from the package and plug it into the back of the appliance.
- ► Use a string to route the power plug cord to the accessible socket.

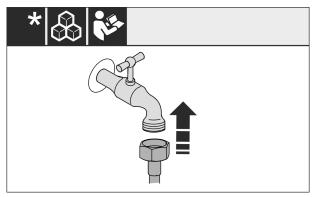


Fig. 30 *

If necessary, install the water connection at this point, following the instructions in the User Guide.*


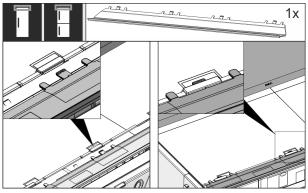


Fig. 31

Insert the adapter panel on the top of the appliance. The panel can be moved to both sides.



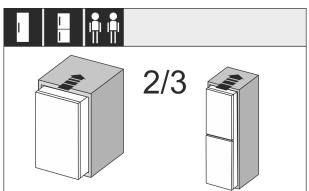

▶ Insert the appliance 2/3 of the way into the recess.

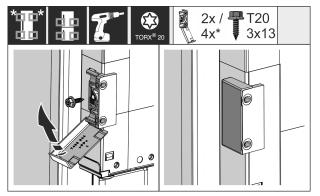


Fig. 33

- Fit the mounting bracket. Attach the mounting bracket at the height of the custom door panel handle. For a large door, use four mounting brackets.
- After assembly, fold the covers onto the bracket.

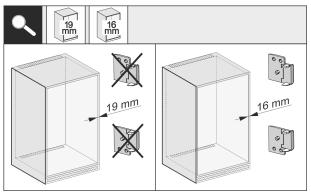


Fig. 34

 Check whether the unit side wall is 16 mm or 19 mm thick.

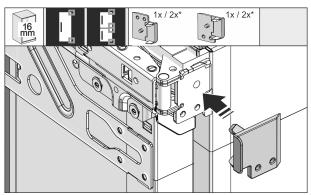


Fig. 35

- ▶ 16 mm thick unit side walls: Put a spacer on all hinges.
- ▶ 19 mm thick unit side walls: You do not need a spacer.



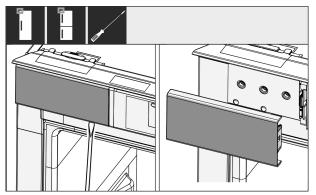


Fig. 36


► Use a screwdriver to loosen the cover at the top left and remove it.

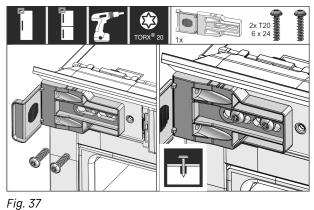

- . 37 Selv tighten th
- Loosely tighten the mounting bracket screw. The bracket should still be easy to move.

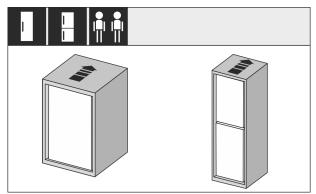



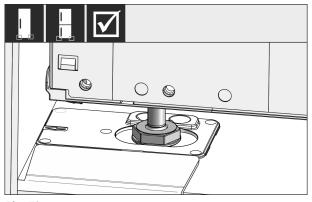

- Fig. 39
- Push the appliance all the way into the unit recess. The adjustable feet must rest in the recesses in the brackets on both sides.

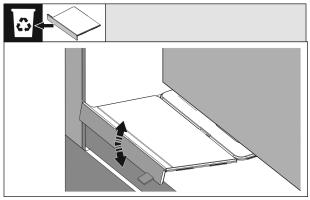


Fig. 40

Remove the floor mounting bracket stopper. Loosen the stopper by moving it and, if necessary, pull it off using pliers.

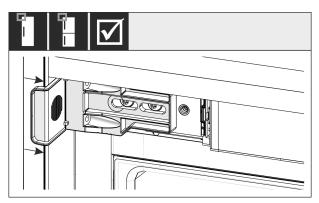


Fig. 41

Check that the appliance is flush in the cabinet recess. The mounting bracket must be attached to the side wall of the cabinet recess.

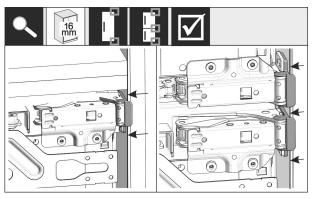


Fig. 42

Note

With 16 mm unit side walls, the spacers fit against the unit recess on the hinge side.

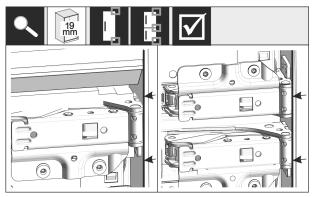


Fig. 43

▶ 19 mm thick unit side walls: Align the front of the hinges flush with the unit side wall.

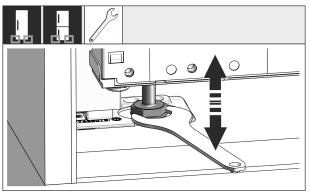


Fig. 44

If necessary, use the adjustable feet to correct the tilt of the appliance.

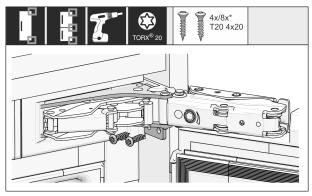


Fig. 45

Screw on the appliance on the hinge side.

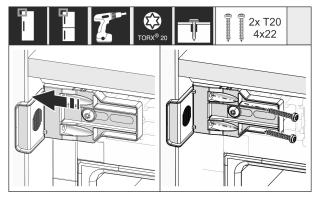


Fig. 46

- Move the bracket so it sits flush on the side wall of the cabinet recess.
- Tighten all the screws securely.

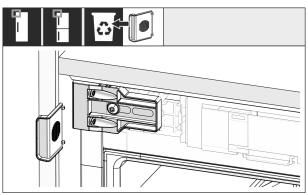


Fig. 47

Remove the stop from the bracket on the handle side and dispose of it.

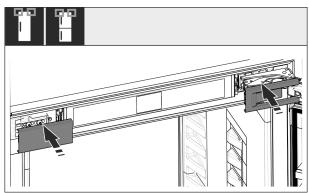


Fig. 48Put covers into position.

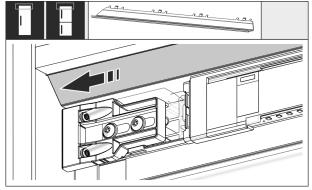


Fig. 49

Slide the panel so that it sits flush with the side of the cabinet wall.

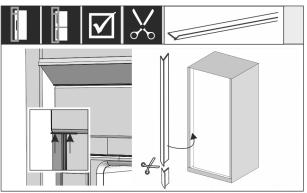


Fig. 50

- If necessary: Shorten the sealing strip as necessary with a sharp pair of scissors.
- Position the sealing strip below the top cover and press it in. The sealing strip is magnetic.

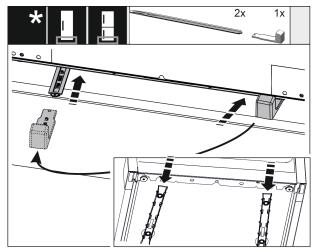


Fig. 51

The height adjustment is only supplied as standard for recess heights of 1400 mm and above. It is used for sound optimisation. Both parts of the height adjuster are included in the accessory kit.

- Stabilise the bottom of the appliance at the rear:
- Plug the grip into the height adjuster rail.
- Push the rail into the bottom of the appliance.
- Pull off the grip.
- Do the same thing with the second rail.

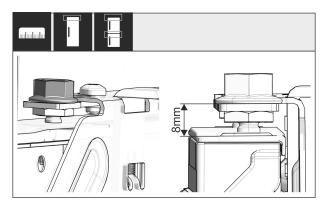


Fig. 52

- Close the door.
- Check the preset of 8 mm from the upper edge of the appliance door to the crosspiece support.

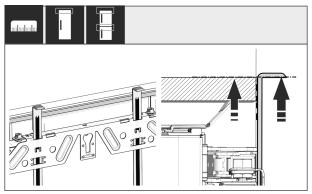


Fig. 53

Push the assembly aids to the unit door height. Lower stop edge of the assembly aid = upper edge of the door to be assembled.

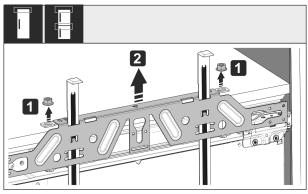


Fig. 54

- Loosen locknuts *Fig. 54 (1)*.
- Remove crosspiece Fig. 54 (2).

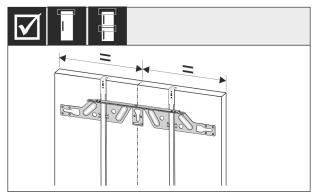


Fig. 55

Hang the crosspiece on the inside of the unit door and make sure it is central.

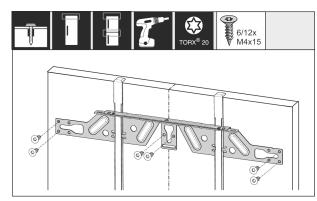


Fig. 56

▶ Fix the crosspiece using at least 6 screws for chipboard doors and at least 4 screws for panel doors.

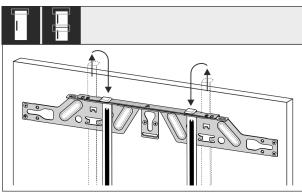


Fig. 57

Remove the fitting aids, turn round and insert into the adjacent opening.

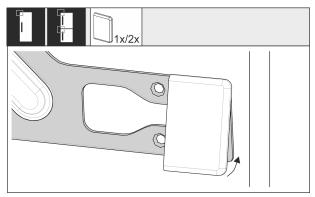


Fig. 58

▶ Put the cover on the crosspiece on the handle side.

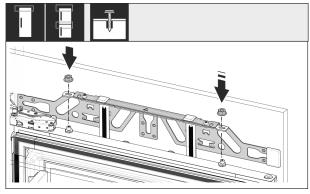


Fig. 59

Attach the custom panel and loosely screw the lock nuts onto the adjusting bolts.


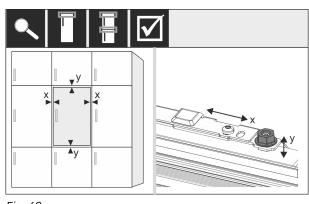


Fig. 60

Align the custom panel in the X and Y direction using the adjusting bolts.



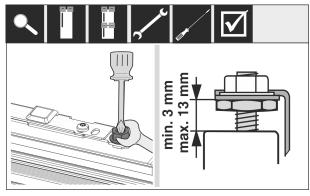

►

- Tighten the lock nuts.
- Check the adjusted height.


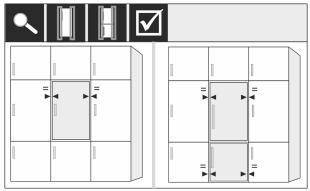


Fig. 62

For front panels thicker than 19 mm:

 Check the dimensions, weights and information in the following sections: (see 6 Custom panel weights) (see 17 Cabinet fronts)



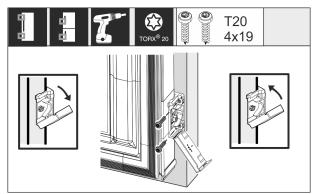

Cabinet fronts

Mounting the fastening bracket on the custom panel:Open the cover.

- Mounting the fastening bracket on the custom panel:
- Align the front edge of the mounting bracket parallel with the custom door panel edge and screw the bracket down tightly.

Mounting the fastening bracket on the custom panel:

Fold up the cover.

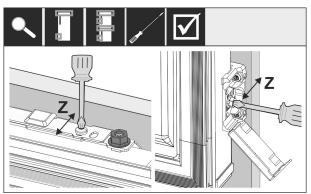


Fig. 64

Align the custom panel in the Z direction:

- Loosen the adjusting screw on the crosspiece and the screw on the mounting bracket.
- Move the door.

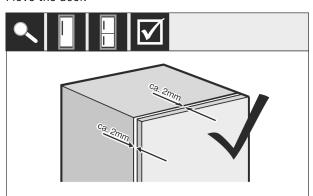


Fig. 65

- Check the gap between the custom panel and the unit body.
- Check all the screws and tighten them if necessary.

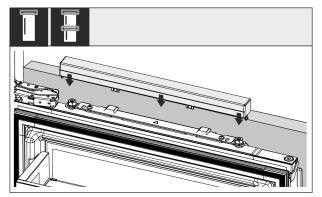


Fig. 66

Put on the top cover.

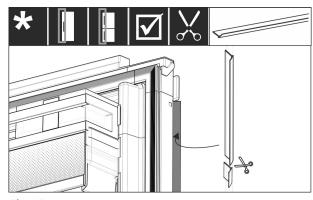


Fig. 67

- Cut the sealing strip to the required length.
- Insert the sealing strip between the front panel and the appliance door.

To make sure the appliance is correctly installed and there will not be any icing up, condensation or malfunctions, the following criteria apply:

- The door must close properly.
- The custom door panel must not touch the body of the unit.
- The seal on the upper corner on the handle side must be fitted securely.
- Check recess installation according to the criteria above.

17 Cabinet fronts

17.1 Dimensions

Depending on your model, you will need one or two cabinet doors. The size of the cabinet door(s) depends on the overall recess size and cabinet unit thickness.

Note

Observe the corresponding appliance and niche dimensions and installation sketches .

General requirements:

- Please note our appliance-specific recommendations on size and weight for fixed door installation (see 6 Custom panel weights).
- The body of the unit should be at least 16 mm thick but not more than 19 mm.
- When mounting a 2-door cabinet door, observe the recommended clearances.

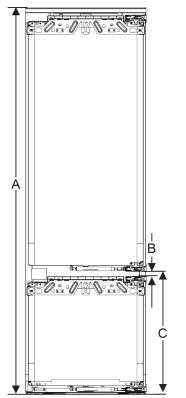


Fig. 68 Clearances for a 2-door cabinet door*

| Pagaga baight 179.2 drawara* | | | | |
|----------------------------------|-----------------------|--|--|--|
| Recess height 178-2 drawers* | | | | |
| Appliance height (A) (mm) 1770 | | | | |
| Distance (B) (mm) 15 | | | | |
| Clearance (C) door-on-door (mm) | 549+15 (21 5/8 + 5/8) | | | |
| Recess height 178-3 drawers* | | | | |
| | | | | |
| Appliance height (A) (mm) 1770 | | | | |
| Distance (B) (mm) 15 | | | | |
| Clearance (C) door-on-door (mm) | 695+15 (27 3/8 + 5/8) | | | |

Other cabinet door above, below or next to it:

- The vertical gap between custom panels must be 4 mm.
- The horizontal gap between custom panels must be 4 mm. Check the risk of them clashing here. (see 17.3 Setting the clearance to avoid collision)

Weight and hinges:

- With heavy furniture fronts, the stress on the hinge is very high. The hinge may be damaged. Please note the maximum weight specification for your appliance in the chapter Furniture front weights (see 6 Custom panel weights).
- If the cabinet front exceeds the maximum permitted weight, an appliance with door-tracking device can help by loading the weight over several concealed hinges on the cabinet.
- If you use long unit fronts that protrude far above the appliances, we recommend an additional door hinge (e.g. Kamat), which must have the same pivot point as the fixed door hinge used with your appliance. By using another hinge (Kamat), the weight is shared over several points. The use of a milled compensating fastening is recommended for high unit fronts to counteract warping (convex/concave).

17.2 Mounting the cabinet front(s)

When installing, note:

- Cabinet front must be installed symmetrically to the refrigerator door.
- Adjoining cabinet front is exactly level.
- Adjoining cabinet front has the same edge radius as the front of the appliance.
- Cabinet front is flat and tension-free.
- The front panel has a minimum depth setting of approx. 2 mm to the body.
- ► Install the appliance in the recess. (see 16 Installing the appliance in the recess)
- Fasten the front panel to the appliance door. (see 16 Installing the appliance in the recess)
- Check that the front panel can close unobstructed. (see 17.3 Setting the clearance to avoid collision)

17.3 Setting the clearance to avoid collision

After installing the cabinet front(s), check that the cabinet fronts do not collide.

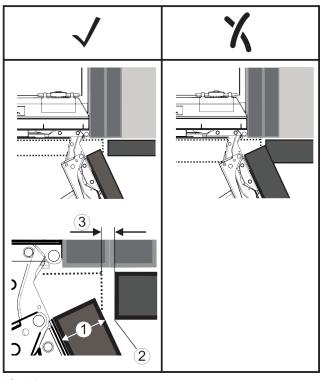


Fig. 69

(1) Front thickness (FD)(2) Edge radius (R)

(3) Clearance (S)

| | R (2) = 0 mm | | R = 1,2 mm | | R = 2 mm | | R = 3 mm | |
|------------|--------------|------|------------|------|----------|------|----------|------|
| FD(1) (mm) | Gmin | Gmax | Gmin | Gmax | Gmin | Gmax | Gmin | Gmax |
| 16 | 0,3 | 0,9 | 0,1 | 0,4 | 0,1 | 0,2 | 0,1 | 0,2 |
| 19 | 0,7 | 2,4 | 0,3 | 1,9 | 0,23 | 3,25 | 0,1 | 0,8 |
| 20 | 2 | 4,3 | 1,5 | 3,6 | 1 | 3,1 | 0,6 | 2,7 |
| 22 | 3,5 | 6,3 | 3 | 5,6 | 2,6 | 5,3 | 2,1 | 4,6 |
| 24 | 5,5 | 8,3 | 5 | 7,8 | 4,5 | 7,4 | 4 | 6,9 |
| 26 | 7,6 | 10,7 | 7 | 10,3 | 6,6 | 9,9 | 6,2 | 9,4 |

Fig. 70 Table of clearance limits

G_{min} = min. clearance in mm

G_{max} = max. clearance in mm

Note

When making adjustments, always make sure that the cabinet front suits the general appearance.

Check the collision factors and adjust them accordingly:

- Determine the front thickness and edge radius.
 Refer to the table for the min./max. clearance dimensions.
- Check the clearance size against the table.
- Do one of the following depending on the measured clearance size.

| Clearance | Description |
|--|---|
| S > G _{max} | If the clearance size is greater than the two limits, you do not need to make any adjust- ments. |
| S < G _{min} | If the clearance size is below the limits, you must increase it. Another option is to increase the edge radius. |
| G _{min} ≤ S ≤ G _{max} | If the clearance is between the two limits, you have to be careful. This will quickly lead to collisions. |

18 Water tank*

Depending on your model, the InfinitySpring water tank is behind the lowest drawer in the fridge or BioFresh compartment

18.1 Inserting the water tank

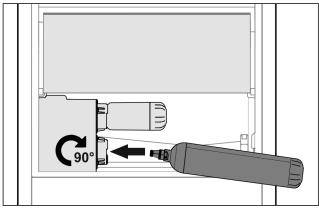


Fig. 71

- Remove the drawer compartment.
- Insert the water tank and rotate approx. 90° clockwise until it clicks in.
- Check that the tank is sealed and no water leaks out.
- Insert the drawer compartment.
- Vent the water system (see the Installation Instructions, Water Connection)

Instead of the water filter you can insert an additional water tank.

Note

You can purchase this water tank as an optional extra.

19 Water filter*

Depending on your model, the water filter is behind the lowest drawer in the fridge or BioFresh compartment.

It filters out deposits in the water and reduces the taste of chlorine.

- Replace the water filter at least every 6 months, or if there is a significant reduction in the flow rate.
- The water filter contains carbon and can be disposed of with the regular household waste.

Note

Water filters are available from the Liebherr-Hausgeräte store at home.liebherr.com/shop/de/deu/zubehor.html.

19.1 Inserting the water filter

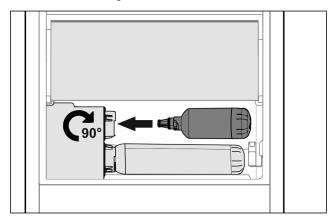


Fig. 72

- ▶ Remove the drawer compartment.
- Insert the water filter and rotate approx. 90° clockwise until it clicks in.
- Check that the filter is sealed and no water leaks out.
- ▶ Insert the drawer compartment.

New water filters can contain suspended matter.

- Draw 3 l of water from the InfinitySpring and dispose of it.
- \triangleright The water filter is now ready for use.

20 Connecting the appliance to the power supply

Danger of electric shock and injury due to damaged appliance or damaged mains cable!

Danger of cuts and fatal injuries. If the appliance or the mains cable is damaged during transport, you may be electrocuted. You could also cut yourself on damaged parts of the appliance housing.

- Check the appliance and the mains cable for damage after transport.
- Never put the appliance into operation if the appliance or the mains cable are damaged.
- Contact Customer Service.

You can connect your appliance to the mains using the power cable supplied separately. The mains power cable has an appliance coupler at one end and a mains plug at the other end.

Make sure that the following requirements are fulfilled:

- The appliance and power cable are undamaged.
- The appliance is installed in accordance with the regulations. (see 16 Installing the appliance in the recess)
- Requirements for the electrical connection are met. (see 2.3 Mains connection)
- Dimensions for connection in accordance with regulations are known and observed.
- Mains voltage and frequency correspond to the specifications on the type plate.

- The socket is earthed according to the regulations and fused.
- The fuse tripping current is between 10 A and 16 A.
- The socket is easily accessible and is not behind the appliance (see 4 Recess dimensions) .

NOTICE

Danger of damage to incorrect operation!

 
- Damage to the electrical components of the appliance.
- Only use the supplied mains cable.



Danger of fire due to incorrect connection! Burns.

Damage to the appliance.

- ▶ Do not use an extension cable.
- ► Do not use distributor blocks.



NOTICE

Danger of damage to incorrect connection!

- Damage to the appliance.
- Do not connect the appliance to a stand-alone inverter, e.g. solar power systems and petrol generators.
- Connect the mains plug of the power cable to the power supply.
- ▷ The Liebherr logo appears in the display.*
- \triangleright The display switches to the standby symbol.*
- \triangleright If no action occurs within 60 seconds: The standby symbol fades or disappears.
- The appliance is connected. For information regarding first use, see the following section or the operating instructions.



home.liebherr.com/fridge-manuals

EN built-in fridges and freezers, fixed door

Issue date: 20240423

Part number index: 7088411-00

Liebherr-Hausgeräte GmbH Memminger Straße 77-79 88416 Ochsenhausen Deutschland





home.liebherr.com/fridge-manuals




General safety instructions

Contents

| 1 | General safety instructions | 2 |
|-----------------------------------|---|-----------------------------|
| 2 2.1 2.2 2.3 | Installation conditions Location Installing multiple appliances Mains connection | 3 3 3 4 |
| 3 | Appliance dimensions | 4 |
| 4 4.1 | Recess dimensions Internal dimensions | 5 5 |
| 5 | Ventilation requirements | 6 |
| 6 | Custom panel weights | 6 |
| 7 7.1 7.2 | Water connection* Dimensions for the water connection Water pressure | 6 7 7 |
| 8 | Transporting appliance | 7 |
| 9 | Unpacking the appliance | 7 |
| 10 10.1 | Setting up the appliance After installation | 7 7 |
| 11 | Disposing of packaging | 8 |
| 12 | What the symbols mean | 8 |
| 13 13.1 | **** freezer compartment door* Moving the door hinge | 9 9 |
| 14 | Reversing the door | 9 |
| 15 15.1 15.2 | Connecting the appliance to the water supply* Connecting the hose Checking the water system | 11 11 11 |
| 16 | Installing the appliance in the recess | 12 |
| 17 17.1 17.2 17.3 | Cabinet fronts Dimensions Mounting the cabinet front(s) Setting the clearance to avoid collision | 18 18 19 19 |
| 18 18.1 | Water tank* Inserting the water tank | 20 20 |
| 19 19.1 | Water filter* Inserting the water filter | 20 20 |
| 20 | Connecting the appliance to the power supply | 20 |

The manufacturer is continually working on the further development of all types and models. Please be aware that we reserve the right to make changes to the shape, equipment and technology.


| Symbol | Explanation |
|--------|--|
| | Read instructions Please read the information in these instruc- tions carefully to understand all of the benefits of your new appliance. |

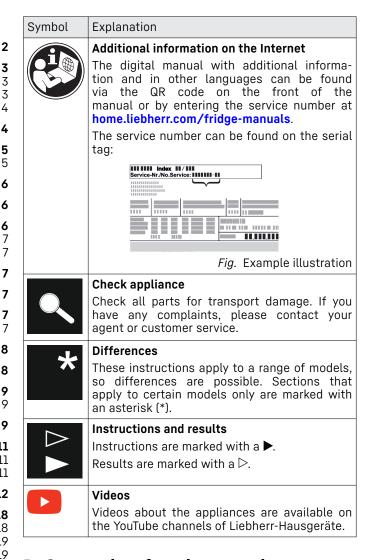

1 General safety instructions

- Please keep this assembly manual in a safe place so you can refer back to it at any time.
- If you pass the appliance on, please hand this assembly manual to the next user.
- Read this assembly manual carefully before installation and use to ensure safe and correct use of the appliance. Follow the instructions, safety instructions and warning messages included at all times. They are important for ensuring you can operate and install the appliance safely and without any problems.
- First read the general safety instructions in the "General safety instructions" section of the operating instructions, which accompany these installation instructions, and follow them. If you cannot find the operating instructions, you can download the operating instructions from the internet by entering the service number at home.liebherr.com/fridge-manuals. The

 service number can be found on the serial



tag:

Observe the warning messages and other detailed information in the other sections when installing the appliance:

| Â | DANGER | identifies a situation involving direct danger which, if not obvi- ated, may result in death or severe bodily injury. |
|-------------|---------|--|
| \triangle | WARNING | identifies a dangerous situation which, if not obviated, may result in death or severe bodily injury. |
| \triangle | CAUTION | identifies a dangerous situation which, if not obviated, may result in minor or medium bodily injury. |
| | NOTICE | identifies a dangerous situation which, if not obviated, may result in damage to property. |
| | Note | identifies useful instructions and tips. |

2 Installation conditions



Fire hazard due to dampness!

If live parts or the mains lead become damp this may cause short circuits.

The appliance is designed for use in enclosed areas. Do not operate the appliance outdoors or in areas where it is exposed to splash water or damp conditions.

Intended use

- Install and use the appliance in indoor spaces only.
- Use the appliance only once installed.

2.1 Location



Leaking coolant and oil!

Fire. The coolant contained in the appliance is eco-friendly, but also flammable. The oil contained in the appliance is flammable. Escaping coolant and oil can ignite if the concentration is high enough and in contact with an external heat source.

- Do not damage the pipelines of the coolant circuit and the compressor.
- If the appliance is installed in a very humid environment, condensation can build up on the outside of the unit.

Always ensure good airlow and ventilation in the installation location.

The more refrigerant there is in the appliance, the larger the space that it is installed in must be. If the space is too small, any leak may create a flammable mixture of gas and air. For every 8 g of refrigerant, the installation space must be at least 1 m^3 . Information regarding the coolant can be found on the serial tag inside the appliance.

2.1.1 Supporting floor

- The floor of the installation site must be horizontal and even.
- If you are installing the unit in a cabinet standing on an uneven floor: level the cabinet.

2.1.2 Positioning

- Do not install the appliance in direct sunlight or near radiators or similar sources of heat.
- You can install the appliance directly next to an oven.
- If the appliance is installed directly next to an oven, the energy consumption may increase slightly. This is dependent on the service life and usage intensity of the oven.
- Only fit the appliance into solid kitchen units.

Note

Please contact Customer Services to acquire a kit to limit the door opening angle to 90° for appliances with soft close mechanisms.*

2.2 Installing multiple appliances

NOTICE

Risk of damage due to condensate!

► Do not install the appliance directly alongside a further refrigerator/freezer.

NOTICE

- Risk of damage due to condensation!
- Do not install the appliance directly above another refrigerator or freezer.

These appliances are designed for a variety of installation options. Combine appliances only if the appliance is suitable. The following table shows the installation options by model:

| Installation option | Model |
|-----------------------|--|
| Single | All models |
| Side-by-side (SBS) | Model names starting with S . |
| Stacked | Models up to a maximum recess height of 880 mm and with a heated cover can be "stacked". |
| | Upper appliance: up to a maximum recess height of 140 mm |

Appliance dimensions

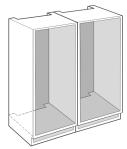


Fig. 1

Build each appliance into a separate recess.


2.3 Mains connection

Danger of fire due to incorrect positioning!

If the mains cable or plug touches the back of the appliance, the vibration can damage the mains cable or the plug resulting in a short circuit.

- Make sure the mains cable is not trapped under the appliance when you position the appliance.
- Stand the appliance so that it is not touched by connectors or main cables.
- Do not connect any appliances to sockets in the area of the back of the appliance.
- Do not place and operate multi-sockets/power distributors and other electronic devices (such as halogen transformers) at the back of the appliances.

3 Appliance dimensions

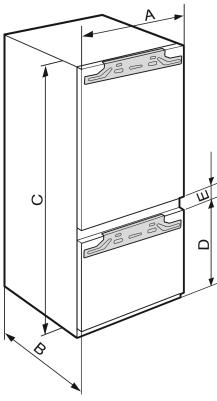

| | A (mm) | B (mm) | C (mm) | D (mm) | E (mm) |
|--|-----------|-----------|-----------|-----------|-----------|
| ICB 512 | | | | 549 | |
| IC 513 S/ICN 513 ICBN 513 ICBN 513 IC/B/N/bsci 51 IKG 51Ve03 / IKGN 51Vc03 / IKGN 51Ve03 / IKGBN 51Vd23i | 559 | 546 | 1770 | 695 | 15 |
| ICN563 ICBN563 | | | 1938 | | |

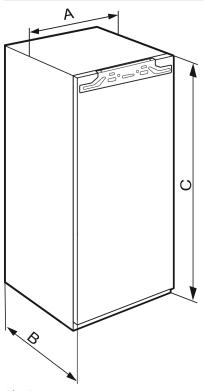


Fig. 3

Fig. 2

| | A (mm) | B (mm) | C (mm) |
|---|--------|--------|--------|
| IFN 35 | | | 712 |
| IR 39 SIBai 39 SIBa20i 39 S/IF/N 39 | | | 872 |
| IR 40 IRB 40 | • | | 1022 |
| IR 41 IRB 41 IRBbsbi 41 SIFN 41 | | | 1213 |
| IR 45 IRB 45 IRBbsbi 45 SIFN 45 | 559 | 546 | 1395 |
| IRB 48 | | | 1572 |
| IR 51 IRD 51 IRB 51 IRBbsci 51 IRBP 51 IRBPbsci 51 SIFN 51 SIFN 51 IK 51Ve00 / IK 51Ve01 / IKB 51Vc50i / IKB 51Vc51i | | | 1770 |

4 Recess dimensions

4.1 Internal dimensions

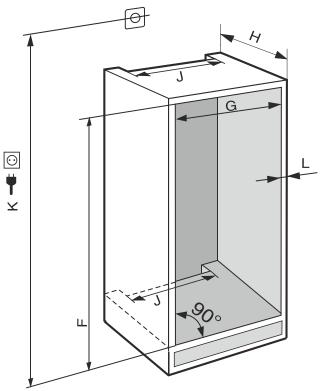


Fig. 4 **(K):** max. 2100 mm

Observe the following information for devices with a fixed water connection:

- Water connection (see 7 Water connection*)
- Connecting the device to the water supply (see 15 Connecting the appliance to the water supply*)

| IFN(i) 35 | IFN(i) 35 | | | | |
|------------|--------------------------------------|--|--|--|--|
| F (mm) | 714 to 730 | | | | |
| G (mm) | 560 to 570 | | | | |
| H (mm) | min. 550, recommended 560 | | | | |
| J (mm) | min. 500 | | | | |
| L (mm) | max. 19 | | | | |
| IFN(i) 39 | / IR(i) 39 / SIBa20i 3905 / SIFNi 39 | | | | |
| F (mm) | 874 to 890 | | | | |
| G (mm) | 560 to 570 | | | | |
| H (mm) | min. 550, recommended 560 | | | | |
| J (mm) | min. 500 | | | | |
| L (mm) | max. 19 | | | | |
| IR(B)(i) 4 | IR(B)(i) 40 | | | | |
| F (mm) | 1024 to 1040 | | | | |
| G (mm) | 560 to 570 | | | | |
| H (mm) | min. 550, recommended 560 | | | | |
| J (mm) | min. 500 | | | | |
| L (mm) | max. 19 | | | | |

Ventilation requirements

| F (mm) | 1216 to 1236 | | | |
|---------------------------------------|---------------------------|--|--|--|
| G (mm) | 560 to 570 | | | |
| H (mm) | min. 550, recommended 560 | | | |
| J (mm) | min. 500 | | | |
| L (mm) | max. 19 | | | |
| IR(B)(i) 45 / IRBbsbi 4570 / SIFNi 45 | | | | |
| F (mm) | 1397 to 1413 | | | |
| G (mm) | 560 to 570 | | | |
| H (mm) | min. 550, recommended 560 | | | |
| J (mm) | min. 500 | | | |
| L (mm) | max. 19 | | | |
| IRBi 48 | | | | |
| F (mm) | 1574 to 1590 | | | |
| G (mm) | 560 to 570 | | | |
| H (mm) | min. 550, recommended 560 | | | |
| J (mm) | min. 500 | | | |
| L (mm) | max. 19 | | | |

IR(B)(P)..(i) 51.. / IRD..i 51.. / IRBbsci 5170 / IRBbsci 5171 / IRBPbsci 5170 / IKB 51Vc50i / IKB 51Vc51i / IK 51Ve00 / IK 51Ve01 / SICN..i 51.. / SIFN..(i) 51.. / SIFNbsdi 51..

| F (mm) | 1772 to 1788 | |
|----------------------------------|---------------|--|
| G (mm) | 560 to 570 | |
| H (mm) min. 550, recommended 560 | | |
| J (mm) | (mm) min. 500 | |
| L (mm) max. 19 | | |

The specified energy consumption was determined with a kitchen unit depth of 560 mm. The appliance will work properly at a kitchen unit depth of 550 mm, but with a slightly higher energy consumption.

- Check the wall thickness of adjacent cabinets: They must have a minimum of 16 mm .
- ▶ Only fit the appliance into stable, solid kitchen units. Secure the unit against tipping.
- Align the cabinets with a spirit level and a try square. If necessary, level them by putting something underneath them.
- Make sure floor and the side panels of the cabinet are at right angles to each other.

5 Ventilation requirements

NOTICE

Covered vents!

Damage. Appliance can overheat, which can reduce the service life of various parts of the appliance and lead to operational impairments.

- Always make sure there is good ventilation.
- ► Always keep vents or ventilation grids in the appliance housing and in the kitchen furniture (fully integrated appliance) unobstructed.
- Always keep the fan air vents unobstructed.

Always follow the required ventilation gaps:

- The depth of the ventilation shaft at the back of the cabinet must be at least 38 mm.
- At least 200 cm² is required for the ventilation gap cross sections in the plinth and the housing cabinet.
- As a rule, the larger the ventilation cross-section, the more efficiently the appliance will run.

Sufficient ventilation is required for the operation of the appliance. The ventilation grids provided ensure an effective ventilation cross-section on the appliance of 200 cm². If you replace the ventilation grids with a cover plate the ventilation cross-section must be as least as large as the ventilation grid provided by the manufacturer.

6 Custom panel weights

NOTICE

An excessively heavy custom panel can potentially cause damage!

If the custom panel is too heavy, damage to the hinges cannot be ruled out, which may compromise the functionality of the unit.

Before fitting the custom panel, ensure the custom panel does not exceed the permissible weight.

| Recess height (mm)* | Maximum weight of custom panel (kg)* | |
|----------------------------------|--------------------------------------|--|
| 720 | 16 | |
| 880 | 16 | |
| 1020 | 13 | |
| 1220 | 19 | |
| 1400 | 21 | |
| 1580 | 22 | |
| 1780 | 26 | |
| Single-door fridges and freezers | | |

| | height | Maximum weight of custom panel (kg)* | | | | |
|-------|--------|--------------------------------------|--------------------------------|--|--|--|
| (mm)* | | Fridge compartment door* | Freezer compart- ment door* | | | |
| 1780 | | 18 | 12 | | | |
| 1940 | | 18 | 12 | | | |

Customising combinations

7 Water connection*


If your appliance has a fixed water connection, a hose is supplied with it.

Note

You can purchase a hose of a different length as an accessory.

| Overview of dimensions for the water connection: | (see 7.1 Dimensions for the water connection) |
|--|---|
| Requirements for the water pressure: | (see 7.2 Water pressure) |
| Make the water connec- tion: | (see 15 Connecting the appli- ance to the water supply*) |

7.1 Dimensions for the water connection

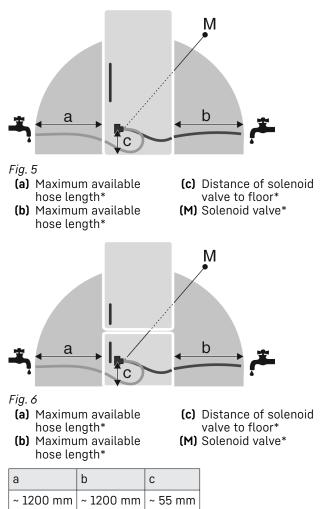

7.2 Water pressure

The water connection line and solenoid valve of the appliance are suitable for a water pressure of up to 1 MPa (10 bar).

To ensure that the appliance functions correctly (flow rate, ice cube size, noise level), maintain the following water pressure:

| Water pressure: | | | | |
|--|--------------|--|--|--|
| bar | MPa | | | |
| 1.5 to 6.2 | 0.15 to 0.62 | | | |
| Water pressure when using the water filter:* | | | | |
| bar* | MPa* | | | |
| 2.8 to 6.2 | 0.28 to 0.62 | | | |

If the pressure is higher than 6.2 bar:

- Fit a pressure reducer.
- Make the water connection. (see 15 Connecting the appliance to the water supply*)

8 Transporting appliance

Note when transporting the appliance:

- Transport the appliance upright.
- ► Use two people to transport the appliance.

During first use:

Transport the appliance packaged.

When transporting appliances after initial commissioning (e. g. moving or cleaning):

- Empty the appliance.
- Secure the door against unintentional opening.

9 Unpacking the appliance

Before you connect the appliance, report any damage immediately to the delivery company.

- Check the appliance and the packaging for damage during transport. Contact the supplier immediately if you suspect any level of damage.
- Remove all materials from the back or the side walls of the appliance that may prevent proper installation or ventilation.
- Remove all protective films from the appliance. Do not use sharp or pointed objects for this.

10 Setting up the appliance

Risk of injury due to heavy appliance!

Have two people transport the appliance to its installation site.

Danger of injury and damage due to the appliance being unstable!

The appliance can topple over.

Secure the appliance as described in the instructions.

Fire hazard and danger of damage!

Do not place appliances emitting heat e.g. microwaves, toasters etc. on the appliance!

If possible, have the appliance installed in the kitchen unit by a professional.

Do not install the appliance on your own.

10.1 After installation

▶ Remove all transport safety components.



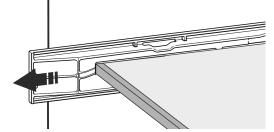


Fig. 7 *

 

Disposing of packaging

 Pull off the transport lock on the appliance door.



 Clean the appliance (see User Guide, Cleaning the appliance).

11 Disposing of packaging

Danger of suffocation due to packing material and plastic film!

Do not allow children to play with packing material.

The packaging is made of recyclable materials:

- corrugated board/cardboard
- expanded polystyrene parts
- polythene bags and sheets
- polypropylene straps
- nailed wooden frame with polyethylene panel*
- Take the packaging material to an official collecting point.

12 What the symbols mean

| | Risk of injury here! Follow the safety notes! |
|---|---|
| * | These instructions apply to a range of models. Follow this step only if it applies to your appliance. |
| | To install, please follow the detailed description in the Guide. |
| | This section applies either to a single-door appliance or a double-door appliance. |
| | Choose one of the options: Appli- ance with right-hinged door or appliance with left-hinged door. |
| | Installation step required if your model has IceMaker and/or Infini- tySpring. |
| | Just loosen the screws or tighten them slightly. |


| | | Tighten the screws. |
|---------|-------------|---|
| * i- | | Check to see if the next step applies for your model. |
| | | Check the correct assembly/seat of the components used. |
| ic | malandari | Measure the specified measure- ment and adjust if necessary. |
| | | Tool for assembly: Metre rule |
| ıg | | Tool for assembly: Cordless screwdriver and attachments A lengthwise bit insert is recom- mended for good access to the screws. |
| e | R STATE | Tool for assembly: Spirit level |
| a p | SW7 SW10 | Tool for assembly: Size 7 and size 10 spanners |
| e | | Two people are required for this step. |
| a - | | Carry out this step at the marked place on the appliance. |
| - r | | Aids for assembly: String |
| r - | | Aids for assembly: Square |
| n | | Aids for assembly: Screwdriver |
| | | Aids for assembly: Scissors |

**** freezer compartment door*

| | Aids for assembly: Non-permanent marker pen | | | | |
|---|--|--|--|--|--|
| | Accessory kit: Remove compo- nents | | | | |
| 3 | Dispose of components that are no longer needed. | | | | |

13 **** freezer compartment door*

It is very easy to reposition the hinge of the **** freezer compartment door if the main door hinge is swapped. If the main door of the appliance can be opened to more than 115° (1), you can open the freezer compartment without repositioning the hinge. If the opening angle (2) of the appliance door is less than this, the hinge must be repositioned.

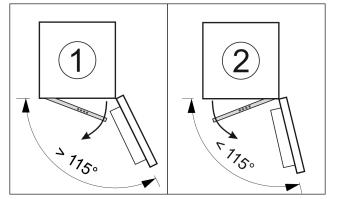



13.1 Moving the door hinge

The slider for moving the door hinge is located on the back of the **** freezer compartment door at the bottom.

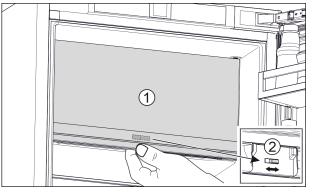


Fig. 9

- Close the **** freezer compartment door (1).
- Grab the **** freezer compartment door from below.
- Move the slider (2) either to the right or to the left.

14 Reversing the door

Tool





Fig. 10

NOTICE

Live parts!

Damage to electrical components.Disconnect the power plug before reversing the door.

20

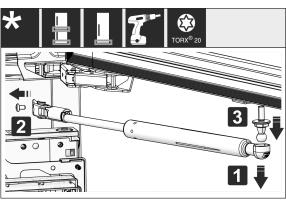


Fig. 11 *

Removing the soft stop damper: Remove the soft stop damper from the ball stud (1). Unscrew the retainer (2). Remove the ball stud with a screwdriver (3).*

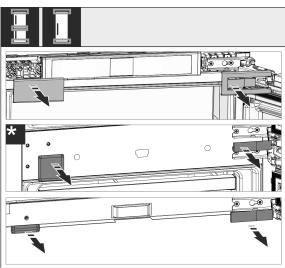


Fig. 12

Remove covers.

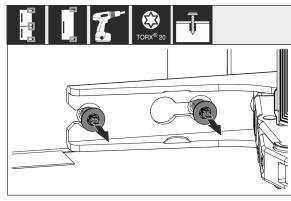


Fig. 13

▶ Loosen the screws on **all** hinges but do not remove them.

Reversing the door

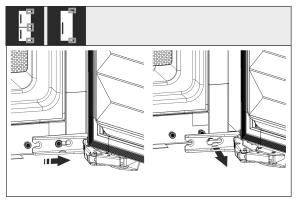


Fig. 14

Removing the door: Push the door forward and then out, unhang it and put it to one side.

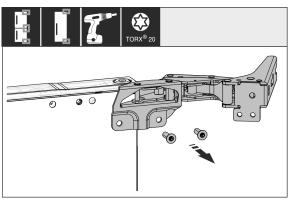


Fig. 15

Unscrew all hinges and set aside together with the screws.

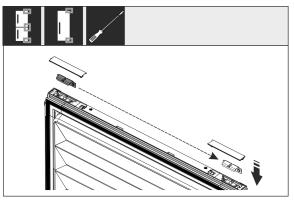


Fig. 16

Loosen and shift the bracket at the top and bottom of the door. The bracket must be shifted so you can screw on the hinges.

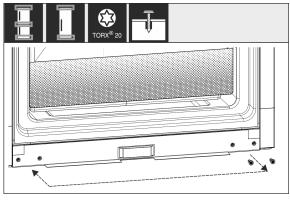


Fig. 17

Shift the screws to fasten the hinge. Do not screw tightly after shifting – you need to hang the hinges later.


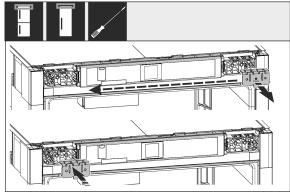


Fig. 18

• Move the fixing bracket to the opposite side.

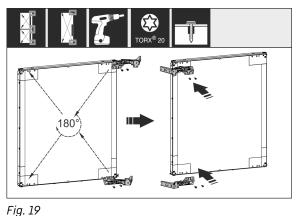

► Turn all hinges 180° to the opposite side and screw firmly.

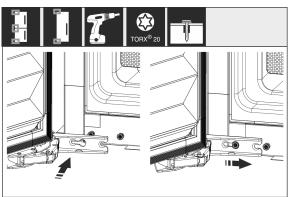


Fig. 20

Refitting the door: Hang the door with its hinges and tighten the screws.

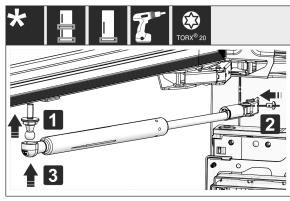


Fig. 21 *

- Refitting the closing dampers: Screw in the ball studs (1), tighten the bracket (2) and hang the closing dampers in the ball studs.*
- Check all screws and retighten if necessary.

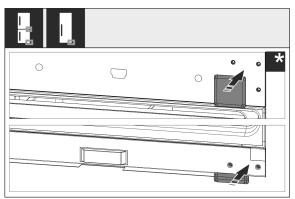


Fig. 22

Reassemble the bottom and centre cover. Only replace the remaining covers after installing the appliance back into the cabinet.

15 Connecting the appliance to the water supply*

Make sure that the following requirements are fulfilled:

- □ The dimensions for the water supply connection are known and complied with. (see 7.1 Dimensions for the water connection)
- □ The correct water pressure is maintained. (see 7.1 Dimensions for the water connection)
- □ Water is supplied to the appliance via a cold water pipe which can withstand the operating pressure and is connected to the drinking water supply.
- □ All equipment and devices used to supply water must comply with the regulations in force in the respective country.
- □ The rear of appliance is accessible so that you can connect the appliance to the drinking water supply.
- □ The supplied hose is used. Old hoses have been disposed of.
- $\hfill\square$ The hose connector contains a filter with a seal.
- There is a tap between the hose line and the domestic water connection so that you can turn off the water supply if necessary.
- □ The tap is not directly behind the appliance and is easily accessible. This way, you can push the appliance as far as possible into the cabinet recess and can quickly turn off the tap if necessary.

Risk of electric shock from water!

- Before connecting to the water pipe: Disconnect the appliance from the mains.
- Before connecting to water supply lines: Shut off the water supply.
- Make sure that only qualified personnel connect the device to the drinking water supply.

Risk of poisoning due to contaminated water!

Only connect to the drinking water supply.

15.1 Connecting the hose

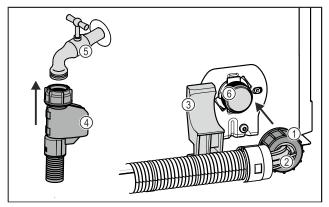


Fig. 23

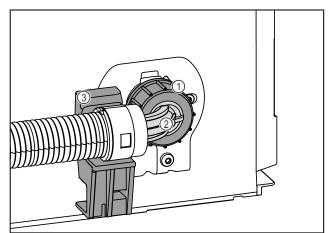


Fig. 23

(1) Nut

- (2) Angled hose end
- (3) Bracket
- (4) Straight hose end
- (**5**) Tap
- (6) Solenoid valve: The solenoid valve is at the bottom on the back of the appliance. It has an R3/4 connecting thread.

NOTICE

- Risk of damage from incorrect installation!
- Do not damage or kink the hose.
- Do not damage or kink the hose during installation in the cabinet recess.

Connecting the hose to the appliance:

- Position and hold the angled hose end Fig. 23 (2) horizontally on the bracket Fig. 23 (3).
- Screw on the nut *Fig. 23 (1)* on by hand until it is firmly in place.
- Dash The hose is connected to the appliance.

Connecting the hose to the tap:

- Connect the straight hose end Fig. 23 (4) to the tap Fig. 23 (5).
- \triangleright The hose is connected to the tap.

15.2 Checking the water system

Before you completely install the appliance in the cabinet recess, Liebherr recommends checking the water system for leaks.

- Put in the InfinitySpring water tank. (see 18 Water tank*) *
- Put in the InfinitySpring water filter. (see 19 Water filter*)
- ▶ Slowly turn on the tap.
- Check the hose, water feed and connections for leaks.

- \triangleright The water system has now been checked for leaks.
- \triangleright The water system is not leaking: You can install the appliance completely in the cabinet recess.

Note

InfinitySpring: Before the first use, you must put the InfinitySpring into operation. To do this you must bleed and clean the water system. (see Quick Start Guide or operating instructions)*

IceMaker: Before the first use, you must clean the IceMaker. (see Quick Start Guide or operating instructions)*

16 Installing the appliance in the recess

Tool



Fig. 24 Supplied assembly parts

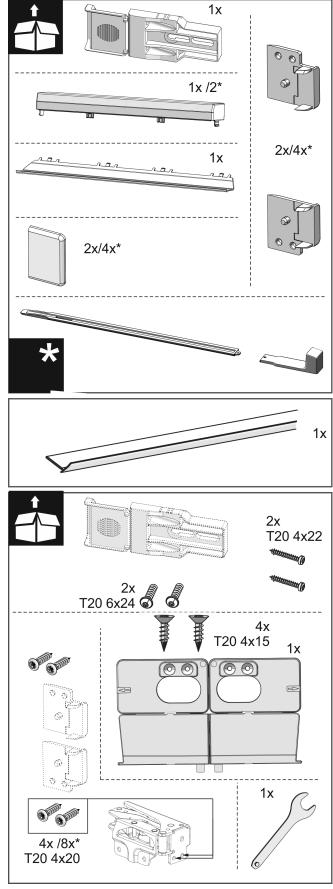


Fig. 25

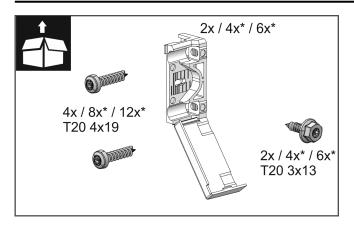


Fig. 26

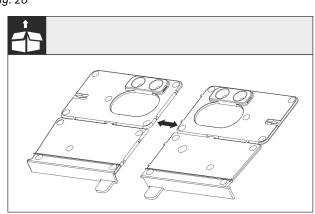


Fig. 27

Separate the floor mounting bracket Fig. 27 () at the perforation.

NOTICE

Correct installation depth of the appliance.

Using the mounting bracket ensures the correct installation depth of the appliance.

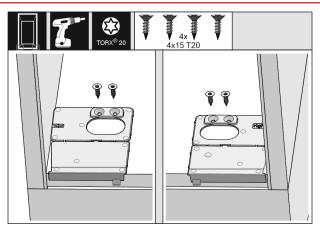


Fig. 28

Screw the mounting brackets on the left and right of the recess floor, flush to the side wall.

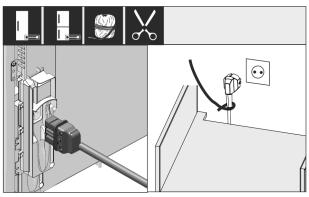


Fig. 29

- Remove the power cable from the package and plug it into the back of the appliance.
- ► Use a string to route the power plug cord to the accessible socket.

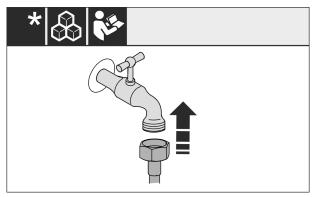


Fig. 30 *

If necessary, install the water connection at this point, following the instructions in the User Guide.*


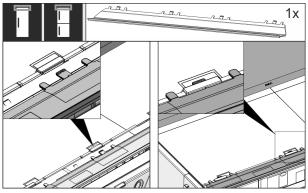


Fig. 31

Insert the adapter panel on the top of the appliance. The panel can be moved to both sides.



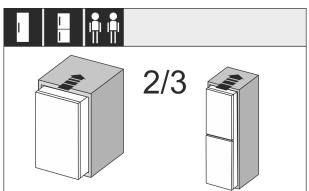

▶ Insert the appliance 2/3 of the way into the recess.

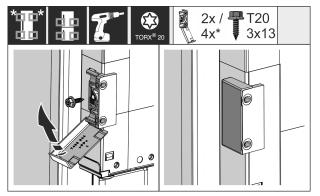


Fig. 33

- Fit the mounting bracket. Attach the mounting bracket at the height of the custom door panel handle. For a large door, use four mounting brackets.
- After assembly, fold the covers onto the bracket.

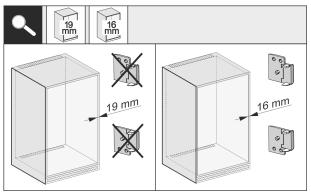


Fig. 34

 Check whether the unit side wall is 16 mm or 19 mm thick.

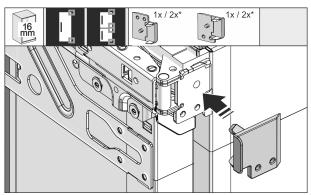


Fig. 35

- ▶ 16 mm thick unit side walls: Put a spacer on all hinges.
- ▶ 19 mm thick unit side walls: You do not need a spacer.



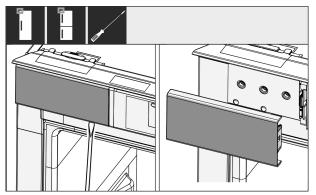


Fig. 36


► Use a screwdriver to loosen the cover at the top left and remove it.

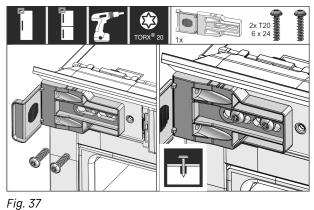

- 2.37 Selv tighten th
- Loosely tighten the mounting bracket screw. The bracket should still be easy to move.

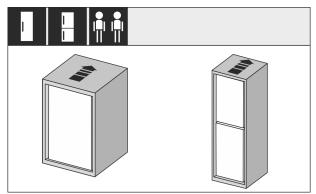



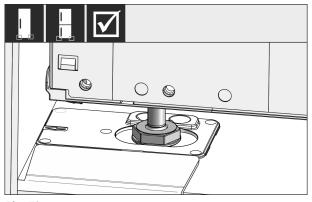

- Fig. 39
- Push the appliance all the way into the unit recess. The adjustable feet must rest in the recesses in the brackets on both sides.

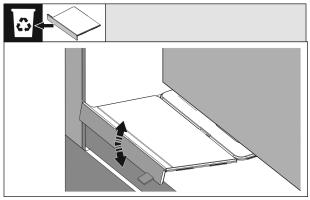


Fig. 40

Remove the floor mounting bracket stopper. Loosen the stopper by moving it and, if necessary, pull it off using pliers.

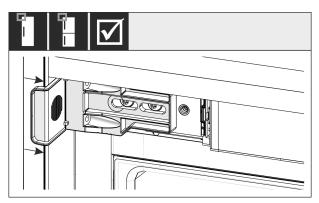


Fig. 41

Check that the appliance is flush in the cabinet recess. The mounting bracket must be attached to the side wall of the cabinet recess.

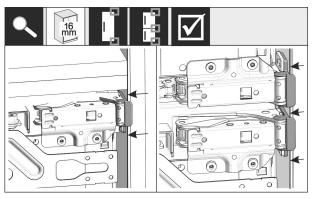


Fig. 42

Note

With 16 mm unit side walls, the spacers fit against the unit recess on the hinge side.

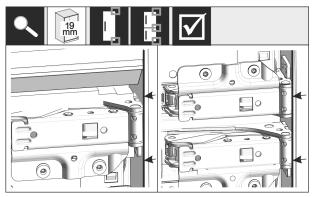


Fig. 43

▶ 19 mm thick unit side walls: Align the front of the hinges flush with the unit side wall.

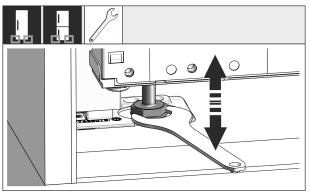


Fig. 44

If necessary, use the adjustable feet to correct the tilt of the appliance.

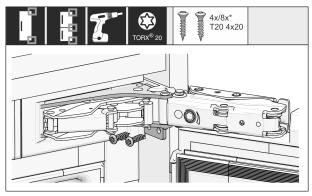


Fig. 45

Screw on the appliance on the hinge side.

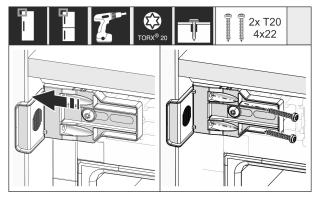


Fig. 46

- Move the bracket so it sits flush on the side wall of the cabinet recess.
- Tighten all the screws securely.

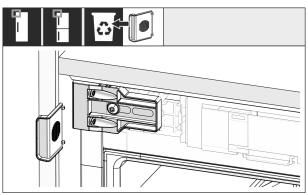


Fig. 47

Remove the stop from the bracket on the handle side and dispose of it.

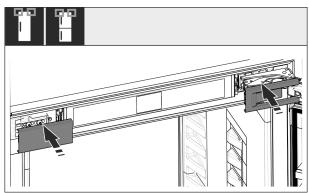


Fig. 48Put covers into position.

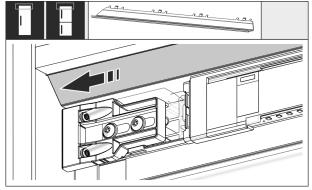


Fig. 49

Slide the panel so that it sits flush with the side of the cabinet wall.

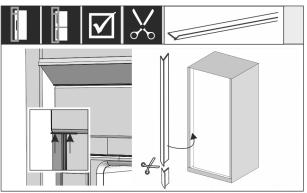


Fig. 50

- If necessary: Shorten the sealing strip as necessary with a sharp pair of scissors.
- Position the sealing strip below the top cover and press it in. The sealing strip is magnetic.

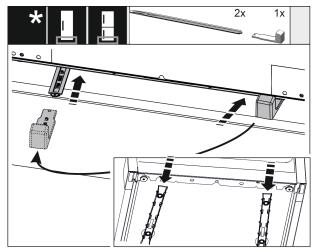


Fig. 51

The height adjustment is only supplied as standard for recess heights of 1400 mm and above. It is used for sound optimisation. Both parts of the height adjuster are included in the accessory kit.

- Stabilise the bottom of the appliance at the rear:
- Plug the grip into the height adjuster rail.
- Push the rail into the bottom of the appliance.
- Pull off the grip.
- Do the same thing with the second rail.

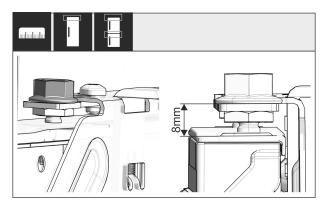


Fig. 52

- Close the door.
- Check the preset of 8 mm from the upper edge of the appliance door to the crosspiece support.

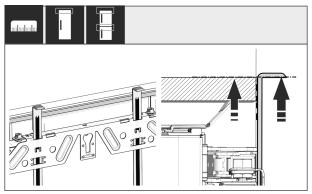


Fig. 53

Push the assembly aids to the unit door height. Lower stop edge of the assembly aid = upper edge of the door to be assembled.

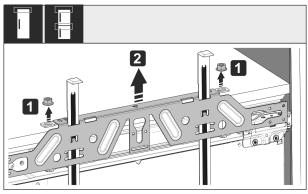


Fig. 54

- Loosen locknuts *Fig. 54 (1)*.
- Remove crosspiece Fig. 54 (2).

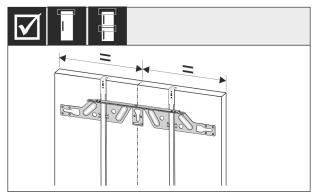


Fig. 55

Hang the crosspiece on the inside of the unit door and make sure it is central.

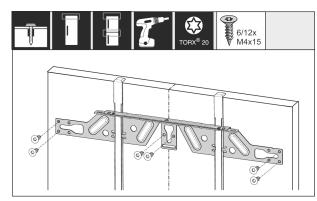


Fig. 56

▶ Fix the crosspiece using at least 6 screws for chipboard doors and at least 4 screws for panel doors.

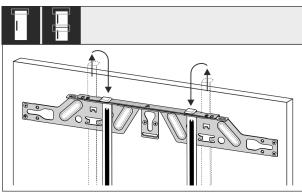


Fig. 57

Remove the fitting aids, turn round and insert into the adjacent opening.

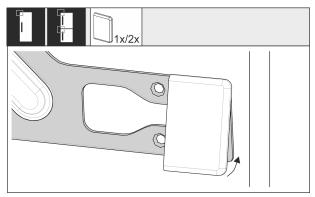


Fig. 58

▶ Put the cover on the crosspiece on the handle side.

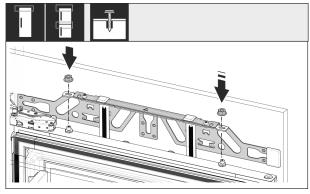


Fig. 59

Attach the custom panel and loosely screw the lock nuts onto the adjusting bolts.


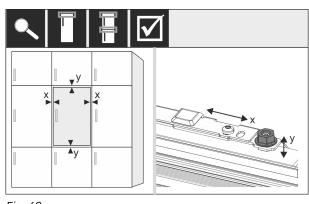


Fig. 60

Align the custom panel in the X and Y direction using the adjusting bolts.



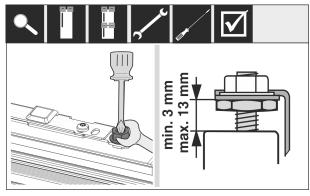

►

- Tighten the lock nuts.
- Check the adjusted height.


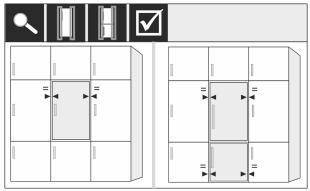


Fig. 62

For front panels thicker than 19 mm:

 Check the dimensions, weights and information in the following sections: (see 6 Custom panel weights) (see 17 Cabinet fronts)



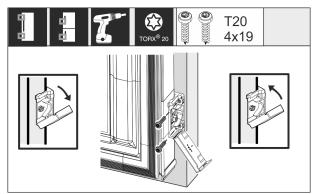

Cabinet fronts

Mounting the fastening bracket on the custom panel:Open the cover.

- Mounting the fastening bracket on the custom panel:
- Align the front edge of the mounting bracket parallel with the custom door panel edge and screw the bracket down tightly.

Mounting the fastening bracket on the custom panel:

Fold up the cover.

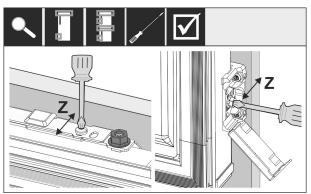


Fig. 64

Align the custom panel in the Z direction:

- Loosen the adjusting screw on the crosspiece and the screw on the mounting bracket.
- Move the door.

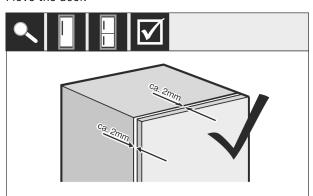


Fig. 65

- Check the gap between the custom panel and the unit body.
- Check all the screws and tighten them if necessary.

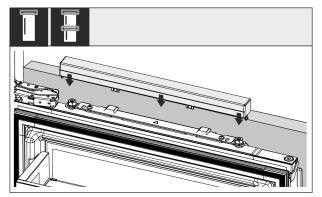


Fig. 66

Put on the top cover.

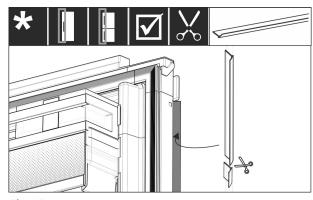


Fig. 67

- Cut the sealing strip to the required length.
- Insert the sealing strip between the front panel and the appliance door.

To make sure the appliance is correctly installed and there will not be any icing up, condensation or malfunctions, the following criteria apply:

- The door must close properly.
- The custom door panel must not touch the body of the unit.
- The seal on the upper corner on the handle side must be fitted securely.
- Check recess installation according to the criteria above.

17 Cabinet fronts

17.1 Dimensions

Depending on your model, you will need one or two cabinet doors. The size of the cabinet door(s) depends on the overall recess size and cabinet unit thickness.

Note

Observe the corresponding appliance and niche dimensions and installation sketches .

General requirements:

- Please note our appliance-specific recommendations on size and weight for fixed door installation (see 6 Custom panel weights).
- The body of the unit should be at least 16 mm thick but not more than 19 mm.
- When mounting a 2-door cabinet door, observe the recommended clearances.

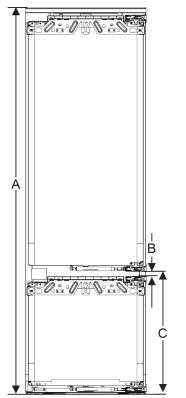


Fig. 68 Clearances for a 2-door cabinet door*

| Pagaga baight 179, 2 drawara* | | | | | | |
|----------------------------------|-----------------------|--|--|--|--|--|
| Recess height 178-2 drawers* | | | | | | |
| Appliance height (A) (mm) | 1770 | | | | | |
| Distance (B) (mm) | 15 | | | | | |
| Clearance (C) door-on-door (mm) | 549+15 (21 5/8 + 5/8) | | | | | |
| Recess height 178-3 drawers* | | | | | | |
| | | | | | | |
| Appliance height (A) (mm) | 1770 | | | | | |
| Distance (B) (mm) | 15 | | | | | |
| Clearance (C) door-on-door (mm) | 695+15 (27 3/8 + 5/8) | | | | | |

Other cabinet door above, below or next to it:

- The vertical gap between custom panels must be 4 mm.
- The horizontal gap between custom panels must be 4 mm. Check the risk of them clashing here. (see 17.3 Setting the clearance to avoid collision)

Weight and hinges:

- With heavy furniture fronts, the stress on the hinge is very high. The hinge may be damaged. Please note the maximum weight specification for your appliance in the chapter Furniture front weights (see 6 Custom panel weights).
- If the cabinet front exceeds the maximum permitted weight, an appliance with door-tracking device can help by loading the weight over several concealed hinges on the cabinet.
- If you use long unit fronts that protrude far above the appliances, we recommend an additional door hinge (e.g. Kamat), which must have the same pivot point as the fixed door hinge used with your appliance. By using another hinge (Kamat), the weight is shared over several points. The use of a milled compensating fastening is recommended for high unit fronts to counteract warping (convex/concave).

17.2 Mounting the cabinet front(s)

When installing, note:

- Cabinet front must be installed symmetrically to the refrigerator door.
- Adjoining cabinet front is exactly level.
- Adjoining cabinet front has the same edge radius as the front of the appliance.
- Cabinet front is flat and tension-free.
- The front panel has a minimum depth setting of approx. 2 mm to the body.
- ► Install the appliance in the recess. (see 16 Installing the appliance in the recess)
- Fasten the front panel to the appliance door. (see 16 Installing the appliance in the recess)
- Check that the front panel can close unobstructed. (see 17.3 Setting the clearance to avoid collision)

17.3 Setting the clearance to avoid collision

After installing the cabinet front(s), check that the cabinet fronts do not collide.

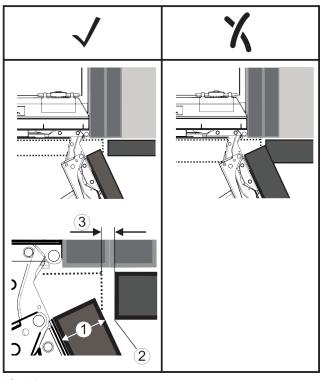


Fig. 69

(1) Front thickness (FD)(2) Edge radius (R)

(3) Clearance (S)

| | R (2) = 0 mm | | R = 1,2 mm | | R = 2 mm | | R = 3 mm | |
|------------|--------------|------|------------|------|----------|------|----------|------|
| FD(1) (mm) | Gmin | Gmax | Gmin | Gmax | Gmin | Gmax | Gmin | Gmax |
| 16 | 0,3 | 0,9 | 0,1 | 0,4 | 0,1 | 0,2 | 0,1 | 0,2 |
| 19 | 0,7 | 2,4 | 0,3 | 1,9 | 0,23 | 3,25 | 0,1 | 0,8 |
| 20 | 2 | 4,3 | 1,5 | 3,6 | 1 | 3,1 | 0,6 | 2,7 |
| 22 | 3,5 | 6,3 | 3 | 5,6 | 2,6 | 5,3 | 2,1 | 4,6 |
| 24 | 5,5 | 8,3 | 5 | 7,8 | 4,5 | 7,4 | 4 | 6,9 |
| 26 | 7,6 | 10,7 | 7 | 10,3 | 6,6 | 9,9 | 6,2 | 9,4 |

Fig. 70 Table of clearance limits

G_{min} = min. clearance in mm

G_{max} = max. clearance in mm

Note

When making adjustments, always make sure that the cabinet front suits the general appearance.

Check the collision factors and adjust them accordingly:

- Determine the front thickness and edge radius.
 Refer to the table for the min./max. clearance dimensions.
- Check the clearance size against the table.
- Do one of the following depending on the measured clearance size.

| Clearance | Description |
|--|---|
| S > G _{max} | If the clearance size is greater than the two limits, you do not need to make any adjust- ments. |
| S < G _{min} | If the clearance size is below the limits, you must increase it. Another option is to increase the edge radius. |
| G _{min} ≤ S ≤ G _{max} | If the clearance is between the two limits, you have to be careful. This will quickly lead to collisions. |

18 Water tank*

Depending on your model, the InfinitySpring water tank is behind the lowest drawer in the fridge or BioFresh compartment

18.1 Inserting the water tank

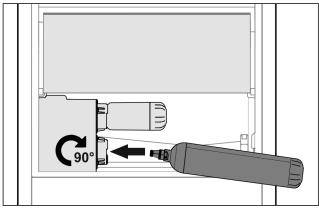


Fig. 71

- Remove the drawer compartment.
- Insert the water tank and rotate approx. 90° clockwise until it clicks in.
- Check that the tank is sealed and no water leaks out.
- Insert the drawer compartment.
- Vent the water system (see the Installation Instructions, Water Connection)

Instead of the water filter you can insert an additional water tank.

Note

You can purchase this water tank as an optional extra.

19 Water filter*

Depending on your model, the water filter is behind the lowest drawer in the fridge or BioFresh compartment.

It filters out deposits in the water and reduces the taste of chlorine.

- Replace the water filter at least every 6 months, or if there is a significant reduction in the flow rate.
- The water filter contains carbon and can be disposed of with the regular household waste.

Note

Water filters are available from the Liebherr-Hausgeräte store at home.liebherr.com/shop/de/deu/zubehor.html.

19.1 Inserting the water filter

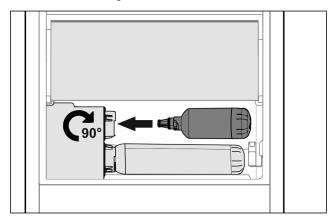


Fig. 72

- ▶ Remove the drawer compartment.
- Insert the water filter and rotate approx. 90° clockwise until it clicks in.
- Check that the filter is sealed and no water leaks out.
- ▶ Insert the drawer compartment.

New water filters can contain suspended matter.

- Draw 3 l of water from the InfinitySpring and dispose of it.
- \triangleright The water filter is now ready for use.

20 Connecting the appliance to the power supply

Danger of electric shock and injury due to damaged appliance or damaged mains cable!

Danger of cuts and fatal injuries. If the appliance or the mains cable is damaged during transport, you may be electrocuted. You could also cut yourself on damaged parts of the appliance housing.

- Check the appliance and the mains cable for damage after transport.
- Never put the appliance into operation if the appliance or the mains cable are damaged.
- Contact Customer Service.

You can connect your appliance to the mains using the power cable supplied separately. The mains power cable has an appliance coupler at one end and a mains plug at the other end.

Make sure that the following requirements are fulfilled:

- The appliance and power cable are undamaged.
- The appliance is installed in accordance with the regulations. (see 16 Installing the appliance in the recess)
- Requirements for the electrical connection are met. (see 2.3 Mains connection)
- Dimensions for connection in accordance with regulations are known and observed.
- Mains voltage and frequency correspond to the specifications on the type plate.

- The socket is earthed according to the regulations and fused.
- The fuse tripping current is between 10 A and 16 A.
- The socket is easily accessible and is not behind the appliance (see 4 Recess dimensions) .

NOTICE

Danger of damage to incorrect operation!

 
- Damage to the electrical components of the appliance.
- Only use the supplied mains cable.



Danger of fire due to incorrect connection! Burns.

Damage to the appliance.

- ▶ Do not use an extension cable.
- ► Do not use distributor blocks.



NOTICE

Danger of damage to incorrect connection!

- Damage to the appliance.
- Do not connect the appliance to a stand-alone inverter, e.g. solar power systems and petrol generators.
- Connect the mains plug of the power cable to the power supply.
- ▷ The Liebherr logo appears in the display.*
- \triangleright The display switches to the standby symbol.*
- \triangleright If no action occurs within 60 seconds: The standby symbol fades or disappears.
- The appliance is connected. For information regarding first use, see the following section or the operating instructions.



home.liebherr.com/fridge-manuals

EN built-in fridges and freezers, fixed door

Issue date: 20240423

Part number index: 7088411-00

Liebherr-Hausgeräte GmbH Memminger Straße 77-79 88416 Ochsenhausen Deutschland





home.liebherr.com/fridge-manuals




General safety instructions

Contents

| 1 | General safety instructions | 2 |
|-----------------------------------|---|-----------------------------|
| 2 2.1 2.2 2.3 | Installation conditions Location Installing multiple appliances Mains connection | 3 3 3 4 |
| 3 | Appliance dimensions | 4 |
| 4 4.1 | Recess dimensions Internal dimensions | 5 5 |
| 5 | Ventilation requirements | 6 |
| 6 | Custom panel weights | 6 |
| 7 7.1 7.2 | Water connection* Dimensions for the water connection Water pressure | 6 7 7 |
| 8 | Transporting appliance | 7 |
| 9 | Unpacking the appliance | 7 |
| 10 10.1 | Setting up the appliance After installation | 7 7 |
| 11 | Disposing of packaging | 8 |
| 12 | What the symbols mean | 8 |
| 13 13.1 | **** freezer compartment door* Moving the door hinge | 9 9 |
| 14 | Reversing the door | 9 |
| 15 15.1 15.2 | Connecting the appliance to the water supply* Connecting the hose Checking the water system | 11 11 11 |
| 16 | Installing the appliance in the recess | 12 |
| 17 17.1 17.2 17.3 | Cabinet fronts Dimensions Mounting the cabinet front(s) Setting the clearance to avoid collision | 18 18 19 19 |
| 18 18.1 | Water tank* Inserting the water tank | 20 20 |
| 19 19.1 | Water filter* Inserting the water filter | 20 20 |
| 20 | Connecting the appliance to the power supply | 20 |

The manufacturer is continually working on the further development of all types and models. Please be aware that we reserve the right to make changes to the shape, equipment and technology.


| Symbol | Explanation |
|--------|--|
| | Read instructions Please read the information in these instruc- tions carefully to understand all of the benefits of your new appliance. |

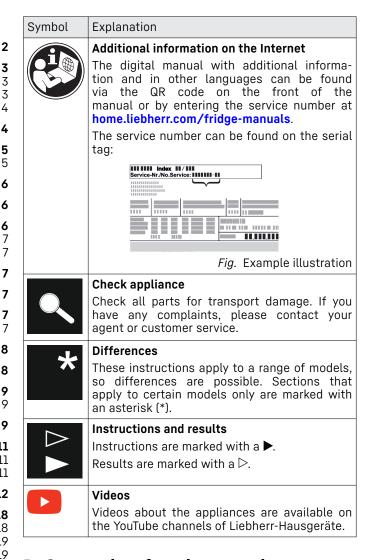

1 General safety instructions

- Please keep this assembly manual in a safe place so you can refer back to it at any time.
- If you pass the appliance on, please hand this assembly manual to the next user.
- Read this assembly manual carefully before installation and use to ensure safe and correct use of the appliance. Follow the instructions, safety instructions and warning messages included at all times. They are important for ensuring you can operate and install the appliance safely and without any problems.
- First read the general safety instructions in the "General safety instructions" section of the operating instructions, which accompany these installation instructions, and follow them. If you cannot find the operating instructions, you can download the operating instructions from the internet by entering the service number at home.liebherr.com/fridge-manuals. The

 service number can be found on the serial



tag:

Observe the warning messages and other detailed information in the other sections when installing the appliance:

| Â | DANGER | identifies a situation involving direct danger which, if not obvi- ated, may result in death or severe bodily injury. |
|-------------|---------|--|
| \triangle | WARNING | identifies a dangerous situation which, if not obviated, may result in death or severe bodily injury. |
| \triangle | CAUTION | identifies a dangerous situation which, if not obviated, may result in minor or medium bodily injury. |
| | NOTICE | identifies a dangerous situation which, if not obviated, may result in damage to property. |
| | Note | identifies useful instructions and tips. |

2 Installation conditions



Fire hazard due to dampness!

If live parts or the mains lead become damp this may cause short circuits.

The appliance is designed for use in enclosed areas. Do not operate the appliance outdoors or in areas where it is exposed to splash water or damp conditions.

Intended use

- Install and use the appliance in indoor spaces only.
- Use the appliance only once installed.

2.1 Location



Leaking coolant and oil!

Fire. The coolant contained in the appliance is eco-friendly, but also flammable. The oil contained in the appliance is flammable. Escaping coolant and oil can ignite if the concentration is high enough and in contact with an external heat source.

- Do not damage the pipelines of the coolant circuit and the compressor.
- If the appliance is installed in a very humid environment, condensation can build up on the outside of the unit.

Always ensure good airlow and ventilation in the installation location.

The more refrigerant there is in the appliance, the larger the space that it is installed in must be. If the space is too small, any leak may create a flammable mixture of gas and air. For every 8 g of refrigerant, the installation space must be at least 1 m^3 . Information regarding the coolant can be found on the serial tag inside the appliance.

2.1.1 Supporting floor

- The floor of the installation site must be horizontal and even.
- If you are installing the unit in a cabinet standing on an uneven floor: level the cabinet.

2.1.2 Positioning

- Do not install the appliance in direct sunlight or near radiators or similar sources of heat.
- You can install the appliance directly next to an oven.
- If the appliance is installed directly next to an oven, the energy consumption may increase slightly. This is dependent on the service life and usage intensity of the oven.
- Only fit the appliance into solid kitchen units.

Note

Please contact Customer Services to acquire a kit to limit the door opening angle to 90° for appliances with soft close mechanisms.*

2.2 Installing multiple appliances

NOTICE

Risk of damage due to condensate!

► Do not install the appliance directly alongside a further refrigerator/freezer.

NOTICE

- Risk of damage due to condensation!
- Do not install the appliance directly above another refrigerator or freezer.

These appliances are designed for a variety of installation options. Combine appliances only if the appliance is suitable. The following table shows the installation options by model:

| Installation option | Model |
|-----------------------|--|
| Single | All models |
| Side-by-side (SBS) | Model names starting with S . |
| Stacked | Models up to a maximum recess height of 880 mm and with a heated cover can be "stacked". |
| | Upper appliance: up to a maximum recess height of 140 mm |

Appliance dimensions

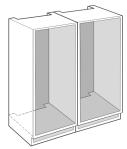


Fig. 1

Build each appliance into a separate recess.


2.3 Mains connection

Danger of fire due to incorrect positioning!

If the mains cable or plug touches the back of the appliance, the vibration can damage the mains cable or the plug resulting in a short circuit.

- Make sure the mains cable is not trapped under the appliance when you position the appliance.
- Stand the appliance so that it is not touched by connectors or main cables.
- Do not connect any appliances to sockets in the area of the back of the appliance.
- Do not place and operate multi-sockets/power distributors and other electronic devices (such as halogen transformers) at the back of the appliances.

3 Appliance dimensions

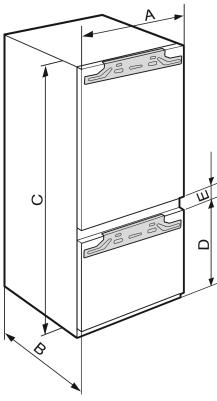

| | A (mm) | B (mm) | C (mm) | D (mm) | E (mm) |
|--|-----------|-----------|-----------|-----------|-----------|
| ICB 512 | | | | 549 | |
| IC 513 S/ICN 513 ICBN 513 ICBN 513 IC/B/N/bsci 51 IKG 51Ve03 / IKGN 51Vc03 / IKGN 51Ve03 / IKGBN 51Vd23i | 559 | 546 | 1770 | 695 | 15 |
| ICN563 ICBN563 | | | 1938 | | |

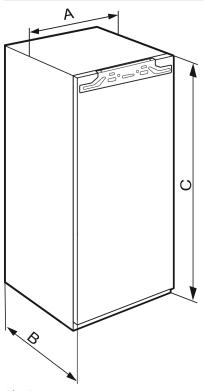


Fig. 3

Fig. 2

| | A (mm) | B (mm) | C (mm) |
|---|--------|--------|--------|
| IFN 35 | | | 712 |
| IR 39 SIBai 39 SIBa20i 39 S/IF/N 39 | | | 872 |
| IR 40 IRB 40 | • | | 1022 |
| IR 41 IRB 41 IRBbsbi 41 SIFN 41 | | | 1213 |
| IR 45 IRB 45 IRBbsbi 45 SIFN 45 | 559 | 546 | 1395 |
| IRB 48 | | | 1572 |
| IR 51 IRD 51 IRB 51 IRBbsci 51 IRBP 51 IRBPbsci 51 SIFN 51 SIFN 51 IK 51Ve00 / IK 51Ve01 / IKB 51Vc50i / IKB 51Vc51i | | | 1770 |

4 Recess dimensions

4.1 Internal dimensions

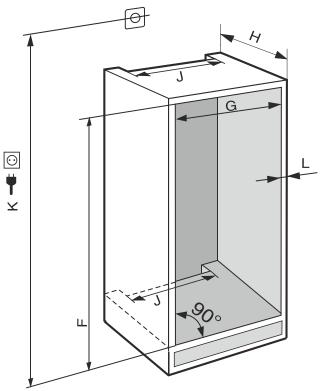


Fig. 4 **(K):** max. 2100 mm

Observe the following information for devices with a fixed water connection:

- Water connection (see 7 Water connection*)
- Connecting the device to the water supply (see 15 Connecting the appliance to the water supply*)

| IFN(i) 35 | | | |
|------------|--|--|--|
| F (mm) | 714 to 730 | | |
| G (mm) | 560 to 570 | | |
| H (mm) | min. 550, recommended 560 | | |
| J (mm) | min. 500 | | |
| L (mm) | max. 19 | | |
| IFN(i) 39 | IFN(i) 39 / IR(i) 39 / SIBa20i 3905 / SIFNi 39 | | |
| F (mm) | 874 to 890 | | |
| G (mm) | 560 to 570 | | |
| H (mm) | min. 550, recommended 560 | | |
| J (mm) | min. 500 | | |
| L (mm) | max. 19 | | |
| IR(B)(i) 4 | 0 | | |
| F (mm) | 1024 to 1040 | | |
| G (mm) | 560 to 570 | | |
| H (mm) | min. 550, recommended 560 | | |
| J (mm) | min. 500 | | |
| L (mm) | max. 19 | | |

Ventilation requirements

| F (mm) | 1216 to 1236 | |
|------------|------------------------------|--|
| G (mm) | 560 to 570 | |
| H (mm) | min. 550, recommended 560 | |
| J (mm) | min. 500 | |
| L (mm) | max. 19 | |
| IR(B)(i) 4 | 45 / IRBbsbi 4570 / SIFNi 45 | |
| F (mm) | 1397 to 1413 | |
| G (mm) | 560 to 570 | |
| H (mm) | min. 550, recommended 560 | |
| J (mm) | min. 500 | |
| L (mm) | max. 19 | |
| IRBi 48 | | |
| F (mm) | 1574 to 1590 | |
| G (mm) | 560 to 570 | |
| H (mm) | min. 550, recommended 560 | |
| J (mm) | min. 500 | |
| L (mm) | max. 19 | |

IR(B)(P)..(i) 51.. / IRD..i 51.. / IRBbsci 5170 / IRBbsci 5171 / IRBPbsci 5170 / IKB 51Vc50i / IKB 51Vc51i / IK 51Ve00 / IK 51Ve01 / SICN..i 51.. / SIFN..(i) 51.. / SIFNbsdi 51..

| F (mm) | 1772 to 1788 | |
|----------------------------------|------------------------|--|
| G (mm) | (mm) 560 to 570 | |
| H (mm) min. 550, recommended 560 | | |
| J (mm) min. 500 | | |
| L (mm) | max. 19 | |

The specified energy consumption was determined with a kitchen unit depth of 560 mm. The appliance will work properly at a kitchen unit depth of 550 mm, but with a slightly higher energy consumption.

- Check the wall thickness of adjacent cabinets: They must have a minimum of 16 mm .
- ▶ Only fit the appliance into stable, solid kitchen units. Secure the unit against tipping.
- Align the cabinets with a spirit level and a try square. If necessary, level them by putting something underneath them.
- Make sure floor and the side panels of the cabinet are at right angles to each other.

5 Ventilation requirements

NOTICE

Covered vents!

Damage. Appliance can overheat, which can reduce the service life of various parts of the appliance and lead to operational impairments.

- Always make sure there is good ventilation.
- ► Always keep vents or ventilation grids in the appliance housing and in the kitchen furniture (fully integrated appliance) unobstructed.
- Always keep the fan air vents unobstructed.

Always follow the required ventilation gaps:

- The depth of the ventilation shaft at the back of the cabinet must be at least 38 mm.
- At least 200 cm² is required for the ventilation gap cross sections in the plinth and the housing cabinet.
- As a rule, the larger the ventilation cross-section, the more efficiently the appliance will run.

Sufficient ventilation is required for the operation of the appliance. The ventilation grids provided ensure an effective ventilation cross-section on the appliance of 200 cm². If you replace the ventilation grids with a cover plate the ventilation cross-section must be as least as large as the ventilation grid provided by the manufacturer.

6 Custom panel weights

NOTICE

An excessively heavy custom panel can potentially cause damage!

If the custom panel is too heavy, damage to the hinges cannot be ruled out, which may compromise the functionality of the unit.

Before fitting the custom panel, ensure the custom panel does not exceed the permissible weight.

| Recess height (mm)* | Maximum weight of custom panel (kg)* |
|-------------------------|--------------------------------------|
| 720 | 16 |
| 880 | 16 |
| 1020 | 13 |
| 1220 | 19 |
| 1400 | 21 |
| 1580 | 22 |
| 1780 | 26 |
| Single-door fridges and | l freezers |

| | | Maximum weight of custom panel (kg)* | | |
|-------|--|--------------------------------------|--------------------------------|--|
| (mm)* | | Fridge compartment door* | Freezer compart- ment door* | |
| 1780 | | 18 | 12 | |
| 1940 | | 18 | 12 | |

Customising combinations

7 Water connection*


If your appliance has a fixed water connection, a hose is supplied with it.

Note

You can purchase a hose of a different length as an accessory.

| Overview of dimensions for the water connection: | (see 7.1 Dimensions for the water connection) |
|--|---|
| Requirements for the water pressure: | (see 7.2 Water pressure) |
| Make the water connec- tion: | (see 15 Connecting the appli- ance to the water supply*) |

7.1 Dimensions for the water connection

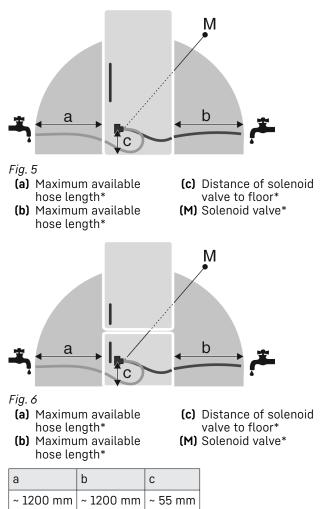

7.2 Water pressure

The water connection line and solenoid valve of the appliance are suitable for a water pressure of up to 1 MPa (10 bar).

To ensure that the appliance functions correctly (flow rate, ice cube size, noise level), maintain the following water pressure:

| Water pressure: | | |
|--|--------------|--|
| bar | MPa | |
| 1.5 to 6.2 | 0.15 to 0.62 | |
| Water pressure when using the water filter:* | | |
| bar* | MPa* | |
| 2.8 to 6.2 | 0.28 to 0.62 | |

If the pressure is higher than 6.2 bar:

- Fit a pressure reducer.
- Make the water connection. (see 15 Connecting the appliance to the water supply*)

8 Transporting appliance

Note when transporting the appliance:

- Transport the appliance upright.
- ► Use two people to transport the appliance.

During first use:

Transport the appliance packaged.

When transporting appliances after initial commissioning (e. g. moving or cleaning):

- Empty the appliance.
- Secure the door against unintentional opening.

9 Unpacking the appliance

Before you connect the appliance, report any damage immediately to the delivery company.

- Check the appliance and the packaging for damage during transport. Contact the supplier immediately if you suspect any level of damage.
- Remove all materials from the back or the side walls of the appliance that may prevent proper installation or ventilation.
- Remove all protective films from the appliance. Do not use sharp or pointed objects for this.

10 Setting up the appliance

Risk of injury due to heavy appliance!

Have two people transport the appliance to its installation site.

Danger of injury and damage due to the appliance being unstable!

The appliance can topple over.

Secure the appliance as described in the instructions.

Fire hazard and danger of damage!

Do not place appliances emitting heat e.g. microwaves, toasters etc. on the appliance!

If possible, have the appliance installed in the kitchen unit by a professional.

Do not install the appliance on your own.

10.1 After installation

▶ Remove all transport safety components.



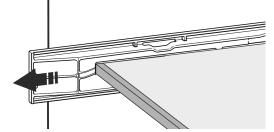


Fig. 7 *

 

Disposing of packaging

 Pull off the transport lock on the appliance door.



 Clean the appliance (see User Guide, Cleaning the appliance).

11 Disposing of packaging

Danger of suffocation due to packing material and plastic film!

Do not allow children to play with packing material.

The packaging is made of recyclable materials:

- corrugated board/cardboard
- expanded polystyrene parts
- polythene bags and sheets
- polypropylene straps
- nailed wooden frame with polyethylene panel*
- Take the packaging material to an official collecting point.

12 What the symbols mean

| | Risk of injury here! Follow the safety notes! |
|---|---|
| * | These instructions apply to a range of models. Follow this step only if it applies to your appliance. |
| | To install, please follow the detailed description in the Guide. |
| | This section applies either to a single-door appliance or a double-door appliance. |
| | Choose one of the options: Appli- ance with right-hinged door or appliance with left-hinged door. |
| | Installation step required if your model has IceMaker and/or Infini- tySpring. |
| | Just loosen the screws or tighten them slightly. |


| | | Tighten the screws. |
|---------|-------------|---|
| * i- | | Check to see if the next step applies for your model. |
| | | Check the correct assembly/seat of the components used. |
| ic | malandari | Measure the specified measure- ment and adjust if necessary. |
| | | Tool for assembly: Metre rule |
| ıg | | Tool for assembly: Cordless screwdriver and attachments A lengthwise bit insert is recom- mended for good access to the screws. |
| e | R STATE | Tool for assembly: Spirit level |
| a p | SW7 SW10 | Tool for assembly: Size 7 and size 10 spanners |
| e | | Two people are required for this step. |
| a - | | Carry out this step at the marked place on the appliance. |
| - r | | Aids for assembly: String |
| r - | | Aids for assembly: Square |
| n | | Aids for assembly: Screwdriver |
| | | Aids for assembly: Scissors |

**** freezer compartment door*

| | Aids for assembly: Non-permanent marker pen |
|---|--|
| | Accessory kit: Remove compo- nents |
| 3 | Dispose of components that are no longer needed. |

13 **** freezer compartment door*

It is very easy to reposition the hinge of the **** freezer compartment door if the main door hinge is swapped. If the main door of the appliance can be opened to more than 115° (1), you can open the freezer compartment without repositioning the hinge. If the opening angle (2) of the appliance door is less than this, the hinge must be repositioned.

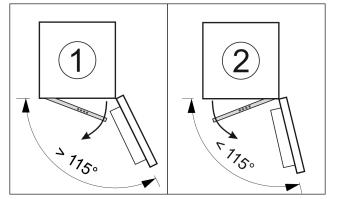



13.1 Moving the door hinge

The slider for moving the door hinge is located on the back of the **** freezer compartment door at the bottom.

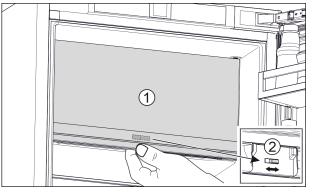


Fig. 9

- Close the **** freezer compartment door (1).
- Grab the **** freezer compartment door from below.
- Move the slider (2) either to the right or to the left.

14 Reversing the door

Tool





Fig. 10

NOTICE

Live parts!

Damage to electrical components.Disconnect the power plug before reversing the door.

20

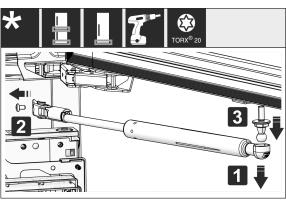


Fig. 11 *

Removing the soft stop damper: Remove the soft stop damper from the ball stud (1). Unscrew the retainer (2). Remove the ball stud with a screwdriver (3).*

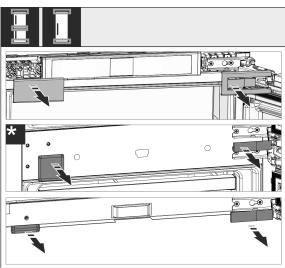


Fig. 12

Remove covers.

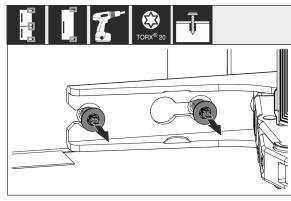


Fig. 13

▶ Loosen the screws on **all** hinges but do not remove them.

Reversing the door

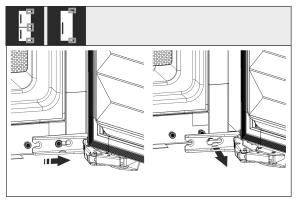


Fig. 14

Removing the door: Push the door forward and then out, unhang it and put it to one side.

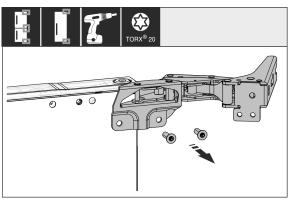


Fig. 15

Unscrew all hinges and set aside together with the screws.

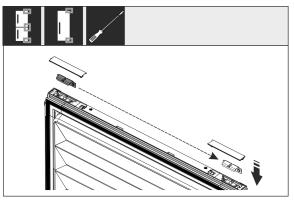


Fig. 16

Loosen and shift the bracket at the top and bottom of the door. The bracket must be shifted so you can screw on the hinges.

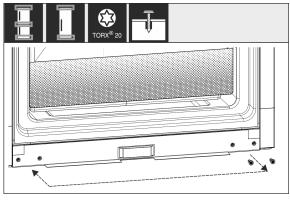


Fig. 17

Shift the screws to fasten the hinge. Do not screw tightly after shifting – you need to hang the hinges later.


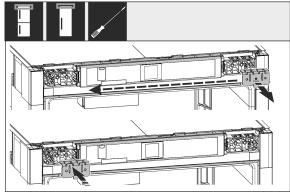


Fig. 18

• Move the fixing bracket to the opposite side.

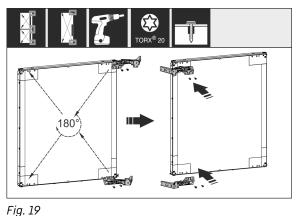

► Turn all hinges 180° to the opposite side and screw firmly.

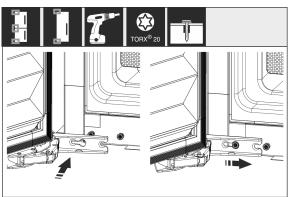


Fig. 20

Refitting the door: Hang the door with its hinges and tighten the screws.

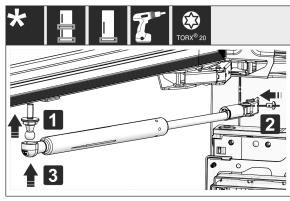


Fig. 21 *

- Refitting the closing dampers: Screw in the ball studs (1), tighten the bracket (2) and hang the closing dampers in the ball studs.*
- Check all screws and retighten if necessary.

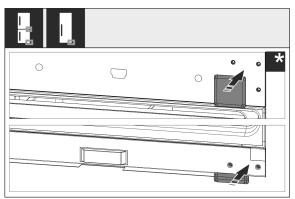


Fig. 22

Reassemble the bottom and centre cover. Only replace the remaining covers after installing the appliance back into the cabinet.

15 Connecting the appliance to the water supply*

Make sure that the following requirements are fulfilled:

- □ The dimensions for the water supply connection are known and complied with. (see 7.1 Dimensions for the water connection)
- □ The correct water pressure is maintained. (see 7.1 Dimensions for the water connection)
- □ Water is supplied to the appliance via a cold water pipe which can withstand the operating pressure and is connected to the drinking water supply.
- □ All equipment and devices used to supply water must comply with the regulations in force in the respective country.
- □ The rear of appliance is accessible so that you can connect the appliance to the drinking water supply.
- □ The supplied hose is used. Old hoses have been disposed of.
- $\hfill\square$ The hose connector contains a filter with a seal.
- There is a tap between the hose line and the domestic water connection so that you can turn off the water supply if necessary.
- □ The tap is not directly behind the appliance and is easily accessible. This way, you can push the appliance as far as possible into the cabinet recess and can quickly turn off the tap if necessary.

Risk of electric shock from water!

- Before connecting to the water pipe: Disconnect the appliance from the mains.
- Before connecting to water supply lines: Shut off the water supply.
- Make sure that only qualified personnel connect the device to the drinking water supply.

Risk of poisoning due to contaminated water!

Only connect to the drinking water supply.

15.1 Connecting the hose

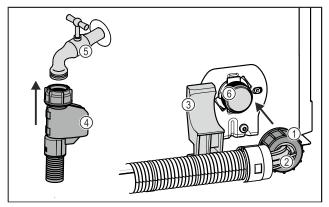


Fig. 23

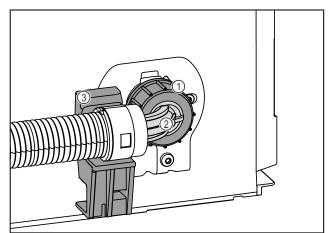


Fig. 23

(1) Nut

- (2) Angled hose end
- (3) Bracket
- (4) Straight hose end
- (**5**) Tap
- (6) Solenoid valve: The solenoid valve is at the bottom on the back of the appliance. It has an R3/4 connecting thread.

NOTICE

- Risk of damage from incorrect installation!
- Do not damage or kink the hose.
- Do not damage or kink the hose during installation in the cabinet recess.

Connecting the hose to the appliance:

- Position and hold the angled hose end Fig. 23 (2) horizontally on the bracket Fig. 23 (3).
- Screw on the nut *Fig. 23 (1)* on by hand until it is firmly in place.
- Dash The hose is connected to the appliance.

Connecting the hose to the tap:

- Connect the straight hose end Fig. 23 (4) to the tap Fig. 23 (5).
- \triangleright The hose is connected to the tap.

15.2 Checking the water system

Before you completely install the appliance in the cabinet recess, Liebherr recommends checking the water system for leaks.

- Put in the InfinitySpring water tank. (see 18 Water tank*) *
- Put in the InfinitySpring water filter. (see 19 Water filter*)
- ▶ Slowly turn on the tap.
- Check the hose, water feed and connections for leaks.

- \triangleright The water system has now been checked for leaks.
- \triangleright The water system is not leaking: You can install the appliance completely in the cabinet recess.

Note

InfinitySpring: Before the first use, you must put the InfinitySpring into operation. To do this you must bleed and clean the water system. (see Quick Start Guide or operating instructions)*

IceMaker: Before the first use, you must clean the IceMaker. (see Quick Start Guide or operating instructions)*

16 Installing the appliance in the recess

Tool



Fig. 24 Supplied assembly parts

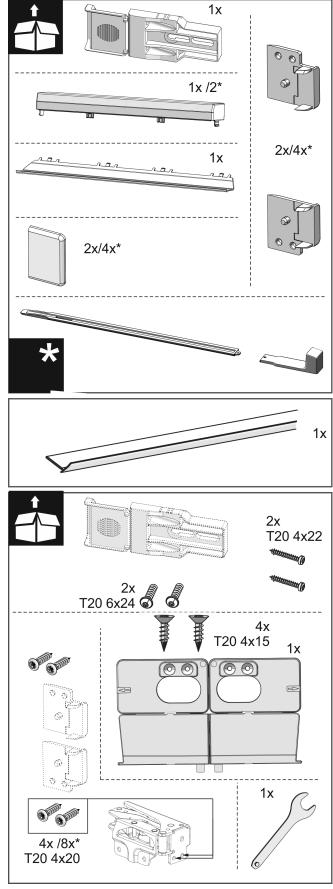


Fig. 25

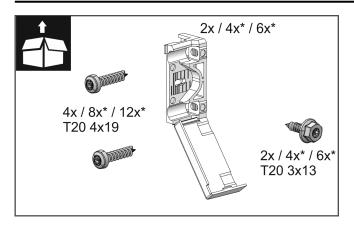


Fig. 26

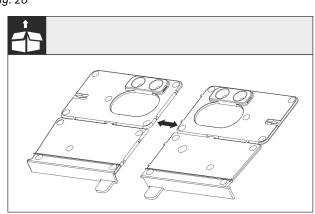


Fig. 27

Separate the floor mounting bracket Fig. 27 () at the perforation.

NOTICE

Correct installation depth of the appliance.

Using the mounting bracket ensures the correct installation depth of the appliance.

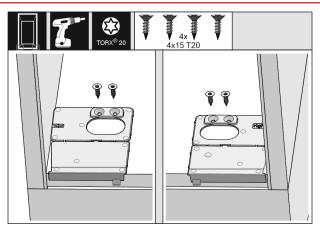


Fig. 28

Screw the mounting brackets on the left and right of the recess floor, flush to the side wall.

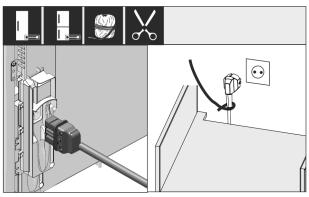


Fig. 29

- Remove the power cable from the package and plug it into the back of the appliance.
- ► Use a string to route the power plug cord to the accessible socket.

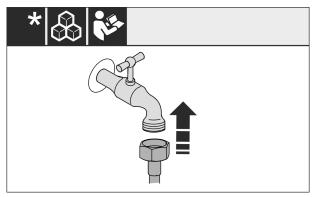


Fig. 30 *

If necessary, install the water connection at this point, following the instructions in the User Guide.*


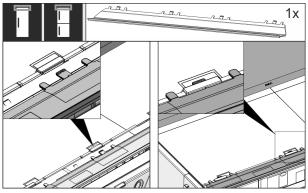


Fig. 31

Insert the adapter panel on the top of the appliance. The panel can be moved to both sides.



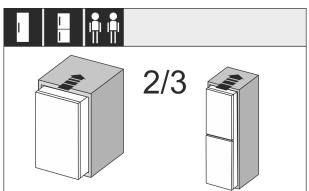

▶ Insert the appliance 2/3 of the way into the recess.

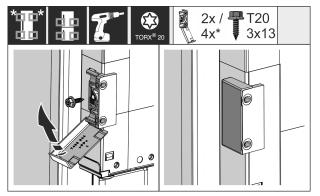


Fig. 33

- Fit the mounting bracket. Attach the mounting bracket at the height of the custom door panel handle. For a large door, use four mounting brackets.
- After assembly, fold the covers onto the bracket.

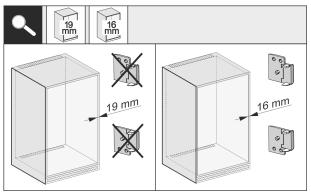


Fig. 34

 Check whether the unit side wall is 16 mm or 19 mm thick.

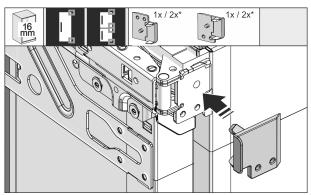


Fig. 35

- ▶ 16 mm thick unit side walls: Put a spacer on all hinges.
- ▶ 19 mm thick unit side walls: You do not need a spacer.



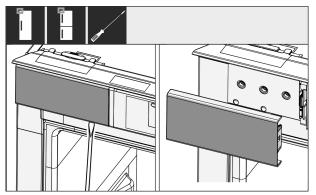


Fig. 36


► Use a screwdriver to loosen the cover at the top left and remove it.

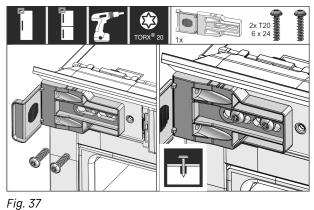

- 2.37 Selv tighten th
- Loosely tighten the mounting bracket screw. The bracket should still be easy to move.

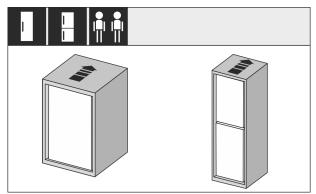



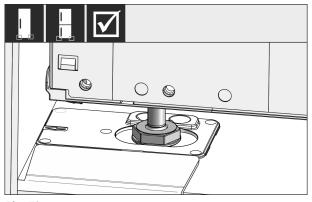

- Fig. 39
- Push the appliance all the way into the unit recess. The adjustable feet must rest in the recesses in the brackets on both sides.

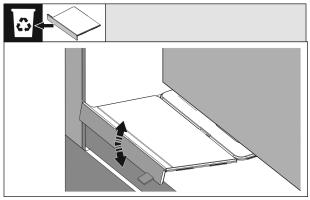


Fig. 40

Remove the floor mounting bracket stopper. Loosen the stopper by moving it and, if necessary, pull it off using pliers.

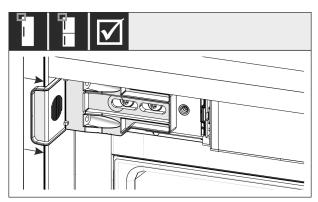


Fig. 41

Check that the appliance is flush in the cabinet recess. The mounting bracket must be attached to the side wall of the cabinet recess.

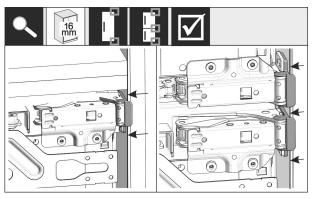


Fig. 42

Note

With 16 mm unit side walls, the spacers fit against the unit recess on the hinge side.

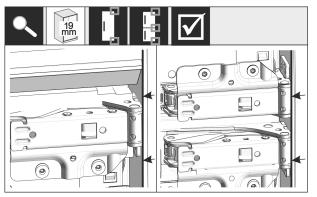


Fig. 43

▶ 19 mm thick unit side walls: Align the front of the hinges flush with the unit side wall.

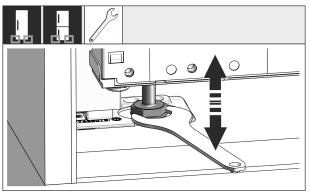


Fig. 44

If necessary, use the adjustable feet to correct the tilt of the appliance.

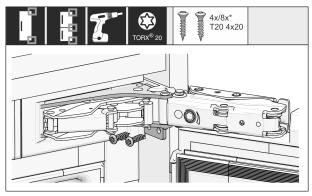


Fig. 45

Screw on the appliance on the hinge side.

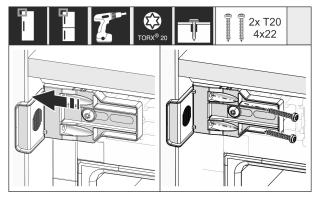


Fig. 46

- Move the bracket so it sits flush on the side wall of the cabinet recess.
- Tighten all the screws securely.

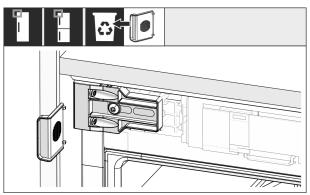


Fig. 47

Remove the stop from the bracket on the handle side and dispose of it.

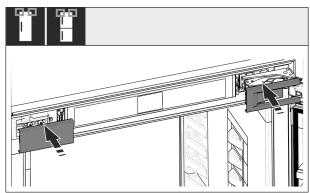


Fig. 48Put covers into position.

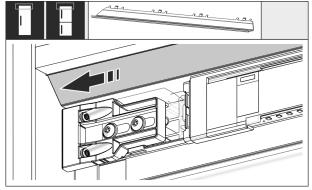


Fig. 49

Slide the panel so that it sits flush with the side of the cabinet wall.

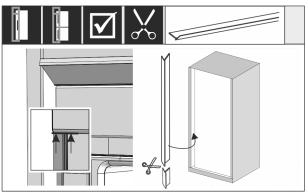


Fig. 50

- If necessary: Shorten the sealing strip as necessary with a sharp pair of scissors.
- Position the sealing strip below the top cover and press it in. The sealing strip is magnetic.

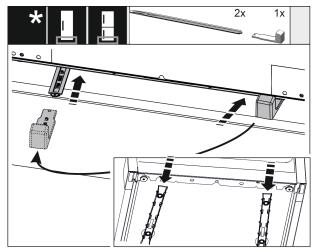


Fig. 51

The height adjustment is only supplied as standard for recess heights of 1400 mm and above. It is used for sound optimisation. Both parts of the height adjuster are included in the accessory kit.

- Stabilise the bottom of the appliance at the rear:
- Plug the grip into the height adjuster rail.
- Push the rail into the bottom of the appliance.
- Pull off the grip.
- Do the same thing with the second rail.

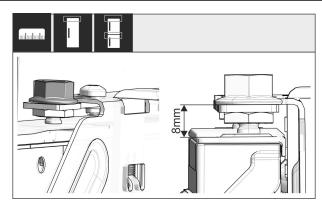


Fig. 52

- Close the door.
- Check the preset of 8 mm from the upper edge of the appliance door to the crosspiece support.

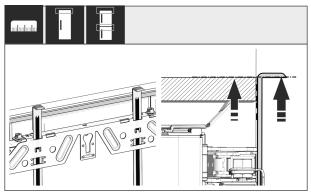


Fig. 53

Push the assembly aids to the unit door height. Lower stop edge of the assembly aid = upper edge of the door to be assembled.

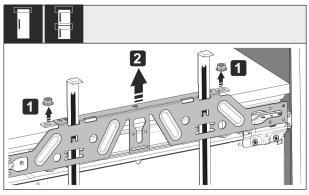


Fig. 54

- Loosen locknuts *Fig. 54 (1)*.
- Remove crosspiece Fig. 54 (2).

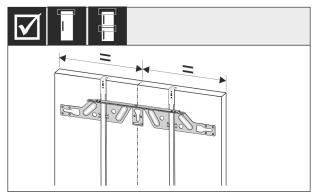


Fig. 55

Hang the crosspiece on the inside of the unit door and make sure it is central.

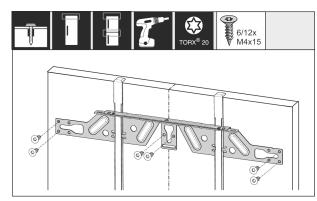


Fig. 56

▶ Fix the crosspiece using at least 6 screws for chipboard doors and at least 4 screws for panel doors.

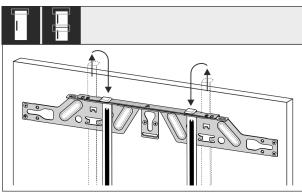


Fig. 57

Remove the fitting aids, turn round and insert into the adjacent opening.

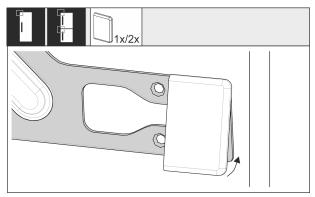


Fig. 58

▶ Put the cover on the crosspiece on the handle side.

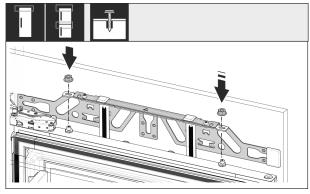


Fig. 59

Attach the custom panel and loosely screw the lock nuts onto the adjusting bolts.


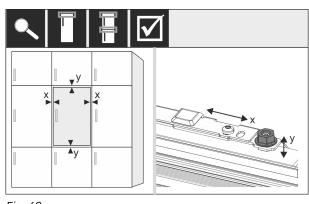


Fig. 60

Align the custom panel in the X and Y direction using the adjusting bolts.



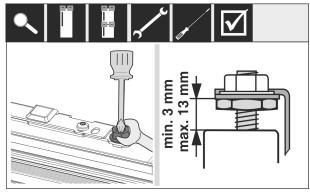

►

- Tighten the lock nuts.
- Check the adjusted height.


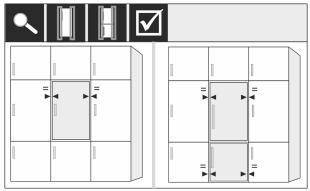


Fig. 62

For front panels thicker than 19 mm:

 Check the dimensions, weights and information in the following sections: (see 6 Custom panel weights) (see 17 Cabinet fronts)



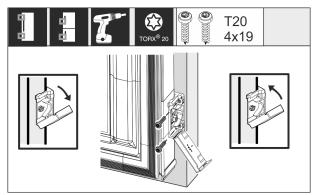

Cabinet fronts

Mounting the fastening bracket on the custom panel:Open the cover.

- Mounting the fastening bracket on the custom panel:
- Align the front edge of the mounting bracket parallel with the custom door panel edge and screw the bracket down tightly.

Mounting the fastening bracket on the custom panel:

Fold up the cover.

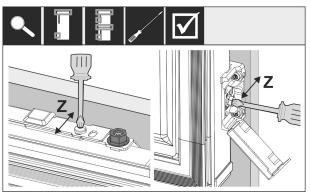


Fig. 64

Align the custom panel in the Z direction:

- Loosen the adjusting screw on the crosspiece and the screw on the mounting bracket.
- Move the door.

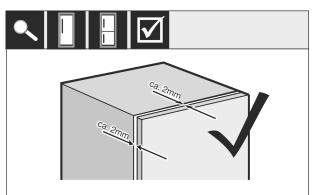


Fig. 65

- Check the gap between the custom panel and the unit body.
- Check all the screws and tighten them if necessary.

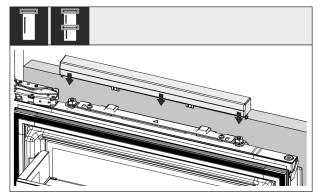


Fig. 66

Put on the top cover.

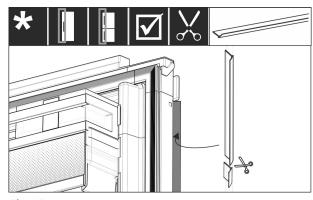


Fig. 67

- Cut the sealing strip to the required length.
- Insert the sealing strip between the front panel and the appliance door.

To make sure the appliance is correctly installed and there will not be any icing up, condensation or malfunctions, the following criteria apply:

- The door must close properly.
- The custom door panel must not touch the body of the unit.
- The seal on the upper corner on the handle side must be fitted securely.
- Check recess installation according to the criteria above.

17 Cabinet fronts

17.1 Dimensions

Depending on your model, you will need one or two cabinet doors. The size of the cabinet door(s) depends on the overall recess size and cabinet unit thickness.

Note

Observe the corresponding appliance and niche dimensions and installation sketches .

General requirements:

- Please note our appliance-specific recommendations on size and weight for fixed door installation (see 6 Custom panel weights).
- The body of the unit should be at least 16 mm thick but not more than 19 mm.
- When mounting a 2-door cabinet door, observe the recommended clearances.

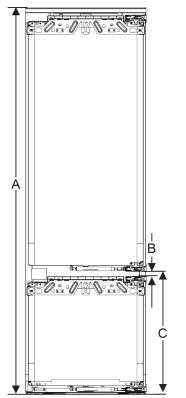


Fig. 68 Clearances for a 2-door cabinet door*

| Reason height 179.2 drawers* | | |
|----------------------------------|-----------------------|--|
| Recess height 178-2 drawers* | | |
| Appliance height (A) (mm) | 1770 | |
| Distance (B) (mm) | 15 | |
| Clearance (C) door-on-door (mm) | 549+15 (21 5/8 + 5/8) | |
| Recess height 178-3 drawers* | | |
| | | |
| Appliance height (A) (mm) | 1770 | |
| Distance (B) (mm) 15 | | |
| Clearance (C) door-on-door (mm) | 695+15 (27 3/8 + 5/8) | |

Other cabinet door above, below or next to it:

- The vertical gap between custom panels must be 4 mm.
- The horizontal gap between custom panels must be 4 mm. Check the risk of them clashing here. (see 17.3 Setting the clearance to avoid collision)

Weight and hinges:

- With heavy furniture fronts, the stress on the hinge is very high. The hinge may be damaged. Please note the maximum weight specification for your appliance in the chapter Furniture front weights (see 6 Custom panel weights).
- If the cabinet front exceeds the maximum permitted weight, an appliance with door-tracking device can help by loading the weight over several concealed hinges on the cabinet.
- If you use long unit fronts that protrude far above the appliances, we recommend an additional door hinge (e.g. Kamat), which must have the same pivot point as the fixed door hinge used with your appliance. By using another hinge (Kamat), the weight is shared over several points. The use of a milled compensating fastening is recommended for high unit fronts to counteract warping (convex/concave).

17.2 Mounting the cabinet front(s)

When installing, note:

- Cabinet front must be installed symmetrically to the refrigerator door.
- Adjoining cabinet front is exactly level.
- Adjoining cabinet front has the same edge radius as the front of the appliance.
- Cabinet front is flat and tension-free.
- The front panel has a minimum depth setting of approx. 2 mm to the body.
- ► Install the appliance in the recess. (see 16 Installing the appliance in the recess)
- Fasten the front panel to the appliance door. (see 16 Installing the appliance in the recess)
- Check that the front panel can close unobstructed. (see 17.3 Setting the clearance to avoid collision)

17.3 Setting the clearance to avoid collision

After installing the cabinet front(s), check that the cabinet fronts do not collide.

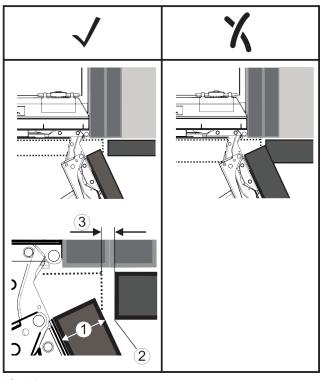


Fig. 69

(1) Front thickness (FD)(2) Edge radius (R)

(3) Clearance (S)

| | R (2) = 0 mm | | R = 1,2 mm | | R = 2 mm | | R = 3 mm | |
|------------|--------------|------|------------|------|----------|------|----------|------|
| FD(1) (mm) | Gmin | Gmax | Gmin | Gmax | Gmin | Gmax | Gmin | Gmax |
| 16 | 0,3 | 0,9 | 0,1 | 0,4 | 0,1 | 0,2 | 0,1 | 0,2 |
| 19 | 0,7 | 2,4 | 0,3 | 1,9 | 0,23 | 3,25 | 0,1 | 0,8 |
| 20 | 2 | 4,3 | 1,5 | 3,6 | 1 | 3,1 | 0,6 | 2,7 |
| 22 | 3,5 | 6,3 | 3 | 5,6 | 2,6 | 5,3 | 2,1 | 4,6 |
| 24 | 5,5 | 8,3 | 5 | 7,8 | 4,5 | 7,4 | 4 | 6,9 |
| 26 | 7,6 | 10,7 | 7 | 10,3 | 6,6 | 9,9 | 6,2 | 9,4 |

Fig. 70 Table of clearance limits

G_{min} = min. clearance in mm

G_{max} = max. clearance in mm

Note

When making adjustments, always make sure that the cabinet front suits the general appearance.

Check the collision factors and adjust them accordingly:

- Determine the front thickness and edge radius.
 Refer to the table for the min./max. clearance dimensions.
- Check the clearance size against the table.
- Do one of the following depending on the measured clearance size.

| Clearance | Description | | | | |
|--|---|--|--|--|--|
| S > G _{max} | If the clearance size is greater than the two limits, you do not need to make any adjust- ments. | | | | |
| S < G _{min} | If the clearance size is below the limits, you must increase it. Another option is to increase the edge radius. | | | | |
| G _{min} ≤ S ≤ G _{max} | If the clearance is between the two limits, you have to be careful. This will quickly lead to collisions. | | | | |

18 Water tank*

Depending on your model, the InfinitySpring water tank is behind the lowest drawer in the fridge or BioFresh compartment

18.1 Inserting the water tank

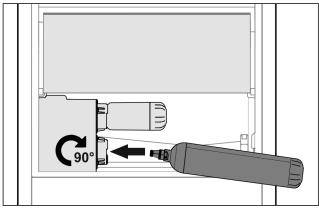


Fig. 71

- Remove the drawer compartment.
- Insert the water tank and rotate approx. 90° clockwise until it clicks in.
- Check that the tank is sealed and no water leaks out.
- Insert the drawer compartment.
- Vent the water system (see the Installation Instructions, Water Connection)

Instead of the water filter you can insert an additional water tank.

Note

You can purchase this water tank as an optional extra.

19 Water filter*

Depending on your model, the water filter is behind the lowest drawer in the fridge or BioFresh compartment.

It filters out deposits in the water and reduces the taste of chlorine.

- Replace the water filter at least every 6 months, or if there is a significant reduction in the flow rate.
- The water filter contains carbon and can be disposed of with the regular household waste.

Note

Water filters are available from the Liebherr-Hausgeräte store at home.liebherr.com/shop/de/deu/zubehor.html.

19.1 Inserting the water filter

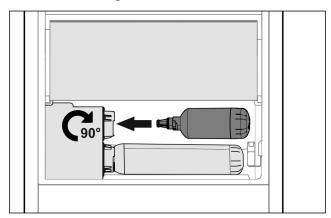


Fig. 72

- ▶ Remove the drawer compartment.
- Insert the water filter and rotate approx. 90° clockwise until it clicks in.
- Check that the filter is sealed and no water leaks out.
- ▶ Insert the drawer compartment.

New water filters can contain suspended matter.

- Draw 3 l of water from the InfinitySpring and dispose of it.
- \triangleright The water filter is now ready for use.

20 Connecting the appliance to the power supply

Danger of electric shock and injury due to damaged appliance or damaged mains cable!

Danger of cuts and fatal injuries. If the appliance or the mains cable is damaged during transport, you may be electrocuted. You could also cut yourself on damaged parts of the appliance housing.

- Check the appliance and the mains cable for damage after transport.
- Never put the appliance into operation if the appliance or the mains cable are damaged.
- ► Contact Customer Service.

You can connect your appliance to the mains using the power cable supplied separately. The mains power cable has an appliance coupler at one end and a mains plug at the other end.

Make sure that the following requirements are fulfilled:

- The appliance and power cable are undamaged.
- The appliance is installed in accordance with the regulations. (see 16 Installing the appliance in the recess)
- Requirements for the electrical connection are met. (see 2.3 Mains connection)
- Dimensions for connection in accordance with regulations are known and observed.
- Mains voltage and frequency correspond to the specifications on the type plate.

- The socket is earthed according to the regulations and fused.
- The fuse tripping current is between 10 A and 16 A.
- The socket is easily accessible and is not behind the appliance (see 4 Recess dimensions) .

NOTICE

 
Danger of damage to incorrect operation!

- Damage to the electrical components of the appliance.
- Only use the supplied mains cable.

Danger of fire due to incorrect connection! Burns.

Damage to the appliance.

- Do not use an extension cable.
- Do not use distributor blocks.



NOTICE

Danger of damage to incorrect connection!

- Damage to the appliance.
- Do not connect the appliance to a stand-alone inverter, e.g. solar power systems and petrol generators.
- Connect the mains plug of the power cable to the power supply.
- ▷ The Liebherr logo appears in the display.*
- Dash The display switches to the standby symbol.*
- ▷ If no action occurs within 60 seconds: The standby symbol fades or disappears.
- The appliance is connected. For information regarding first use, see the following section or the operating instructions.



home.liebherr.com/fridge-manuals

EN built-in fridges and freezers, fixed door

Issue date: 20240423

Part number index: 7088411-00

Liebherr-Hausgeräte GmbH Memminger Straße 77-79 88416 Ochsenhausen Deutschland