



Installation Guide

Quality, Design and Innovation





home.liebherr.com/fridge-manuals



LIEBHERR

General safety instructions

Contents

| 1 | General safety instructions | 2 |
|----------------------------|---|----------------------|
| 2 | Setup conditions | 3 |
| 2.1 | SpaceSetting up multiple appliances | 3 |
| 2.3 | Electrical connection | 4 |
| 3 | Appliance dimensions | 4 |
| 4 4.1 | Recess dimensions | 5 |
| 5 | Ventilation requirements | 5 |
| 6 6.1 | Custom panel weights | 6 |
| 7 7.1 7.2 | Water connection* Dimensions for the water connection Water pressure | 6 |
| 8 | Transporting the appliance | 6 |
| 9 | Unpacking the appliance | 7 |
| 10 10.1 | Setting up the appliance After setup | 7 |
| 11 | Disposal of packaging | 7 |
| 12 | Explanatory symbols used | 7 |
| 13 13.1 | **** freezer compartment door* Moving the door hinge | 8 |
| 14 | Reversing the door | 8 |
| 15 15.1 15.2 | Connecting the appliance to the water supply* Connecting the hose | 10 11 11 |
| 16 | Fit the appliance into the recess | 11 |
| 17 17.1 17.2 17.3 | Cabinet fronts Dimensions Mounting the cabinet front(s) Setting the clearance to avoid collision | 18 18 19 19 |
| 18 18.1 | Water tank* Inserting the water tank | 19 |
| 19 19.1 | Water filter* Installing the water filter | 19 20 |
| 20 | Connecting the appliance to the power supply | 20 |


The manufacturer is constantly working to improve all types and models. Therefore, please be aware that we reserve the right to make changes to the shape, equipment and technology.

| Syllibot | |
|----------|---|
| | |
| | |
| | ľ |
| | ŀ |

Symbol

Explanation Read instructions


Please read the information in these instructions carefully to understand all of the benefits of your new appliance.

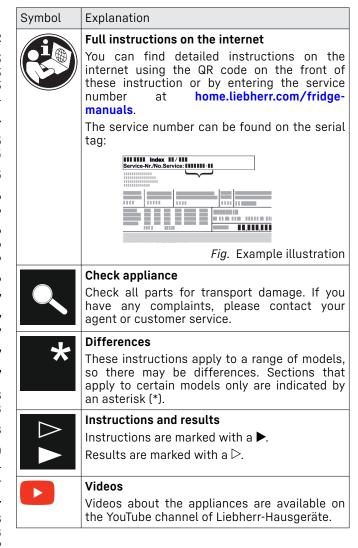

1 General safety instructions

- Please keep this assembly manual in a safe place so you can refer back to it at any time.
- If you pass the appliance on, please hand this assembly manual to the new owner.
- Read this assembly manual before installation and use in order to use the appliance safely and correctly. Follow the instructions, safety instructions and warning messages included at all times. They are important for ensuring you can operate and install the appliance safely and without any problems.
- First read the general safety instructions in the "General safety instructions" section of the **operating instructions**, which accompany these installation instructions, and follow them. If you cannot find the **operating instructions**, you can download the **operating instructions** from the internet by entering the service number at **home.liebherr.com/fridge-manuals**. The

service number can be found on the serial 2.1.1 Installation surface



tag:

Observe the warning messages and other detailed information in the other sections when installing the appliance:

| | DANGER | indicates a hazardous situation, which if not avoided, will result in death or serious injury. |
|-----------|---------|---|
| <u></u> ♠ | WARNING | indicates a hazardous situation, which if not avoided, could result in death or serious injury. |
| <u> </u> | CAUTION | indicates a hazardous situation, which if not avoided, will result in minor or moderate injury. |
| | NOTICE | indicates a hazardous situation, which if not avoided, could result in damage to property. |
| | Note | indicates useful advice and tips. |

2 Setup conditions



WARNING

Risk of fire due to moisture!

If live parts or the power cord get wet, this can cause a short circuit.

The appliance is designed for use in enclosed spaces. Do not operate the appliance in open space or in damp areas or where there is spray.

Normal use

- Only set up and use the appliance in enclosed spaces.
- Only use once installed.

2.1 Space



WARNING

Leaking refrigerant and oil!

Fire. The refrigerant contained within the appliance is environmentally friendly, but flammable. The oil contained within the appliance is flammable. Escaping refrigerant and oil can ignite if they are of high enough concentration and are exposed to an external heat source.

- Do not damage the pipelines of the coolant circuit and the compressor.
- If the appliance is installed in a very damp environment condensate water may form on the outside of the appliance.
 - Always ensure sufficient airflow and ventilation in the setup location.
- The more refrigerant there is in the appliance, the larger the space that it is installed in must be. If the space is too small, any leak may create a flammable mixture of gas and air. For every 8 g of refrigerant, the installation space must be at least 1 m3. Specifications on the refrigerant in the appliance can be found on the serial tag plate inside the appliance.

- The floor of the installation site must be horizontal and
- If you are installing the unit in a cabinet standing on an uneven floor: level the cabinet.

2.1.2 Installation position

- Do not install appliance in direct sunlight or next to an oven, radiator or similar.
- Only install the appliance in solid cabinets.

A set for restricting the door opening angle to 90° can be acquired from Customer Services for appliances with soft

2.2 Setting up multiple appliances

Risk of damage caused by water condensate!

Do not install this device directly beside another fridge/ freezer compartment.

NOTICE

Risk of damage caused by water condensate!

▶ Do not stack the appliance directly on top of another.

These appliances are designed for different types of installation. Only combine appliances if the appliances are designed for this. The following table shows the installation options by model:

| Setup type | Model |
|-----------------------|--|
| Single | All models |
| Side-by-Side (SBS) | Model that start with S . |
| Stacked | Models up to a maximum recess height of 880 mm and with a heated cover can be "stacked". |
| | Upper appliance: up to a maximum recess height of 140 mm |

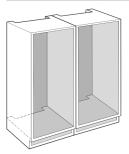


Fig. 1

Install each appliance into its own recess.

Appliance dimensions

2.3 Electrical connection



WARNING

Danger of fire due to incorrect positioning!

If the power supply cable or plug touches the back of the appliance, the vibration can damage the power supply cable or the plug resulting in a short circuit.

- ► Make sure the power supply cable is not trapped under the appliance when you position the appliance.
- ► Install the appliance so that it does not touch any plugs or power cables.
- ▶ Do not connect any appliances to sockets in the area of the back of the appliance.
- ▶ Do **not** place and operate power strips/power distributors and other electronic devices (such as halogen transformers) at the back of the appliances.

3 Appliance dimensions

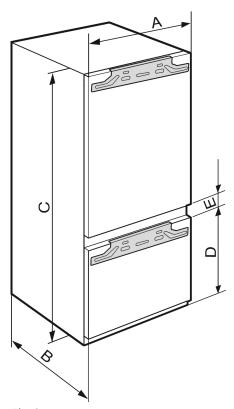


Fig. 2

| | A (mm) | B (mm) | C (mm) | D (mm) | E (mm) |
|---------------------------------|-----------|-----------|-----------|-----------|-----------|
| ICB 512 | | | | 549 | |
| IC 513 | | | | 695 | |
| S/ICN 513 | | | | | |
| ICBN 513 | | | | | |
| ICBN 513 | 559 | 546 | 1770 | | 15 |
| IC/B/N/bsci 51 | | | | | |
| IKG 51Ve03 / IKGN | | | | | |
| 51Vc03 / IKGN 51Ve03 / IKGBN | | | | | |
| 51Vd23i | | | | | |

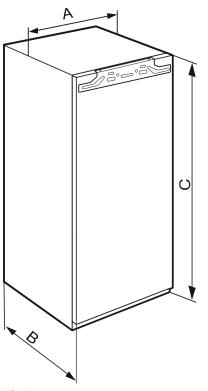


Fig. 3

| | A (mm) | B (mm) | C (mm) |
|--|--------|--------|--------|
| IFN 35 | | | 712 |
| IR 39 SIBai 39 SIBa20i 39 S/IF/N 39 | | | 872 |
| IR 40 IRB 40 | | | 1022 |
| IR 41 IRB 41 IRBbsbi 41 SIFN 41 | | | 1213 |
| IR 45 IRB 45 IRBbsbi 45 SIFN 45 | 559 | 546 | 1395 |
| IRB 48 | | | 1572 |
| IR 51 IRD 51 IRB 51 IRBbsci 51 IRBPbsci 51 SIFN 51 SIFN 51 SIFN 51 IK 51Ve00 / IK 51Ve01 / IKB 51Vc50i / IKB | | | 1770 |

4 Recess dimensions

4.1 Internal dimensions

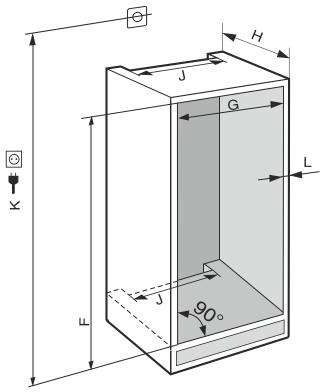


Fig. 4 (K): max. 2100 mm

Observe the following information for appliances with a permanent water connection:

- Water connection (see 7 Water connection*)
- Connect the appliance to the water supply (see 15 Connecting the appliance to the water supply*)

| IFN(i) 35 | | |
|------------------------|---------------------------|--|
| F (mm) | 714 to 730 | |
| G (mm) | 560 to 570 | |
| H (mm) | min. 550, recommended 560 | |
| J (mm) min. 500 | | |
| L (mm) | max. 19 | |

| IFN(i) 39 | IFN(i) 39 / IR(i) 39 / SIBa20i 3905 / SIFNi 39 | | |
|---|--|--|--|
| F (mm) 874 to 890 | | | |
| G (mm) | 560 to 570 | | |
| H (mm) min. 550, recommended 560 | | | |
| J (mm) min. 500 | | | |
| L (mm) max. 19 | | | |

| IR(B)(i) 4 | IR(B)(i) 40 | | |
|---|--------------|--|--|
| F (mm) | 1024 to 1040 | | |
| G (mm) | 560 to 570 | | |
| H (mm) min. 550, recommended 560 | | | |
| J (mm) min. 500 | | | |
| L (mm) max. 19 | | | |

| IR(B)(i) 41 / IRBbsbi 4170 / SIFNi 41 | | |
|---------------------------------------|------------|--|
| F (mm) 1216 to 1236 | | |
| G (mm) | 560 to 570 | |
| H (mm) min. 550, recommended 560 | | |
| J (mm) min. 500 | | |
| L (mm) max. 19 | | |

| IR(B)(i) 45 / IRBbsbi 4570 / SIFNi 45 | | |
|---------------------------------------|--------------------------|--|
| F (mm) 1397 to 1413 | | |
| G (mm) | G (mm) 560 to 570 | |
| H (mm) min. 550, recommended 560 | | |
| J (mm) min. 500 | | |
| L (mm) max. 19 | | |

| IRBi 48 | | |
|------------------------|---------------------------|--|
| F (mm) | 1574 to 1590 | |
| G (mm) | 560 to 570 | |
| H (mm) | min. 550, recommended 560 | |
| J (mm) min. 500 | | |
| L (mm) | max. 19 | |

IC(B)(N)..(i) 51.. / ICBNbsci 5173 / IKG 51Ve03 / IKGN 51Vc03 / ICNbsci 5173 / IKGN 51Ve03 / IR(B) (P)..(i) 51.. / IRD..i 51.. / IRBbsci 5170 / IRBbsci 5171 / IRBPbsci 5170 / IKB 51Vc51i / IK 51Ve00 / IK 51Ve01 / SICN..i 51.. / SIFN..(i) 51.. / SIFNbsdi 51..

| F (mm) | 1772 to 1788 |
|--------|---------------------------|
| G (mm) | 560 to 570 |
| H (mm) | min. 550, recommended 560 |
| J (mm) | min. 500 |
| L (mm) | max. 19 |

The specified energy consumption was determined with a kitchen unit depth of 560 mm . The appliance will work properly at a kitchen unit depth of 550 mm , but with a slightly higher energy consumption.

- ► Check the wall thickness of adjacent units: It must be a minimum of 16 mm .
- ► Only fit the appliance into stable, solid kitchen units. Secure the unit against tipping.
- ▶ Align the cabinets with a level and a try square. If necessary, level them by putting something underneath them
- ► Make sure floor and the side panels of the cabinet are at right angles to each other.

5 Ventilation requirements

NOTICE

Covered vents!

Damage. Appliance can overheat, which can reduce the service life of various parts of the appliance and lead to functional impairments.

- ► Always ensure good ventilation.
- ➤ Always keep vents or ventilation grills in the appliance housing and in the kitchen structure (built-in appliance) unobstructed.
- Never block air vents of the fan.

Custom panel weights

Comply with the ventilation gaps:

- The depth of the ventilation shaft at the back of the cabinet must be at least 38 mm.
- At least 200 cm² is required for the ventilation gap cross sections in the plinth and the housing cabinet.
- Basically, the larger the ventilation cross-section, the more efficiently the appliance will run.

Sufficient ventilation is required for the operation of the appliance. The ventilation grids provided ensure an effective ventilation cross-section on the appliance of 200 cm². If you replace the ventilation grids with a cover plate the ventilation cross-section must be as least as large as the ventilation grid provided by the manufacturer.

6 Custom panel weights

6.1 Weight

NOTICE

An excessively heavy custom panel can potentially cause damage!

If the custom panel is too heavy, damage to the hinges cannot be ruled out, which may compromise the functionality of the unit.

▶ Before installing the custom panel, ensure the custom panel does not exceed the permissible weight.

| Recess height (mm)* | Maximum weight of custom panel (kg)* |
|---------------------|--------------------------------------|
| 720 | 16 |
| 880 | 16 |
| 1020 | 13 |
| 1220 | 19 |
| 1400 | 21 |
| 1580 | 22 |
| 1780 | 26 |

Single-door fridges and freezers

| | height | Maximum weight of custom panel (kg)* | | | | |
|-------|--------|--------------------------------------|-------------|-----------------------|----------|--|
| (mm)* | | Fridge door* | compartment | Freezer ment door* | compart- | |
| 1780 | | 18 | | 12 | | |

Customizing combinations

7 Water connection*

If your appliance has a fixed water connection, a hose is supplied with it.

Note

You can purchase a hose of a different length as an accessory.

| Overview of dimensions for the water connection: | (see 7.1 Dimensions for the water connection) |
|--|--|
| Requirements for the water pressure: | (see 7.2 Water pressure) |
| Make the water connection: | (see 15 Connecting the appliance to the water supply*) |

7.1 Dimensions for the water connection

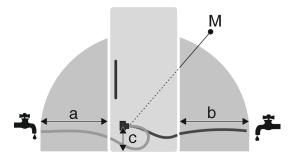


Fig. 5

- (a) Maximum available hose length*
- (b) Maximum available hose length*
- (c) Distance of solenoid valve to floor*
- (M) Solenoid valve*

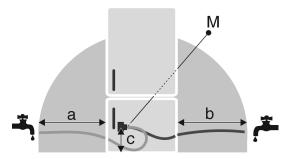


Fig. 6

- (a) Maximum available hose length*
- **(b)** Maximum available hose length*
- (c) Distance of solenoid valve to floor*
- (M) Solenoid valve*

| а | b | С |
|-----------|-----------|---------|
| ~ 1200 mm | ~ 1200 mm | ~ 55 mm |

7.2 Water pressure

The water connection line and solenoid valve of the appliance are suitable for a water pressure of up to 1 MPa (10 bar).

To ensure that the appliance functions correctly (flow rate, ice cube size, noise level), maintain the following water pressure:

| Water pressure: | |
|-----------------|--------------|
| bar | MPa |
| 1.5 to 6.2 | 0.15 to 0.62 |

| Water pressure if using the water filter:* | | | | |
|--|--------------|--|--|--|
| bar* MPa* | | | | |
| 2.8 to 6.2 | 0.28 to 0.62 | | | |

If the pressure is higher than 6.2 bar:

- Connect a pressure reducer.
- ► Make the water connection. (see 15 Connecting the appliance to the water supply*)

8 Transporting the appliance

Observe the following when transporting the appliance:

- ► Transport the appliance upright.
- ► Use two people when transporting the appliance.

During the first use:


► Transport the appliance packaged.

Unpacking the appliance

During appliance transport or at first use (e.g. when moving or cleaning):

- ► Empty the appliance.
- ► Secure the door against undesired opening.

▶ Pull off the transport lock on the appliance door.



► Clean the appliance (see User Guide, Cleaning the appliance)

9 Unpacking the appliance

If the appliance is damaged check with the supplier immediately before connecting it.

- Check the appliance and packaging for damage during transport. If you suspect any damage, please contact your supplier immediately.
- ► Remove all materials that could prevent it from being installed properly or prevent proper ventilation from the back or the side panels of the appliance.
- ► Remove all protective films from the appliance. Do not use sharp or pointed objects for this.

11 Disposal of packaging



WARNING

Danger of suffocation from packaging materials and films!

Do not allow children to play with packaging materials.

The packaging is made from recyclable materials:

- Corrugated card/cardboard
- Parts made of foamed polystyrene
- Films and bags from polyethylene
- Packing bands from polypropylene
- Wood frame nailed together with a polyethylene window*
- ► Take the packaging material to an official collection point.

10 Setting up the appliance



CAUTION

Risk of injury due to heavy appliance!

► Have two people transport the appliance to its installation site.



WARNING

Danger of injury and damage due to the appliance being unstable!

The appliance can tip over.

► Secure the appliance as described in the instructions.



WARNING

Danger of fire and damage!


▶ Do not place devices that give off heat, e.g. microwaves, toasters, etc. on the appliance.


If possible, have a professional install the appliance in your kitchen cabinet unit.

Do not install the appliance without assistance.

10.1 After setup

► Remove all transport packaging.

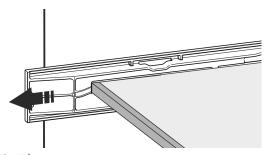



12 Explanatory symbols used

| \triangle | There is the risk of injury when doing this! Obey the safety instructions! |
|-------------|---|
| * | These instructions apply to several models. Only perform this step if it applies to your appliance. |
| | To install, please follow the detailed description in the Guide. |
| | This section applies either to a single-door appliance or a double-door appliance. |
| | Choose one of the options: Appliance with right-hinged door or appliance with left-hinged door. |
| | Installation step necessary with IceMaker and/or InfinitySpring. |
| | Loosen or tighten screws slightly. |
| | Tighten the screws fully. |

**** freezer compartment door*

| | Check to see if the next step applies for your model. |
|-----------|--|
| | Check the components are in correctly. |
| nulmdanla | Measure the specified measurement and adjust if necessary. |
| | Installation tool: Meter stick |
| TORX® 20 | Tool for assembly: Cordless screw-driver and attachments |
| | Tool for assembly: Spirit level |
| SW7 SW10 | Tool for assembly: Size 7 and size 10 spanner |
| | Two people are required for this step. |
| | This step takes place at the selected location of the appliance. |
| | Aid for assembly: String |
| | Aid for assembly: Square |
| | Aid for assembly: Screwdriver |
| | Aid for assembly: Scissors |
| | Aid for assembly: Non-permanent marker pen |
| | Accessory kit: Remove components |



Dispose of components that are no longer needed.

13 **** freezer compartment door*

It is very easy to reposition the hinge of the **** freezer compartment door if the main door hinge is swapped. If the main door of the appliance can be opened to more than 115° (1), you can open the freezer compartment without repositioning the hinge. If the opening angle (2) of the appliance door is less than this, the hinge must be repositioned.

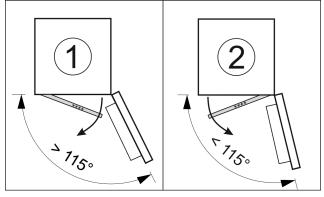


Fig. 8

13.1 Moving the door hinge

The slider for moving the door hinge is located on the back of the **** freezer compartment door at the bottom.

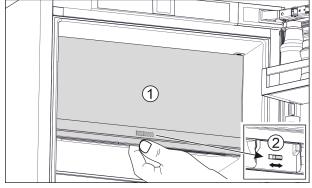


Fig. 9

- ► Close the **** freezer compartment door (1).
- ► Grab the **** freezer compartment door from below.
- ▶ Move the slider (2) either to the right or to the left.

14 Reversing the door

Tool







Fig. 10

NOTICE

Live parts!

Damage to electrical components.

▶ Disconnect the power plug before reversing the door.

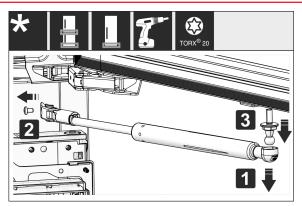


Fig. 11 *

► Removing the soft stop damper: Remove the soft stop damper from the ball stud (1). Unscrew the retainer (2). Remove the ball stud with a screwdriver (3).*

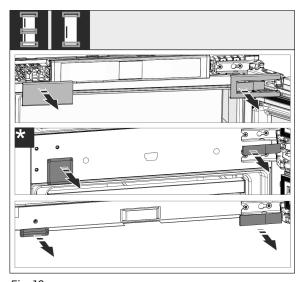


Fig. 12

► Remove covers.

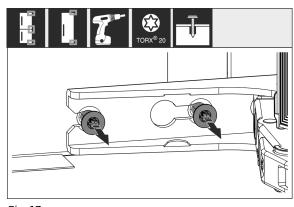


Fig. 13

▶ Loosen the screws on **all** hinges but do not remove them.

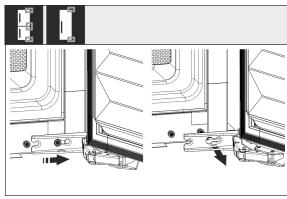


Fig. 14

► Remove the door: Push the door forward and then out, unhook it and put it to one side.

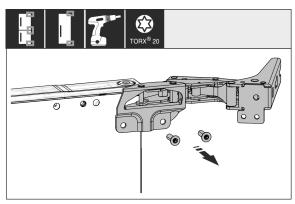


Fig. 15

▶ Unscrew all hinges and set aside together with the screws.

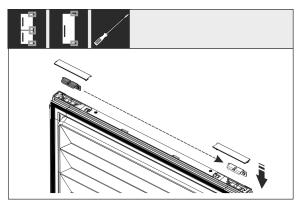


Fig. 16

► Loosen and shift the bracket at the top and bottom of the door. The bracket must be shifted so you can screw on the hinges.

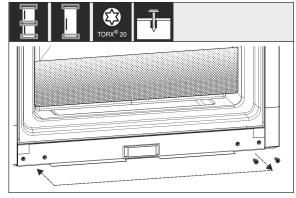


Fig. 17

Connecting the appliance to the water supply*

► Shift the screws to fasten the hinge. Do not screw tightly after shifting – you need to hang the hinges later.

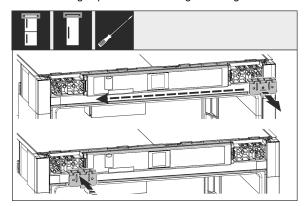


Fig. 18

► Swap the fixing bracket to the opposite side.

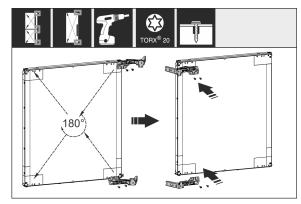


Fig. 19

► Turn all hinges 180° to the opposite side and screw firmly.

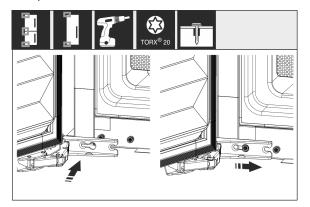


Fig. 20

► Refitting the door: Hang the door with its hinges and tighten the screws.

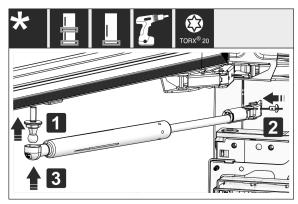


Fig. 21 *

- ► Refit the closing dampers: Screw in the ball studs (1), tighten the bracket (2), and hang the closing dampers in the ball studs.*
- ► Check all screws and retighten if necessary.

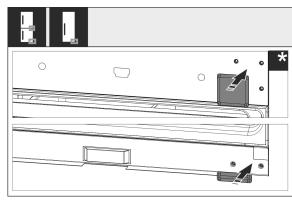


Fig. 22

Reassemble the bottom and center cover. Only replace the remaining covers after installing the appliance back into the cabinet.

15 Connecting the appliance to the water supply*

Make sure that the following requirements are fulfilled:

- ☐ The dimensions for the water supply connection are known and complied with. (see 7.1 Dimensions for the water connection)
- ☐ The correct water pressure is maintained. (see 7.1 Dimensions for the water connection)
- Water is supplied to the appliance via a cold water pipe that can withstand the operating pressure and is connected to the drinking water supply.
- □ All equipment and devices used for the water supply comply with the applicable regulations in the country of use.
- ☐ The back of the appliance is accessible so that you can connect the appliance to the drinking water supply.
- ☐ You are using the supplied hose. Old hoses have been disposed of.
- ☐ The hose connector contains a screen filter with a seal.
- There is a faucet between the hose line and the domestic water connection so that you can turn off the water supply if necessary.
- ☐ The faucet is not directly behind the appliance and is easily accessible. This way, you can push the appliance as far as possible into the cabinet recess and can quickly turn off the faucet if necessary.



WARNING

Risk of electric shock from water!

- ▶ Before connecting to the water hose: Disconnect the appliance from the mains.
- ▶ Before connecting to water lines: Shut off the water supply.
- ▶ Make sure that only qualified personnel connect the device to the drinking water supply.



WARNING

Risk of poisoning due to contaminated water!

► Connect to potable water supply only.

Fit the appliance into the recess

15.1 Connecting the hose

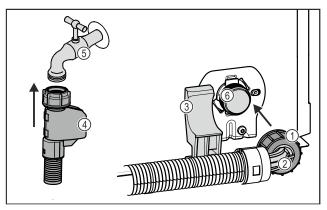


Fig. 23

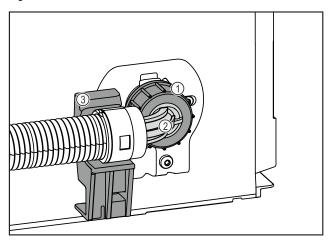


Fig. 23

- (1) Nu
- (2) Angled hose end
- (3) Bracket
- (4) Straight hose end
- **(5)** Faucet
- (6) Solenoid valve: The solenoid valve is at the bottom on the back of the appliance. It has an R3/4 connecting thread.

NOTICE

Risk of damage from incorrect installation!

- ▶ Do not damage or kink the hose.
- Do not damage or kink the hose during installation in the cabinet recess.

Connecting the hose to the appliance:

- ▶ Position and hold the angled hose end Fig. 23 (2) horizontally on the bracket Fig. 23 (3).
- Screw on the nut *Fig. 23 (1)* on by hand until it is firmly in place.
- \triangleright The hose is connected to the appliance.

Connecting the hose to the faucet:

- ► Connect the straight hose end Fig. 23 (4) to the faucet Fig. 23 (5).
- The hose is connected to the faucet.

15.2 Check the water system

Before you completely install the appliance in the cabinet recess, Liebherr recommends checking the water system for leaks.

- ▶ Put in the InfinitySpring water tank. (see 18 Water tank*)
- ▶ Put in the InfinitySpring water filter. (see 19 Water filter*)
- Slowly turn on the faucet.
- ► Check the hose, water feed and connections for leaks.

- > The water system has now been checked for leaks.
- > The water system is not leaking: You can install the appliance completely in the cabinet recess.

Note

InfinitySpring: Before the first use, you must put the InfinitySpring into operation. To do this you must bleed and clean the water system. (see Quick Start Guide or operating instructions)*

IceMaker: Before the first use, you must clean the IceMaker. (see Quick Start Guide or operating instructions)*

16 Fit the appliance into the recess

Tool





Fig. 24

Supplied installation parts

Fit the appliance into the recess

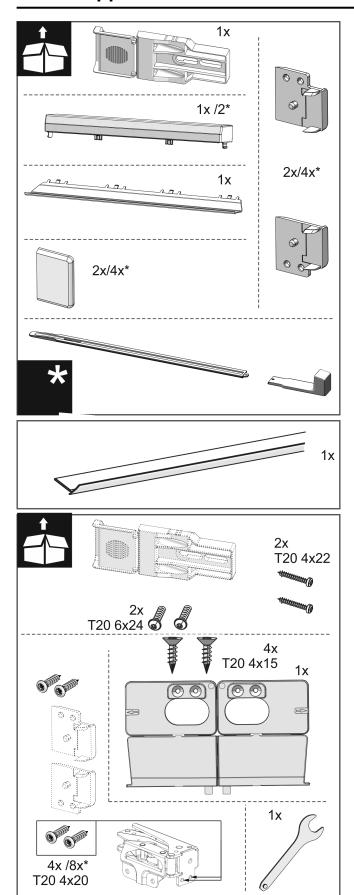


Fig. 25


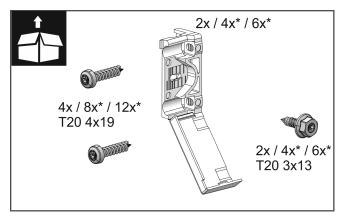


Fig. 26

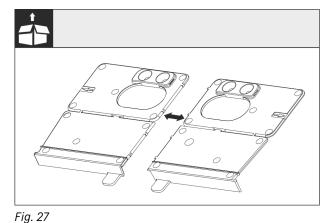


▶ Separate the floor mounting bracket Fig. 27 () at the perforation.

NOTICE

Correct installation depth of the appliance.

Using the mounting bracket ensures the correct installation depth of the appliance.

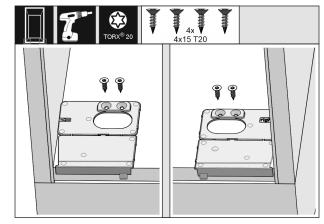

Screw the mounting brackets on the left and right of the recess floor, flush to the side wall.

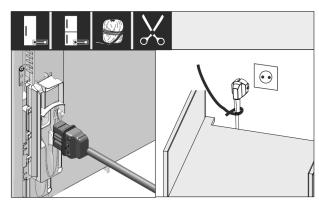


Fig. 29

- Remove the power cable from the package and plug it into the back of the appliance.
- Use a string to route the power plug cord to the accessible socket.

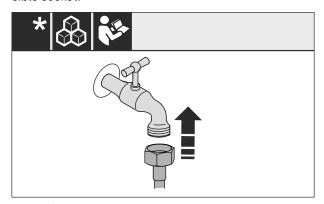


Fig. 30 *

► If necessary, install the water connection at this point, following the instructions in the User Guide.*

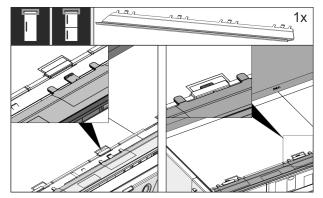


Fig. 31

► Insert the adapter panel on the top of the appliance. The panel can be moved to both sides.

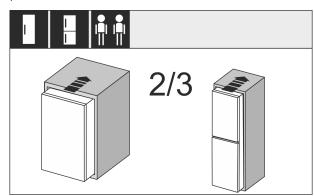


Fig. 32

► Slide the appliance 2/3 of the way into the cabinet recess.

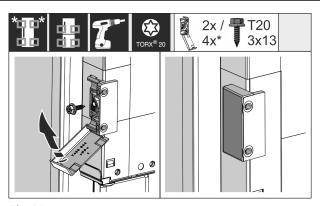


Fig. 33

- ➤ Fit the mounting bracket. Attach the mounting bracket at the height of the custom door panel handles. For a large door, use four mounting brackets.
- ► After assembly, fold the covers onto the bracket.


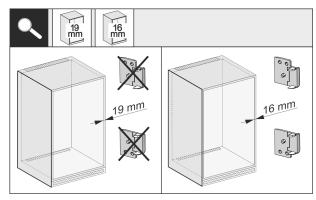


Fig. 34

► Check whether the unit side wall is 16 mm or 19 mm thick.

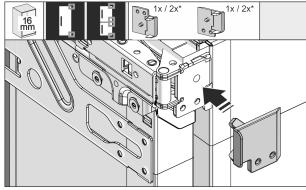

Fia. 35

- ▶ 16 mm thick unit side walls: Put a spacer on all hinges.
- ▶ 19 mm thick unit side walls: You do not need a spacer.

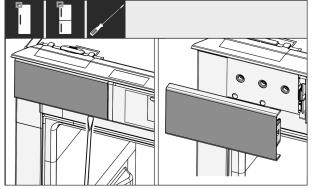


Fig. 36

► Use a screwdriver to loosen the cover at the top left and then remove it.

Fit the appliance into the recess

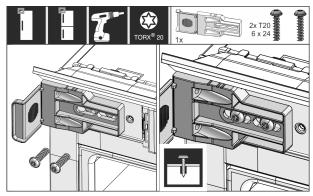


Fig. 37

▶ Loosely screw on the mounting bracket. The bracket should still be easy to move.

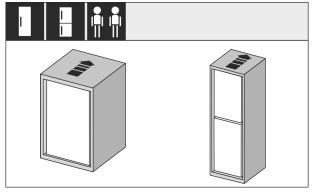


Fig. 38

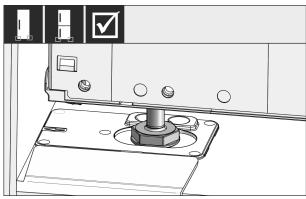


Fig. 39

▶ Push the appliance all the way into the unit recess. The adjustable feet must rest in the recesses in the brackets on both sides.

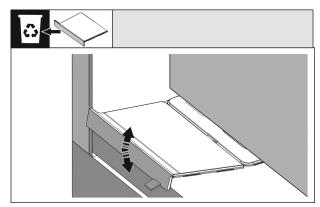


Fig. 40

Remove the floor mounting bracket stopper. Loosen the stopper by moving it and, if necessary, pull it off with the help of pliers.

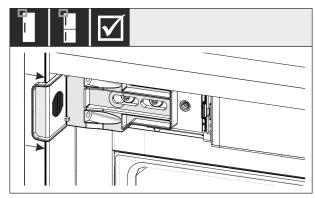


Fig. 41

► Check that the appliance is flush in the cabinet recess. The mounting bracket must be attached to the side wall of the cabinet recess.

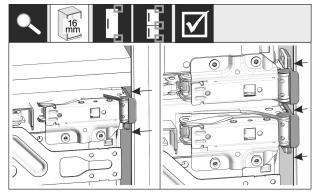


Fig. 42

NoteWith 16 mm unit side walls, the spacers fit against the unit recess on the hinge side.

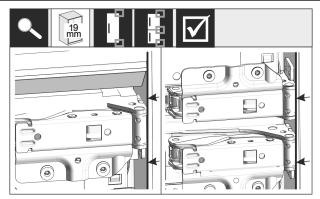


Fig. 43

▶ 19 mm thick unit side walls: Align the front of the hinges flush with the unit side wall.

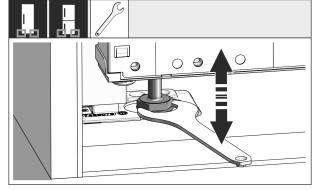


Fig. 44

▶ If necessary, level the appliance using the adjusting feet.

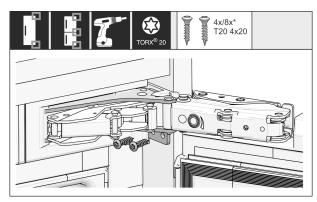


Fig. 45

► Screw on the appliance on the hinge side.

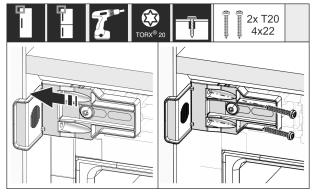


Fig. 46

- ▶ Move the bracket so it sits flush on the side wall of the cabinet recess.
- ► Tighten all the screws securely.

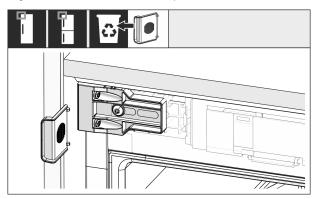


Fig. 47

► Remove the stop from the bracket on the handle side and dispose of it.

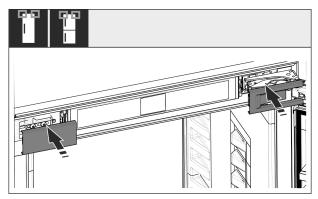


Fig. 48

▶ Place the cover.

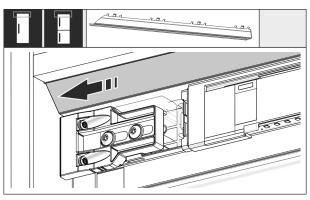


Fig. 49

▶ Slide the panel so that it sits flush with the side of the cabinet wall

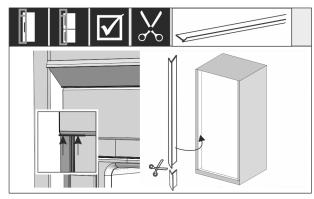


Fig. 50

- ► If necessary: Shorten the sealing strip as necessary with a sharp pair of scissors.
- ▶ Position the sealing strip below the top cover and press it in. The sealing strip is magnetic.

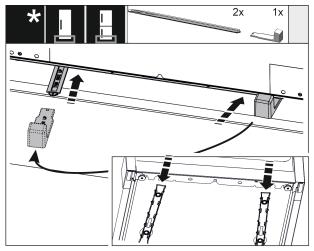


Fig. 51

The height adjustment is only supplied as standard for recess heights of 1400 mm and above. It is used for sound optimization. Both parts of the height adjuster are included in the accessory kit.

Stabilize the bottom of the appliance at the rear:

- ▶ Plug the grip into the height adjuster rail.
- ▶ Push the rail into the bottom of the appliance.
- ► Pull off the grip.
- ▶ Do the same thing with the second rail.

Fit the appliance into the recess

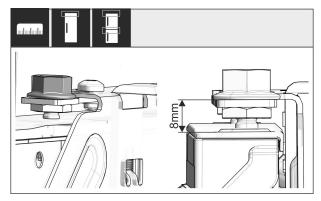


Fig. 52

- Close the door.
- ► Check the preset of 8 mm from the upper edge of the appliance door to the crosspiece support.

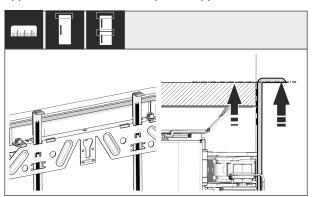


Fig. 53

► Push up mounting aids to the height of the cabinet door. Bottom stop edge of the fitting aid = top edge of the door to be fitted.

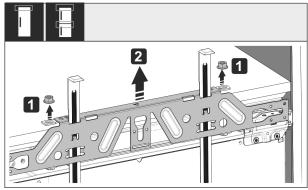


Fig. 54

- ► Loosen locknuts Fig. 54 (1).
- ► Remove crosspiece Fig. 54 (2).

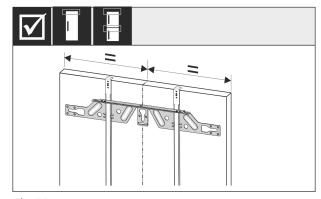


Fig. 55

► Center-align the crosspiece on the inside of the cabinet

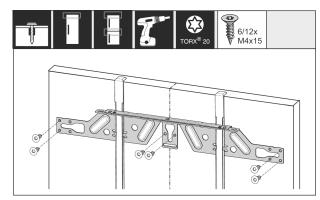


Fig. 56

► Fix the crosspiece using at least 6 screws for chipboard doors and at least 4 screws for panel doors.

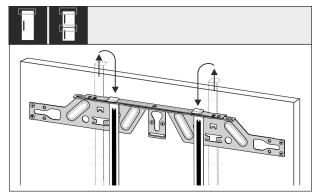


Fig. 57

▶ Remove the fitting aids, turn round and insert into the adjacent opening.

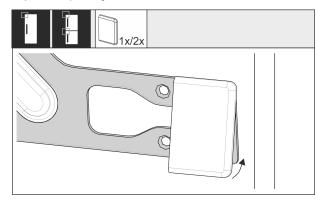


Fig. 58

▶ Put the cover on the crosspiece on the handle side.

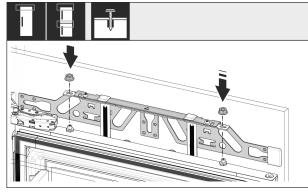


Fig. 59

Attach the custom panel and loosely screw the lock nuts onto the adjusting bolts.

Fit the appliance into the recess

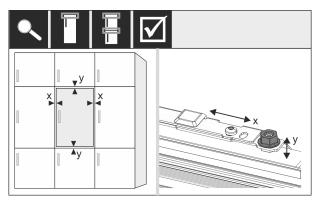


Fig. 60

► Align the custom panel in the X and Y direction using the adjusting bolts.

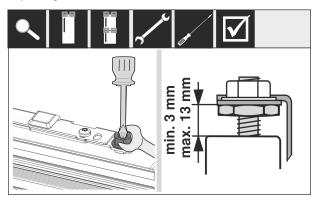


Fig. 61

- ► Tighten the lock nuts.
- Check the adjusted height.

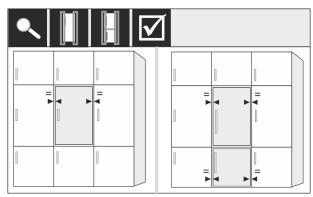


Fig. 62

For front panels thicker than 19 mm:

► Check the dimensions, weights and information in the following sections: (see 6 Custom panel weights) (see 17 Cabinet fronts)

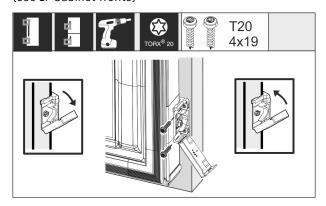


Fig. 63

Mounting the fastening bracket on the custom panel:

- ► Open the cover.
- Mounting the fastening bracket on the custom panel:
- ► Align the front edge of the mounting bracket parallel with the custom door panel edge and screw the bracket down tightly.
 - Mounting the fastening bracket on the custom panel:
- Fold up the cover.

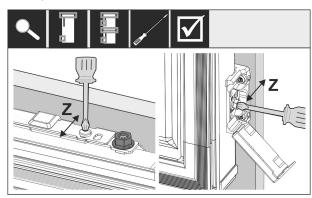


Fig. 64

Align the unit door in the Z direction:

- ▶ Loosen the adjusting screw on the crosspiece and the screw on the mounting bracket.
- Move the door.


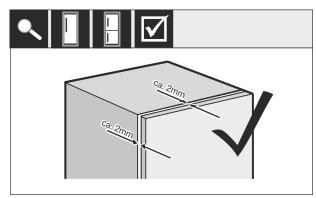


Fig. 65

- Check the gap between the custom panel and the unit body.
- ► Check all the screws and tighten them if necessary.

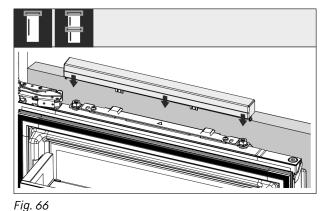

► Put on the top cover.

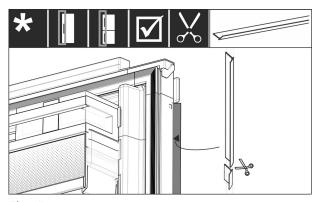


Fig. 67

- ► Cut the sealing strip to the required length.
- ► Insert the sealing strip between the front panel and the appliance door.

To make sure the appliance is correctly installed and there will not be any icing up, condensation or malfunctions, the following criteria apply:

- The door must close properly.
- The custom door panel must not touch the body of the unit.
- The seal on the upper corner on the handle side must be fitted securely.
- ► Check recess installation according to the criteria above.

17 Cabinet fronts

17.1 Dimensions

Depending on your model, you will need one or two cabinet doors. The size of the cabinet door(s) depends on the overall recess size and cabinet unit thickness.

Note

Observe the appliance and recess dimensions and follow the installation diagrams . See the relevant catalog for the installation diagrams.

General requirements:

- Please refer to our catalogs for appliance-specific recommendations on size and weight for fixed door installations.
- The body of the unit should be at least 16 mm thick but not more than 19 mm.
- When mounting a 2-door cabinet door, observe the recommended clearance.

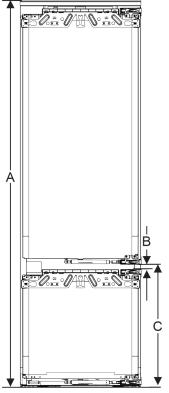


Fig. 68 Clearances for a 2-door cabinet door*

| Recess height 178-2 drawers* | | | | |
|----------------------------------|-----------------------|--|--|--|
| Appliance height (A) (mm) | 1770 | | | |
| Distance (B) (mm) | 15 | | | |
| Clearance (C) door-on-door (mm) | 549+15 (21 5/8 + 5/8) | | | |

| Recess height 178-3 drawers* | | | | |
|----------------------------------|-----------------------|--|--|--|
| Appliance height (A) (mm) | 1770 | | | |
| Distance (B) (mm) | 15 | | | |
| Clearance (C) door-on-door (mm) | 695+15 (27 3/8 + 5/8) | | | |

Other cabinet door above, below or next to it:

- The vertical gap between custom panels must be 4 mm.
- The horizontal gap between custom panels must be 4 mm. Check the risk of them clashing here. (see 17.3 Setting the clearance to avoid collision)

Weight and hinges:

- Heavy cabinet fronts increase the stress on the hinge. The hinge may be damaged. As such, refer to the catalog for the maximum weight specification for your appliance.
- If the cabinet front exceeds the maximum permitted weight, an appliance with door-tracking device can help by loading the weight over several concealed hinges on the cabinet.
- If you use long unit fronts that protrude far above the appliances, we recommend an additional door hinge (e.g. Kamat), which must have the same pivot point as the fixed door hinge used with your appliance. By using another hinge (Kamat), the weight is shared over several points. The use of a milled compensating fastening is recommended for high unit fronts to counteract warping (convex/concave).

17.2 Mounting the cabinet front(s)

When installing, note:

- Cabinet front must be installed symmetrically to the refrigerator door.
- Adjoining cabinet front is exactly level.
- Adjoining cabinet front has the same edge radius as the front of the appliance.
- Cabinet front is flat and tension-free.
- The front panel has a minimum depth setting of approx. 2 mm to the body.
- ► Install the appliance in the recess. (see 16 Fit the appliance into the recess)
- ► Fasten the front panel to the appliance door. (see 16 Fit the appliance into the recess)
- ► Check that the front panel can close unobstructed. (see 17.3 Setting the clearance to avoid collision)

17.3 Setting the clearance to avoid collision

After installing the cabinet front(s), check that the cabinet fronts do not collide.

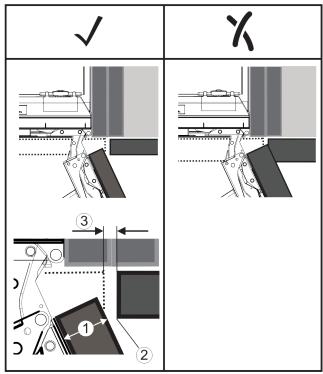


Fig. 69

- (1) Front thickness (FD)
- (3) Clearance size (S)
- (2) Edge radius (R)

| | R (2) = 0 mm | | R = 1,2 mm | | R = 2 mm | | R = 3 mm | |
|------------|--------------|------|------------|------|----------|------|----------|------|
| FD(1) (mm) | Gmin | Gmax | Gmin | Gmax | Gmin | Gmax | Gmin | Gmax |
| 16 | 0,3 | 0,9 | 0,1 | 0,4 | 0,1 | 0,2 | 0,1 | 0,2 |
| 19 | 0,7 | 2,4 | 0,3 | 1,9 | 0,23 | 3,25 | 0,1 | 0,8 |
| 20 | 2 | 4,3 | 1,5 | 3,6 | 1 | 3,1 | 0,6 | 2,7 |
| 22 | 3,5 | 6,3 | 3 | 5,6 | 2,6 | 5,3 | 2,1 | 4,6 |
| 24 | 5,5 | 8,3 | 5 | 7,8 | 4,5 | 7,4 | 4 | 6,9 |
| 26 | 7,6 | 10,7 | 7 | 10,3 | 6,6 | 9,9 | 6,2 | 9,4 |

Fig. 70 Table of clearance limits

G_{min} = min. clearance in mm

 G_{max} = max. clearance in mm

Note

When making adjustments, always make sure that the cabinet front suits the general appearance.

Check the collision factors and adjust them accordingly:

- Determine the front thickness and edge radius.
- ▶ Refer to the table for the min./max. clearance dimensions
- ► Check the clearance size against the table.
- ▶ Do one of the following depending on the measured clearance size.

| Clearance size | Description |
|-------------------------------|---|
| S > G _{max} | If the clearance size is greater than the two limits, you do not need to make any adjustments. |
| S < G _{min} | If the clearance size is below the limits, you must increase it. Another option is to increase the edge radius. |
| $G_{\min} \le S \le G_{\max}$ | If the clearance is between the two limits, you have to be careful. This will quickly lead to collisions. |

18 Water tank*

Depending on your model, the InfinitySpring water tank is behind the lowest drawer in the fridge or BioFresh compartment

18.1 Inserting the water tank

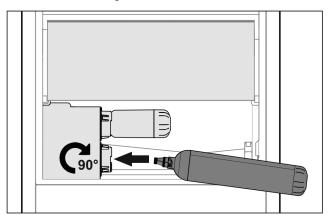


Fig. 71

- ► Remove the drawer.
- ▶ Insert the water tank and turn approx. 90° to the right until it engages.
- ► Check that the water tank is sealed and no water leaks out.
- ► Insert the drawer.
- ➤ Vent the water system (see Installation Instructions, Water Connection)

Instead of the water filter, you can use an additional water tank.

Note

The water tank is available as a spare part.

19 Water filter*

Depending on your model, the water filter is behind the lowest drawer in the fridge or BioFresh compartment.

It absorbs deposits in the water and reduces the taste of chlorine.

Connecting the appliance to the power supply

- □ Replace the water filter at least every 6 months under the specified usage conditions or if the flow rate drops significantly.
- ☐ The water filter contains carbon and can be disposed of with the regular household waste.

Note

The water filter can be purchased from the Liebherr-Hausgeräte store at home.liebherr.com/shop/de/deu/zubehor.html.

19.1 Installing the water filter

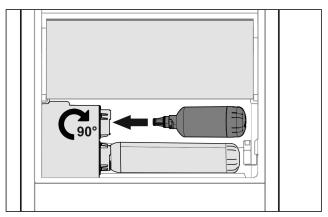


Fig. 72

- Remove the drawer.
- ► Insert the water filter and turn clockwise approx. 90° until it engages.
- Make sure the filter does not leak and no water is coming out.
- Insert the drawer.



CAUTION

New water filters may contain particulate matter.

- Draw 3 l of water from the InfinitySpring and dispose of it.
- > The water filter is now ready for use.

20 Connecting the appliance to the power supply



WARNING

Danger of electric shock and injury due to damaged appliance or damaged mains cable!

Cuts and fatal injury. If the appliance or the mains cable is damaged during transport, you may be electrocuted. You could also cut yourself on damaged parts of the appliance housing.

- ► Check the appliance and the mains cable for damage after transport.
- ► Never put the appliance into operation if the appliance or the mains cable are damaged.
- ► Contact Customer Service.

You can connect your appliance to the mains using the power cable supplied separately. The mains power cable has an appliance coupler at one end and a mains plug at the other end.

Make sure that the following requirements are fulfilled:

- The appliance and power cable are undamaged.
- The appliance is installed in accordance with the regulations. (see 16 Fit the appliance into the recess)

- Requirements for the electrical connection are met. (see 2.3 Electrical connection)
- Dimensions for connection in accordance with regulations are known and observed.
- Mains voltage and frequency correspond to the specifications on the type plate.
- The socket is grounded and fused in accordance with regulations.
- The tripping current for the fuse is between 10 A and 16 A.
- Outlet is easily accessible and is not behind the appliance (see 4 Recess dimensions).

NOTICE

Danger of damage to incorrect operation!

Damage to the electrical components of the appliance.

▶ Only use the supplied power cable.




WARNING

Danger of fire due to incorrect connection! Burns.

Damage to the appliance.

- ▶ Do not use an extension cord.
- Do not use a multipoint connector strip.



NOTICE

Danger of damage to incorrect connection! Damage to the appliance.

- Do not connect the appliance to a stand-alone inverter, e.g. solar power systems and petrol generators.
- Connect the mains plug of the power cable to the power supply.
- The Liebherr logo appears in the display.*
- ▷ The display switches to the standby symbol.*
- ▷ If no action is taken within 60 seconds: Standby symbol fades or disappears.
- Appliance is connected. For initial commissioning, see the next chapter or the operating instructions.

| Connecting the appliance to the power supply | |
|--|--|
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |



home.liebherr.com/fridge-manuals

Refrigerators and freezers for integrated use, door-on-door


Part number index: 7088411-00

Issue date: 20240208

Installation instructionsMulti-temperature wine cabinet

Page 14




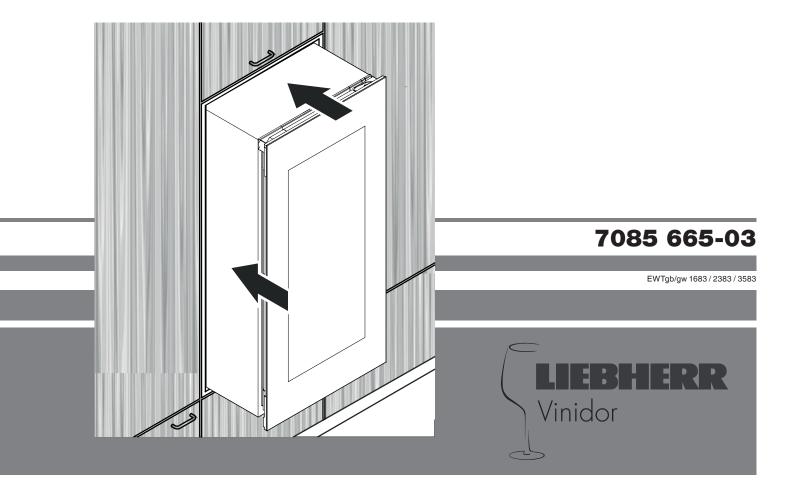

Content

| Scope of delivery | 14 |
|----------------------------|----|
| Appliance dimensions | 14 |
| Transporting the appliance | 15 |
| Installation dimensions | 16 |
| Appliance venting | 16 |
| Changing over door hinges | 17 |
| Installing the appliance | 20 |
| Adjusting the door | 24 |

Scope of delivery



Labels


2 pc. - EWT 1683 4 pc. - EWT 2383 8 pc. - EWT 3583

2 pc.

5 pc.

2 pc.


2 pc.




Cover






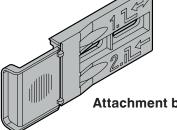



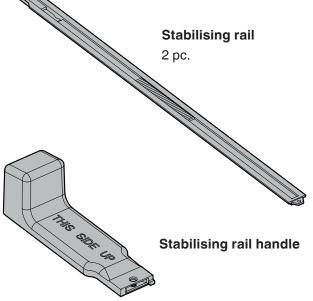


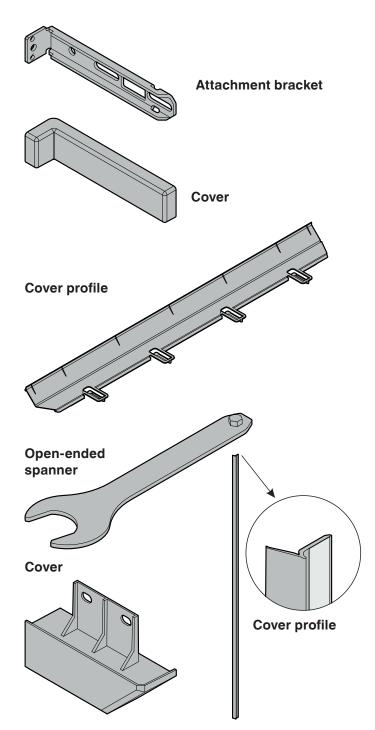


Appliance dimensions

| Α | 510 mm | |
|---|----------------|--|
| | EWT 16 906 mm | |
| В | EWT 23 1233 mm | |
| | EWT 35 1816 mm | |
| С | 572 mm | |
| | EWT 16 872 mm | |
| D | EWT 23 1218 mm | |
| | EWT 35 1770 mm | |
| E | 595 mm | |
| F | 557 mm | |
| G | 254 mm | |
| Н | 1100 mm | |
| I | 115° | |
| | EWT 16 26.5 mm | |
| J | EWT 23 7.5 mm | |
| | EWT 35 27 mm | |
| | EWT 16 7.5 mm | |
| K | EWT 23 7.5 mm | |
| I | EWT 35 19 mm | |


Side view

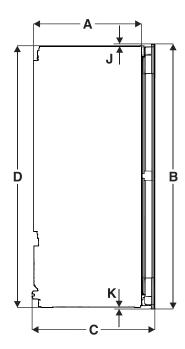

Front view

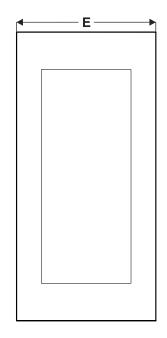

View from above

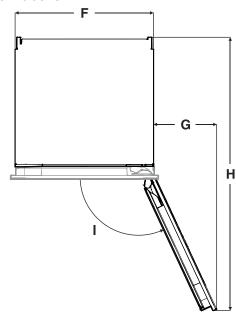

Transporting the appliance


A CAUTION

 $Danger of injury \, or \, damage \, as \, a \, result \, of incorrect \, transport!$

- Transport the appliance in a packed condition.
- Transport the appliance upright.
- Do not transport the appliance without assistance.

⚠ WARNING!

An appliance which has not been built in can topple over!

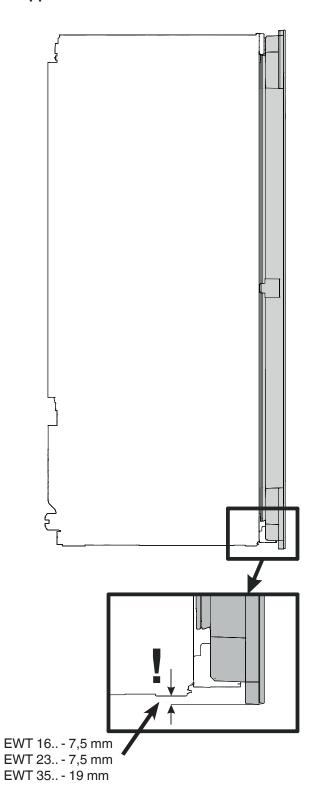


Installation dimensions

Important note

In order to avoid any problems when installing the appliance and to avoid damage to the appliance, the following conditions must be complied with.

The kitchen unit must be aligned horizontally and vertically!

Minimum wall thickness of the body of the unit = 16 mm.

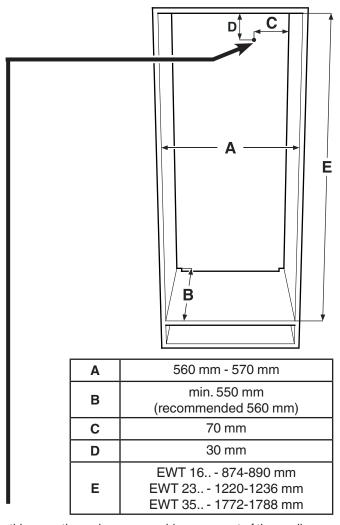

In this area, the mains power cable comes out of the appliance rear.


Free length of the mains power cable:

EWT 16..: 2000 mm EWT 23..: 2000 mm EWT 35..: 2800 mm

Choose the position of the socket considering these specifica-

The socket must not be situated behind the appliance and must be easily accessible.

Appliance venting

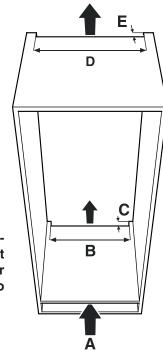


| Imp | ortan | t note |
|-----|-------|--------|
| The | alaar | vontil |

The clear ventilation crosssection must be at least 200 cm² from the lower ventilation opening right to the upper one.

| Α | min. 200 cm² | |
|---|----------------------|--|
| В | min. 500 mm | |
| С | min. 40 mm | |
| D | D min. 500 mm | |
| E | min. 40 mm | |

Types of air outlet

- ① Directly above the appliance
- 2 Above the top unit
- 3 From the front of the top unit with decor grille

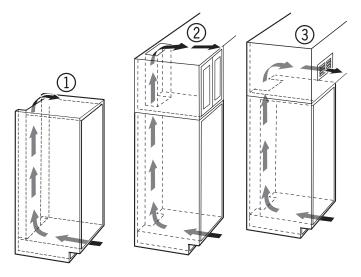

Important note

When using decor grilles, it must be taken into account that the clear ventilation cross-section corresponds to the sum of the individual openings in the grille.

A cut-out section of merely 200 cm² for installing the ventilation grille is thus not sufficient.

Changing over door hinges

Door hinges should only be changed by a trained expert.

Changing the door hinges must be done by two people.


High door weight.

Danger of injury and damage to property. Only complete the modification work if you can lift a weight of 35 kg.


■ <u></u> WARNING! ■■■

Risk of injury due to the door dropping out! If the fastening parts are not screwed into place firmly enough, the door may drop out. This may lead to severe injuries. What is more, the door may not close and therefore the appliance may fail to cool properly.


1. Remove covers.

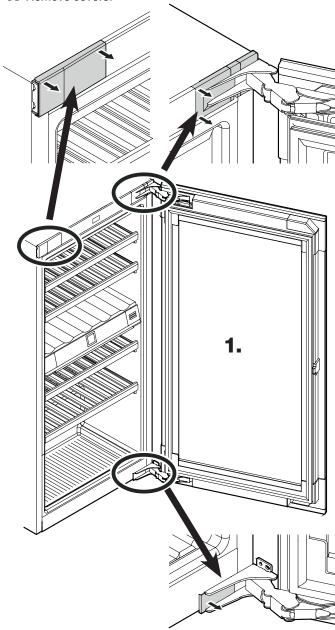


2. Remove the transportation safety component.

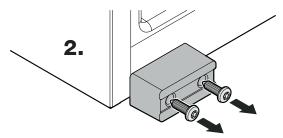


3. Remove seal.

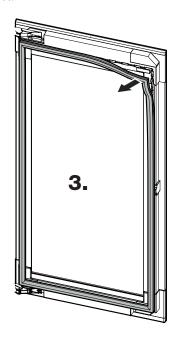


4. Remove cover.

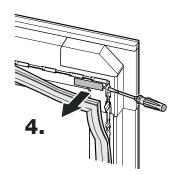


5. Remove cover.

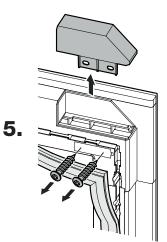


6. Remove seal.

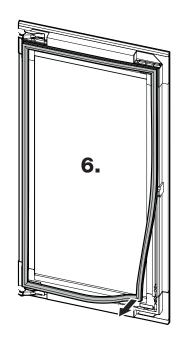


10. Remove the upper retaining bracket and transfer to the opposite side.

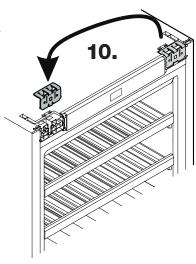


7. Remove cover.

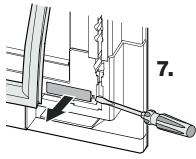


11. Transfer the stop to the opposite side.

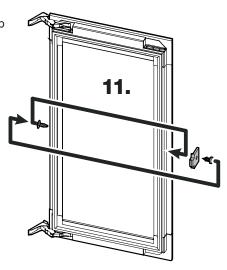

8. Remove the transportation safety component.

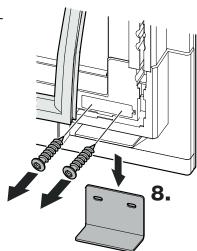


12. Remove seal.

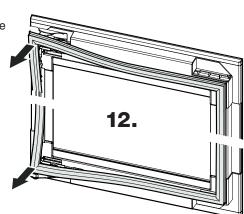


9. Remove the door.

The door must now be held secure by somebody.

Carefully place the door on a soft surface.

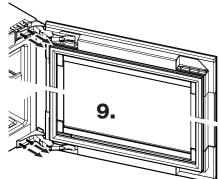


13. Remove covers.

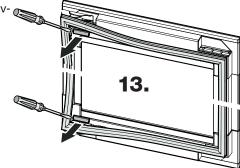


A CAUTION

Risk of injury if hinges fold!


- Leave hinges open.

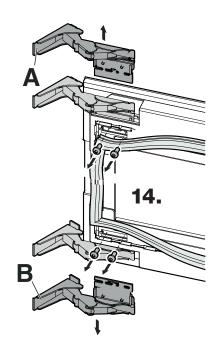

15. Unscrew the attachment plates from the hinges and resecure them to the other relevant hinge (the "Top" attachment plate must remain at the top + the "Bottom" attachment plate at the bottom). Re-fit the hinges on the opposite side of the door at diagonals to the original position.

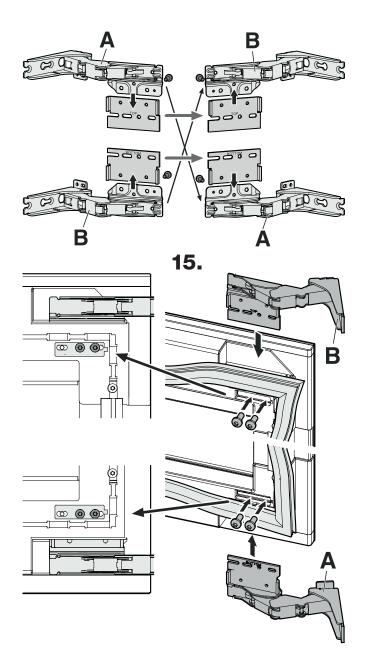


16. Screw on covers.

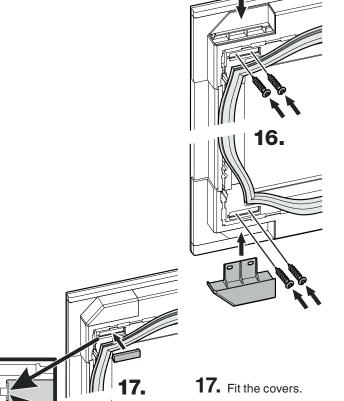


EN


18. Fit seal.

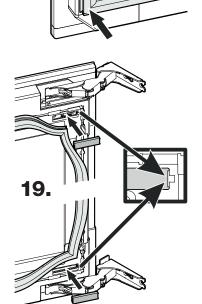


19. Fit the covers.

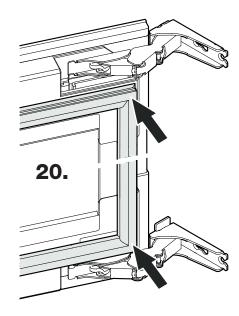

21. Fit the door on the appliance. **Notice**

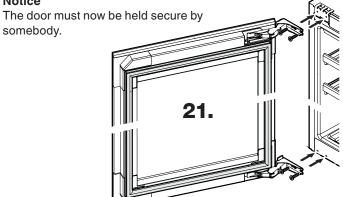

22. Fit covers and click into place.

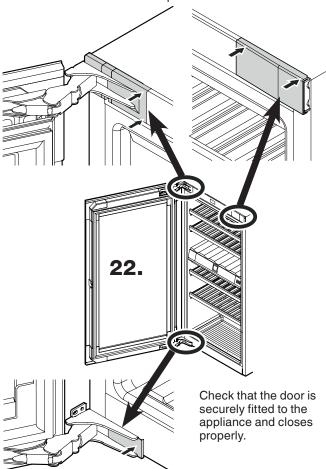

Installing the appliance

The installation work should only be carried out by trained personnel.

Two people are required for the installation work.

Note

Check the installation dimensions before installation. The intermediate panel and side wall of the kitchen unit must be perpendicular to each other.




Fire hazard due to dampness!

If live parts or the mains power cable become damp this may cause short circuits.

- The appliance is designed for use in enclosed areas. Do not operate the appliance outdoors or in areas where it is exposed to splash water or damp conditions.
- Only use the appliance when it is installed.

1. EWT 3583 - Remove the transportation safety component.

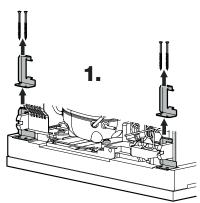


2. Route the mains cable towards the socket.




Fire hazard from short-circuiting!


- When pushing the appliance into the recess, take care not to crush, jam or damage the mains power cable.
- Do not operate the appliance with a defective mains power cable.
- **3.** Slide the appliance two-thirds of the way into the kitchen unit. When sliding in the appliance, make sure that the mains cable is not damaged.

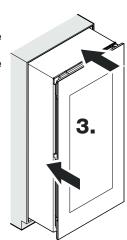


 $\boldsymbol{4}_{\:\raisebox{1pt}{\text{\circle*{1.5}}}}$ Screw in the adjustable feet as far as they will go.

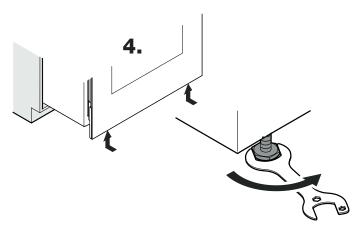


5. Fit cover profile.

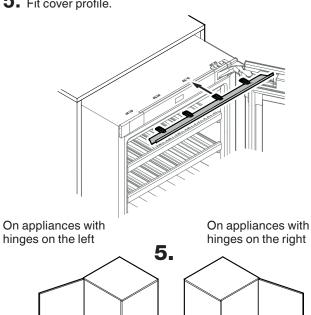


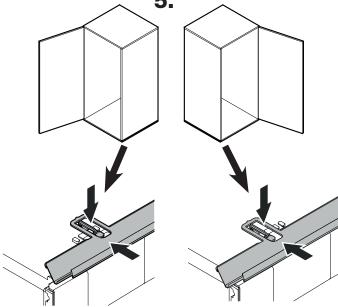


6. Remove the transportation safety component.

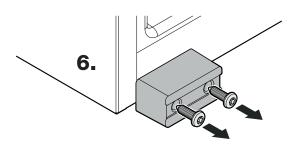


7. Only if the wall thickness is less than 19 mm: Fit the spacers.

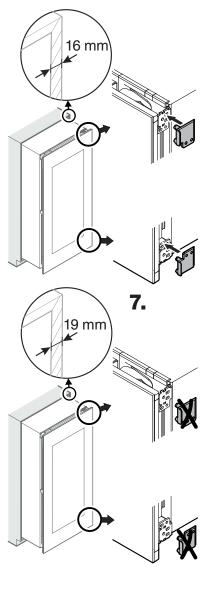


8. Remove cover.

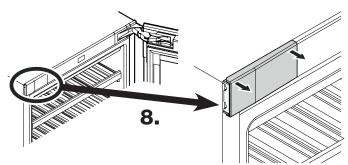

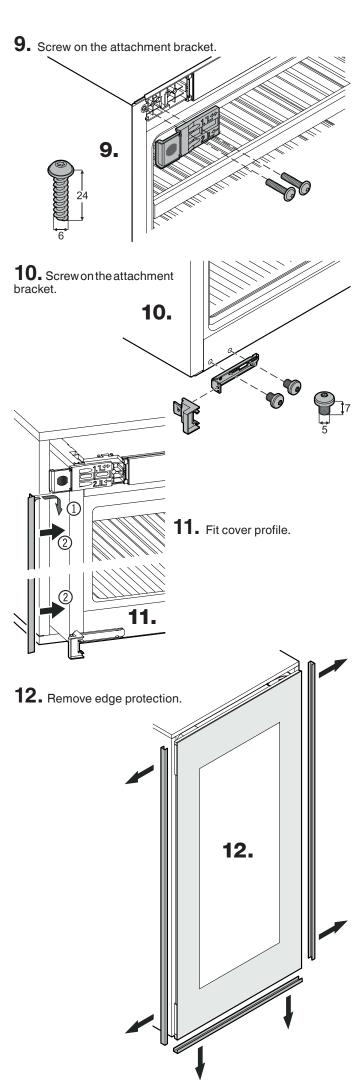


13. Slide the appliance fully into the recess. Check that the distance is identical all the way round.


• Undo the screws ①.

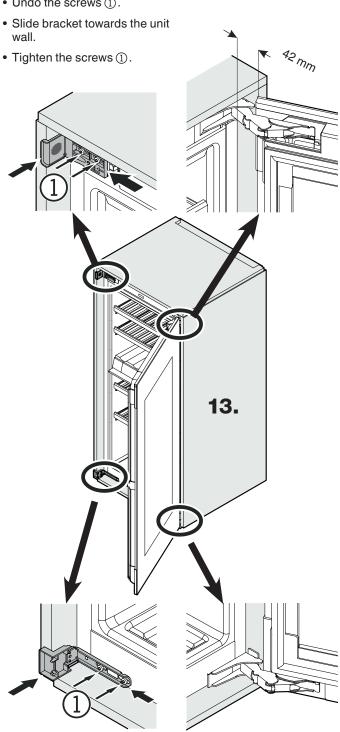


14. Adjust appliance via the adjustable feet, see section entitled "Adjusting the door", page 24.

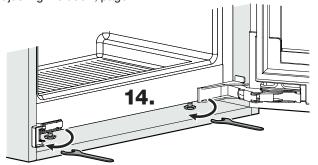


15. Secure the appliance to the kitchen unit using screws through the hinges and attachment brackets.

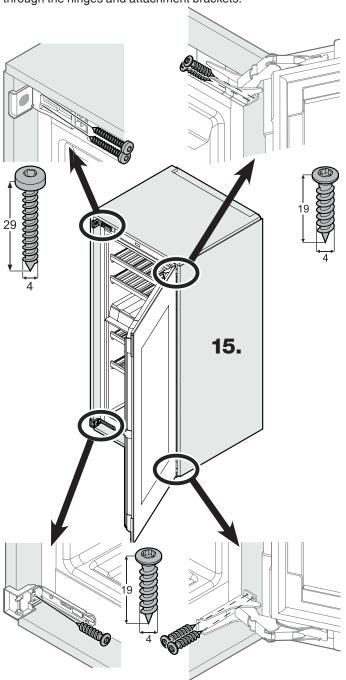

16. Snap off and remove the front part of the stop bracket.

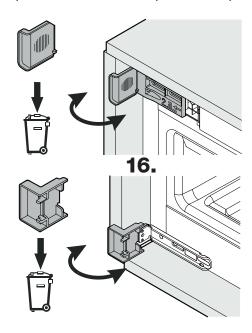


17. Fit the covers.

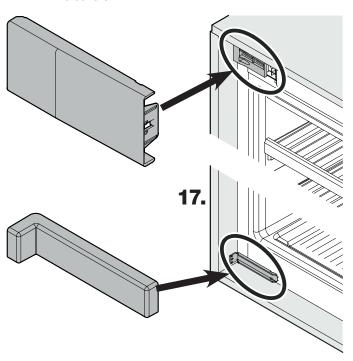


18. Stabilise the appliance at the back at the bottom:

Fit the handle 1 to the stabilising rail 2 and slide the stabilising rail into the floor of the appliance.


Remove the handle and repeat this procedure with the second stabilising rail.

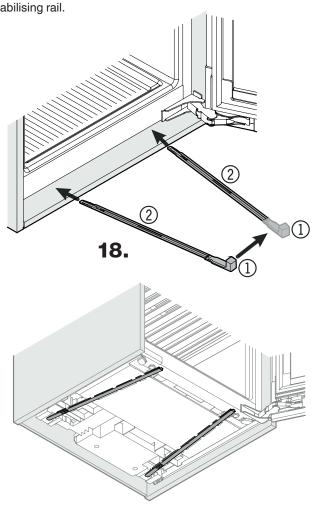


19. Remove seal.

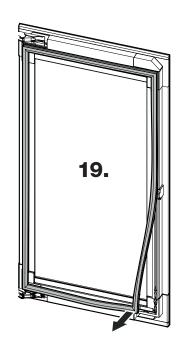


23. Fit cover.

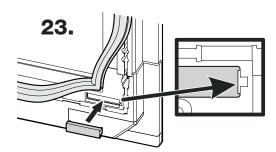

24. Fit seal.

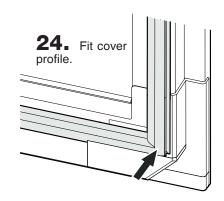


20. Remove cover.

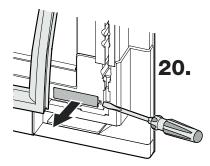


Check that the door is securely fitted to the appliance and closes properly.

Installation is now complete.


21. Remove the transportation safety component.

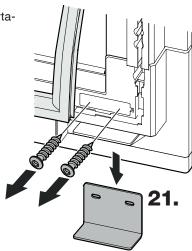


Adjusting the door

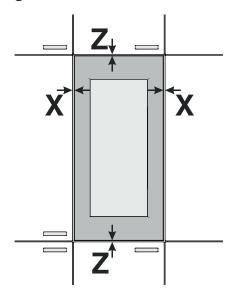


22. Screw on the cover.

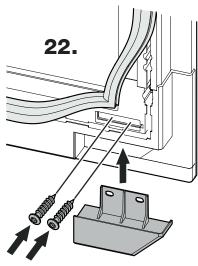


1. Remove seal.

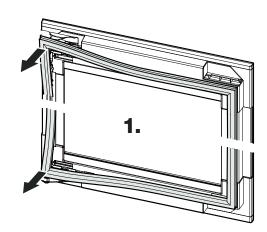

2. Remove covers.

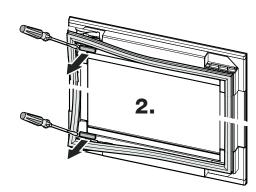


4. Fit the covers.

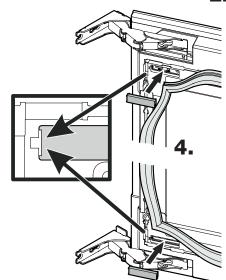


3.


- Remove screws ①.
- \bullet Transfer to position $\ensuremath{\mathfrak{D}}.$
- Undo screws ③.
- Adjust clearance.
- Tighten screws ① and ③.

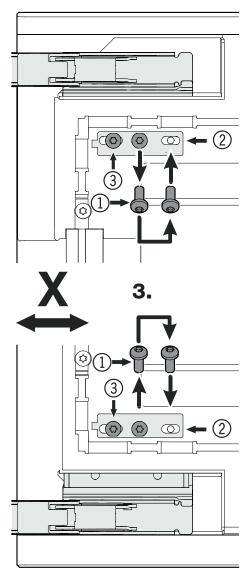

5. Fit seal.

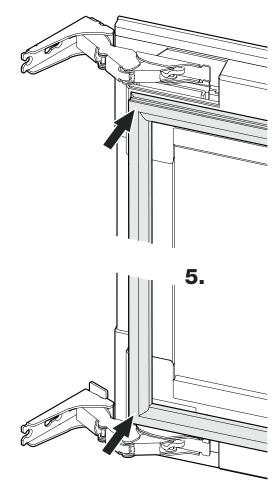

6. Adjust the clearance in Z direction.

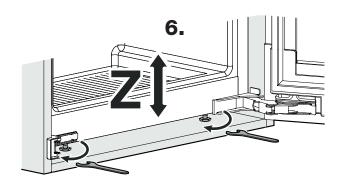











Installation Guide

Quality, Design and Innovation





home.liebherr.com/fridge-manuals



LIEBHERR

General safety instructions

Contents

| 1 | General safety instructions | 2 |
|----------------------------|---|----------------------|
| 2 | Setup conditions | 3 |
| 2.1 | SpaceSetting up multiple appliances | 3 |
| 2.3 | Electrical connection | 4 |
| 3 | Appliance dimensions | 4 |
| 4 4.1 | Recess dimensions | 5 |
| 5 | Ventilation requirements | 5 |
| 6 6.1 | Custom panel weights | 6 |
| 7 7.1 7.2 | Water connection* Dimensions for the water connection Water pressure | 6 |
| 8 | Transporting the appliance | 6 |
| 9 | Unpacking the appliance | 7 |
| 10 10.1 | Setting up the appliance After setup | 7 |
| 11 | Disposal of packaging | 7 |
| 12 | Explanatory symbols used | 7 |
| 13 13.1 | **** freezer compartment door* Moving the door hinge | 8 |
| 14 | Reversing the door | 8 |
| 15 15.1 15.2 | Connecting the appliance to the water supply* Connecting the hose | 10 11 11 |
| 16 | Fit the appliance into the recess | 11 |
| 17 17.1 17.2 17.3 | Cabinet fronts Dimensions Mounting the cabinet front(s) Setting the clearance to avoid collision | 18 18 19 19 |
| 18 18.1 | Water tank* Inserting the water tank | 19 |
| 19 19.1 | Water filter* Installing the water filter | 19 20 |
| 20 | Connecting the appliance to the power supply | 20 |


The manufacturer is constantly working to improve all types and models. Therefore, please be aware that we reserve the right to make changes to the shape, equipment and technology.

| Syllibot | |
|----------|---|
| | |
| | |
| | ľ |
| | ŀ |

Symbol

Explanation Read instructions


Please read the information in these instructions carefully to understand all of the benefits of your new appliance.

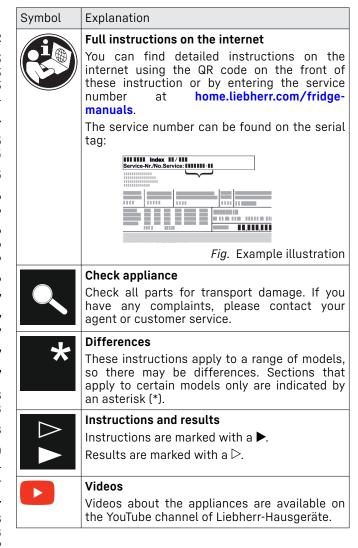

1 General safety instructions

- Please keep this assembly manual in a safe place so you can refer back to it at any time.
- If you pass the appliance on, please hand this assembly manual to the new owner.
- Read this assembly manual before installation and use in order to use the appliance safely and correctly. Follow the instructions, safety instructions and warning messages included at all times. They are important for ensuring you can operate and install the appliance safely and without any problems.
- First read the general safety instructions in the "General safety instructions" section of the **operating instructions**, which accompany these installation instructions, and follow them. If you cannot find the **operating instructions**, you can download the **operating instructions** from the internet by entering the service number at **home.liebherr.com/fridge-manuals**. The

service number can be found on the serial 2.1.1 Installation surface



tag:

Observe the warning messages and other detailed information in the other sections when installing the appliance:

| | DANGER | indicates a hazardous situation, which if not avoided, will result in death or serious injury. |
|-----------|---------|---|
| <u></u> ♠ | WARNING | indicates a hazardous situation, which if not avoided, could result in death or serious injury. |
| <u> </u> | CAUTION | indicates a hazardous situation, which if not avoided, will result in minor or moderate injury. |
| | NOTICE | indicates a hazardous situation, which if not avoided, could result in damage to property. |
| | Note | indicates useful advice and tips. |

2 Setup conditions



WARNING

Risk of fire due to moisture!

If live parts or the power cord get wet, this can cause a short circuit.

The appliance is designed for use in enclosed spaces. Do not operate the appliance in open space or in damp areas or where there is spray.

Normal use

- Only set up and use the appliance in enclosed spaces.
- Only use once installed.

2.1 Space



WARNING

Leaking refrigerant and oil!

Fire. The refrigerant contained within the appliance is environmentally friendly, but flammable. The oil contained within the appliance is flammable. Escaping refrigerant and oil can ignite if they are of high enough concentration and are exposed to an external heat source.

- Do not damage the pipelines of the coolant circuit and the compressor.
- If the appliance is installed in a very damp environment condensate water may form on the outside of the appliance.
 - Always ensure sufficient airflow and ventilation in the setup location.
- The more refrigerant there is in the appliance, the larger the space that it is installed in must be. If the space is too small, any leak may create a flammable mixture of gas and air. For every 8 g of refrigerant, the installation space must be at least 1 m3. Specifications on the refrigerant in the appliance can be found on the serial tag plate inside the appliance.

- The floor of the installation site must be horizontal and
- If you are installing the unit in a cabinet standing on an uneven floor: level the cabinet.

2.1.2 Installation position

- Do not install appliance in direct sunlight or next to an oven, radiator or similar.
- Only install the appliance in solid cabinets.

A set for restricting the door opening angle to 90° can be acquired from Customer Services for appliances with soft

2.2 Setting up multiple appliances

Risk of damage caused by water condensate!

Do not install this device directly beside another fridge/ freezer compartment.

NOTICE

Risk of damage caused by water condensate!

▶ Do not stack the appliance directly on top of another.

These appliances are designed for different types of installation. Only combine appliances if the appliances are designed for this. The following table shows the installation options by model:

| Setup type | Model |
|-----------------------|--|
| Single | All models |
| Side-by-Side (SBS) | Model that start with S . |
| Stacked | Models up to a maximum recess height of 880 mm and with a heated cover can be "stacked". |
| | Upper appliance: up to a maximum recess height of 140 mm |

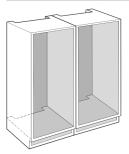


Fig. 1

Install each appliance into its own recess.

Appliance dimensions

2.3 Electrical connection



WARNING

Danger of fire due to incorrect positioning!

If the power supply cable or plug touches the back of the appliance, the vibration can damage the power supply cable or the plug resulting in a short circuit.

- ► Make sure the power supply cable is not trapped under the appliance when you position the appliance.
- ► Install the appliance so that it does not touch any plugs or power cables.
- ▶ Do not connect any appliances to sockets in the area of the back of the appliance.
- ▶ Do **not** place and operate power strips/power distributors and other electronic devices (such as halogen transformers) at the back of the appliances.

3 Appliance dimensions

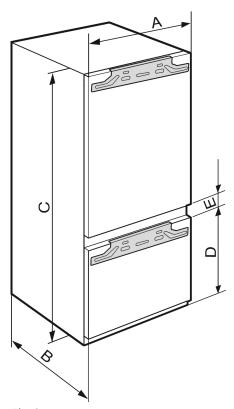


Fig. 2

| | A (mm) | B (mm) | C (mm) | D (mm) | E (mm) |
|---------------------------------|-----------|-----------|-----------|-----------|-----------|
| ICB 512 | | | | 549 | |
| IC 513 | | | | 695 | |
| S/ICN 513 | | | | | |
| ICBN 513 | | | | | |
| ICBN 513 | 559 | 546 | 1770 | | 15 |
| IC/B/N/bsci 51 | | | | | |
| IKG 51Ve03 / IKGN | | | | | |
| 51Vc03 / IKGN 51Ve03 / IKGBN | | | | | |
| 51Vd23i | | | | | |

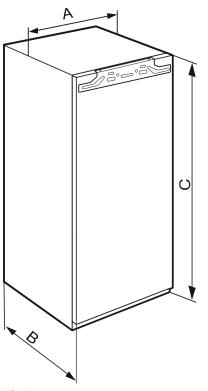


Fig. 3

| | A (mm) | B (mm) | C (mm) |
|--|--------|--------|--------|
| IFN 35 | | | 712 |
| IR 39 SIBai 39 SIBa20i 39 S/IF/N 39 | | | 872 |
| IR 40 IRB 40 | | | 1022 |
| IR 41 IRB 41 IRBbsbi 41 SIFN 41 | | | 1213 |
| IR 45 IRB 45 IRBbsbi 45 SIFN 45 | 559 | 546 | 1395 |
| IRB 48 | | | 1572 |
| IR 51 IRD 51 IRB 51 IRBbsci 51 IRBPbsci 51 SIFN 51 SIFN 51 SIFN 51 IK 51Ve00 / IK 51Ve01 / IKB 51Vc50i / IKB | | | 1770 |

4 Recess dimensions

4.1 Internal dimensions

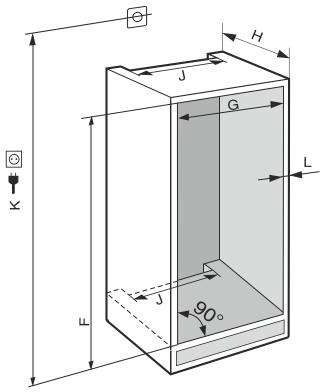


Fig. 4 (K): max. 2100 mm

Observe the following information for appliances with a permanent water connection:

- Water connection (see 7 Water connection*)
- Connect the appliance to the water supply (see 15 Connecting the appliance to the water supply*)

| IFN(i) 35 | | |
|------------------------|---------------------------|--|
| F (mm) | 714 to 730 | |
| G (mm) | 560 to 570 | |
| H (mm) | min. 550, recommended 560 | |
| J (mm) min. 500 | | |
| L (mm) | max. 19 | |

| IFN(i) 39 | IFN(i) 39 / IR(i) 39 / SIBa20i 3905 / SIFNi 39 | | |
|---|--|--|--|
| F (mm) 874 to 890 | | | |
| G (mm) | 560 to 570 | | |
| H (mm) min. 550, recommended 560 | | | |
| J (mm) min. 500 | | | |
| L (mm) max. 19 | | | |

| IR(B)(i) 4 | IR(B)(i) 40 | | |
|---|--------------|--|--|
| F (mm) | 1024 to 1040 | | |
| G (mm) | 560 to 570 | | |
| H (mm) min. 550, recommended 560 | | | |
| J (mm) min. 500 | | | |
| L (mm) max. 19 | | | |

| IR(B)(i) 41 / IRBbsbi 4170 / SIFNi 41 | | |
|---------------------------------------|------------|--|
| F (mm) 1216 to 1236 | | |
| G (mm) | 560 to 570 | |
| H (mm) min. 550, recommended 560 | | |
| J (mm) min. 500 | | |
| L (mm) max. 19 | | |

| IR(B)(i) 45 / IRBbsbi 4570 / SIFNi 45 | | |
|---------------------------------------|--------------------------|--|
| F (mm) 1397 to 1413 | | |
| G (mm) | G (mm) 560 to 570 | |
| H (mm) min. 550, recommended 560 | | |
| J (mm) min. 500 | | |
| L (mm) max. 19 | | |

| IRBi 48 | | |
|------------------------|---------------------------|--|
| F (mm) | 1574 to 1590 | |
| G (mm) | 560 to 570 | |
| H (mm) | min. 550, recommended 560 | |
| J (mm) min. 500 | | |
| L (mm) | max. 19 | |

IC(B)(N)..(i) 51.. / ICBNbsci 5173 / IKG 51Ve03 / IKGN 51Vc03 / ICNbsci 5173 / IKGN 51Ve03 / IR(B) (P)..(i) 51.. / IRD..i 51.. / IRBbsci 5170 / IRBbsci 5171 / IRBPbsci 5170 / IKB 51Vc51i / IK 51Ve00 / IK 51Ve01 / SICN..i 51.. / SIFN..(i) 51.. / SIFNbsdi 51..

| F (mm) | 1772 to 1788 |
|--------|---------------------------|
| G (mm) | 560 to 570 |
| H (mm) | min. 550, recommended 560 |
| J (mm) | min. 500 |
| L (mm) | max. 19 |

The specified energy consumption was determined with a kitchen unit depth of 560 mm . The appliance will work properly at a kitchen unit depth of 550 mm , but with a slightly higher energy consumption.

- ► Check the wall thickness of adjacent units: It must be a minimum of 16 mm .
- ► Only fit the appliance into stable, solid kitchen units. Secure the unit against tipping.
- ▶ Align the cabinets with a level and a try square. If necessary, level them by putting something underneath them
- ► Make sure floor and the side panels of the cabinet are at right angles to each other.

5 Ventilation requirements

NOTICE

Covered vents!

Damage. Appliance can overheat, which can reduce the service life of various parts of the appliance and lead to functional impairments.

- ► Always ensure good ventilation.
- ➤ Always keep vents or ventilation grills in the appliance housing and in the kitchen structure (built-in appliance) unobstructed.
- Never block air vents of the fan.

Custom panel weights

Comply with the ventilation gaps:

- The depth of the ventilation shaft at the back of the cabinet must be at least 38 mm.
- At least 200 cm² is required for the ventilation gap cross sections in the plinth and the housing cabinet.
- Basically, the larger the ventilation cross-section, the more efficiently the appliance will run.

Sufficient ventilation is required for the operation of the appliance. The ventilation grids provided ensure an effective ventilation cross-section on the appliance of 200 cm². If you replace the ventilation grids with a cover plate the ventilation cross-section must be as least as large as the ventilation grid provided by the manufacturer.

6 Custom panel weights

6.1 Weight

NOTICE

An excessively heavy custom panel can potentially cause damage!

If the custom panel is too heavy, damage to the hinges cannot be ruled out, which may compromise the functionality of the unit.

▶ Before installing the custom panel, ensure the custom panel does not exceed the permissible weight.

| Recess height (mm)* | Maximum weight of custom panel (kg)* |
|---------------------|--------------------------------------|
| 720 | 16 |
| 880 | 16 |
| 1020 | 13 |
| 1220 | 19 |
| 1400 | 21 |
| 1580 | 22 |
| 1780 | 26 |

Single-door fridges and freezers

| | height | Maximum weight of custom panel (kg)* | | | | |
|-------|--------|--------------------------------------|-------------|-----------------------|----------|--|
| (mm)* | | Fridge door* | compartment | Freezer ment door* | compart- | |
| 1780 | | 18 | | 12 | | |

Customizing combinations

7 Water connection*

If your appliance has a fixed water connection, a hose is supplied with it.

Note

You can purchase a hose of a different length as an accessory.

| Overview of dimensions for the water connection: | (see 7.1 Dimensions for the water connection) |
|--|--|
| Requirements for the water pressure: | (see 7.2 Water pressure) |
| Make the water connection: | (see 15 Connecting the appliance to the water supply*) |

7.1 Dimensions for the water connection

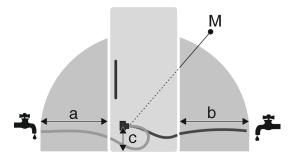


Fig. 5

- (a) Maximum available hose length*
- (b) Maximum available hose length*
- (c) Distance of solenoid valve to floor*
- (M) Solenoid valve*

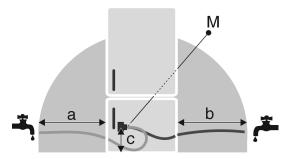


Fig. 6

- (a) Maximum available hose length*
- **(b)** Maximum available hose length*
- (c) Distance of solenoid valve to floor*
- (M) Solenoid valve*

| а | b | С |
|-----------|-----------|---------|
| ~ 1200 mm | ~ 1200 mm | ~ 55 mm |

7.2 Water pressure

The water connection line and solenoid valve of the appliance are suitable for a water pressure of up to 1 MPa (10 bar).

To ensure that the appliance functions correctly (flow rate, ice cube size, noise level), maintain the following water pressure:

| Water pressure: | |
|-----------------|--------------|
| bar | MPa |
| 1.5 to 6.2 | 0.15 to 0.62 |

| Water pressure if using the water filter:* | | | | |
|--|--------------|--|--|--|
| bar* MPa* | | | | |
| 2.8 to 6.2 | 0.28 to 0.62 | | | |

If the pressure is higher than 6.2 bar:

- Connect a pressure reducer.
- ► Make the water connection. (see 15 Connecting the appliance to the water supply*)

8 Transporting the appliance

Observe the following when transporting the appliance:

- ► Transport the appliance upright.
- ► Use two people when transporting the appliance.

During the first use:


► Transport the appliance packaged.

Unpacking the appliance

During appliance transport or at first use (e.g. when moving or cleaning):

- ► Empty the appliance.
- ► Secure the door against undesired opening.

▶ Pull off the transport lock on the appliance door.



► Clean the appliance (see User Guide, Cleaning the appliance)

9 Unpacking the appliance

If the appliance is damaged check with the supplier immediately before connecting it.

- Check the appliance and packaging for damage during transport. If you suspect any damage, please contact your supplier immediately.
- ► Remove all materials that could prevent it from being installed properly or prevent proper ventilation from the back or the side panels of the appliance.
- ► Remove all protective films from the appliance. Do not use sharp or pointed objects for this.

11 Disposal of packaging



WARNING

Danger of suffocation from packaging materials and films!

Do not allow children to play with packaging materials.

The packaging is made from recyclable materials:

- Corrugated card/cardboard
- Parts made of foamed polystyrene
- Films and bags from polyethylene
- Packing bands from polypropylene
- Wood frame nailed together with a polyethylene window*
- ► Take the packaging material to an official collection point.

10 Setting up the appliance



CAUTION

Risk of injury due to heavy appliance!

► Have two people transport the appliance to its installation site.



WARNING

Danger of injury and damage due to the appliance being unstable!

The appliance can tip over.

► Secure the appliance as described in the instructions.



WARNING

Danger of fire and damage!


▶ Do not place devices that give off heat, e.g. microwaves, toasters, etc. on the appliance.


If possible, have a professional install the appliance in your kitchen cabinet unit.

Do not install the appliance without assistance.

10.1 After setup

► Remove all transport packaging.

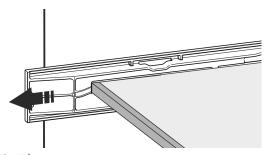



12 Explanatory symbols used

| \triangle | There is the risk of injury when doing this! Obey the safety instructions! |
|-------------|---|
| * | These instructions apply to several models. Only perform this step if it applies to your appliance. |
| | To install, please follow the detailed description in the Guide. |
| | This section applies either to a single-door appliance or a double-door appliance. |
| | Choose one of the options: Appliance with right-hinged door or appliance with left-hinged door. |
| | Installation step necessary with IceMaker and/or InfinitySpring. |
| | Loosen or tighten screws slightly. |
| | Tighten the screws fully. |

**** freezer compartment door*

| | Check to see if the next step applies for your model. |
|-----------|--|
| | Check the components are in correctly. |
| nulmdanla | Measure the specified measurement and adjust if necessary. |
| | Installation tool: Meter stick |
| TORX® 20 | Tool for assembly: Cordless screw-driver and attachments |
| | Tool for assembly: Spirit level |
| SW7 SW10 | Tool for assembly: Size 7 and size 10 spanner |
| | Two people are required for this step. |
| | This step takes place at the selected location of the appliance. |
| | Aid for assembly: String |
| | Aid for assembly: Square |
| | Aid for assembly: Screwdriver |
| | Aid for assembly: Scissors |
| | Aid for assembly: Non-permanent marker pen |
| | Accessory kit: Remove components |



Dispose of components that are no longer needed.

13 **** freezer compartment door*

It is very easy to reposition the hinge of the **** freezer compartment door if the main door hinge is swapped. If the main door of the appliance can be opened to more than 115° (1), you can open the freezer compartment without repositioning the hinge. If the opening angle (2) of the appliance door is less than this, the hinge must be repositioned.

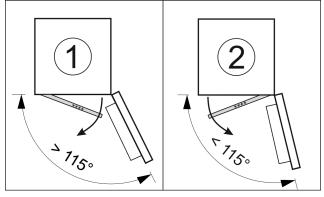


Fig. 8

13.1 Moving the door hinge

The slider for moving the door hinge is located on the back of the **** freezer compartment door at the bottom.

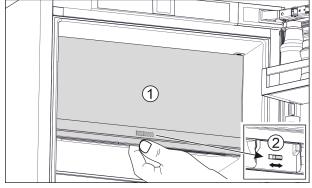


Fig. 9

- ► Close the **** freezer compartment door (1).
- ► Grab the **** freezer compartment door from below.
- ▶ Move the slider (2) either to the right or to the left.

14 Reversing the door

Tool







Fig. 10

NOTICE

Live parts!

Damage to electrical components.

▶ Disconnect the power plug before reversing the door.

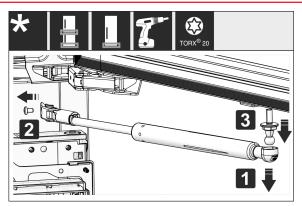


Fig. 11 *

► Removing the soft stop damper: Remove the soft stop damper from the ball stud (1). Unscrew the retainer (2). Remove the ball stud with a screwdriver (3).*

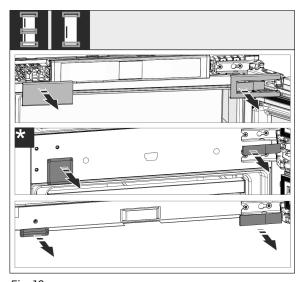


Fig. 12

► Remove covers.

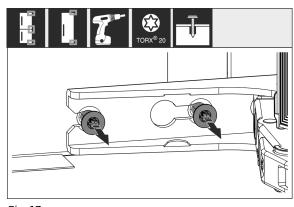


Fig. 13

▶ Loosen the screws on **all** hinges but do not remove them.

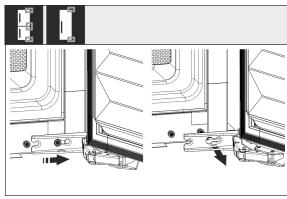


Fig. 14

► Remove the door: Push the door forward and then out, unhook it and put it to one side.

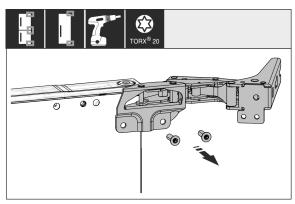


Fig. 15

▶ Unscrew all hinges and set aside together with the screws.

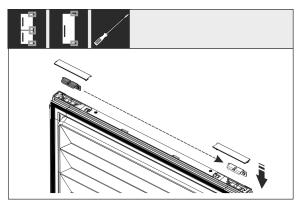


Fig. 16

► Loosen and shift the bracket at the top and bottom of the door. The bracket must be shifted so you can screw on the hinges.

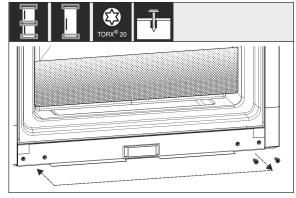


Fig. 17

Connecting the appliance to the water supply*

► Shift the screws to fasten the hinge. Do not screw tightly after shifting – you need to hang the hinges later.

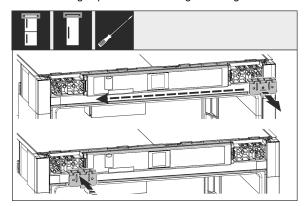


Fig. 18

► Swap the fixing bracket to the opposite side.

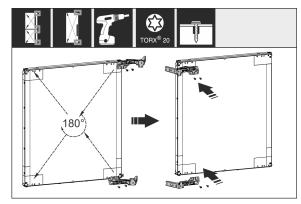


Fig. 19

► Turn all hinges 180° to the opposite side and screw firmly.

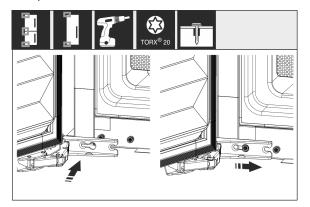


Fig. 20

► Refitting the door: Hang the door with its hinges and tighten the screws.

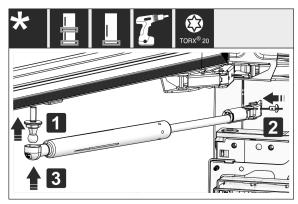


Fig. 21 *

- ► Refit the closing dampers: Screw in the ball studs (1), tighten the bracket (2), and hang the closing dampers in the ball studs.*
- ► Check all screws and retighten if necessary.

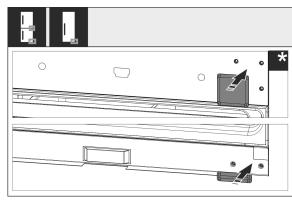


Fig. 22

Reassemble the bottom and center cover. Only replace the remaining covers after installing the appliance back into the cabinet.

15 Connecting the appliance to the water supply*

Make sure that the following requirements are fulfilled:

- ☐ The dimensions for the water supply connection are known and complied with. (see 7.1 Dimensions for the water connection)
- ☐ The correct water pressure is maintained. (see 7.1 Dimensions for the water connection)
- Water is supplied to the appliance via a cold water pipe that can withstand the operating pressure and is connected to the drinking water supply.
- □ All equipment and devices used for the water supply comply with the applicable regulations in the country of use.
- ☐ The back of the appliance is accessible so that you can connect the appliance to the drinking water supply.
- ☐ You are using the supplied hose. Old hoses have been disposed of.
- ☐ The hose connector contains a screen filter with a seal.
- There is a faucet between the hose line and the domestic water connection so that you can turn off the water supply if necessary.
- ☐ The faucet is not directly behind the appliance and is easily accessible. This way, you can push the appliance as far as possible into the cabinet recess and can quickly turn off the faucet if necessary.



WARNING

Risk of electric shock from water!

- ▶ Before connecting to the water hose: Disconnect the appliance from the mains.
- ▶ Before connecting to water lines: Shut off the water supply.
- ▶ Make sure that only qualified personnel connect the device to the drinking water supply.



WARNING

Risk of poisoning due to contaminated water!

► Connect to potable water supply only.

15.1 Connecting the hose

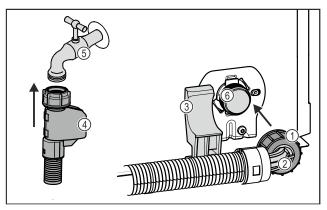


Fig. 23

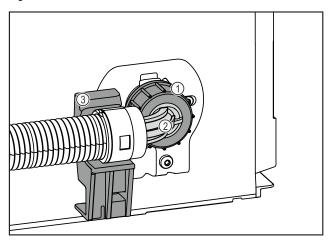


Fig. 23

- (1) Nu
- (2) Angled hose end
- (3) Bracket
- (4) Straight hose end
- **(5)** Faucet
- (6) Solenoid valve: The solenoid valve is at the bottom on the back of the appliance. It has an R3/4 connecting thread.

NOTICE

Risk of damage from incorrect installation!

- ▶ Do not damage or kink the hose.
- Do not damage or kink the hose during installation in the cabinet recess.

Connecting the hose to the appliance:

- ▶ Position and hold the angled hose end Fig. 23 (2) horizontally on the bracket Fig. 23 (3).
- Screw on the nut *Fig. 23 (1)* on by hand until it is firmly in place.
- \triangleright The hose is connected to the appliance.

Connecting the hose to the faucet:

- ► Connect the straight hose end Fig. 23 (4) to the faucet Fig. 23 (5).
- The hose is connected to the faucet.

15.2 Check the water system

Before you completely install the appliance in the cabinet recess, Liebherr recommends checking the water system for leaks.

- ▶ Put in the InfinitySpring water tank. (see 18 Water tank*)
- ▶ Put in the InfinitySpring water filter. (see 19 Water filter*)
- Slowly turn on the faucet.
- ► Check the hose, water feed and connections for leaks.

- > The water system has now been checked for leaks.
- > The water system is not leaking: You can install the appliance completely in the cabinet recess.

Note

InfinitySpring: Before the first use, you must put the InfinitySpring into operation. To do this you must bleed and clean the water system. (see Quick Start Guide or operating instructions)*

IceMaker: Before the first use, you must clean the IceMaker. (see Quick Start Guide or operating instructions)*

16 Fit the appliance into the recess

Tool





Fig. 24

Supplied installation parts

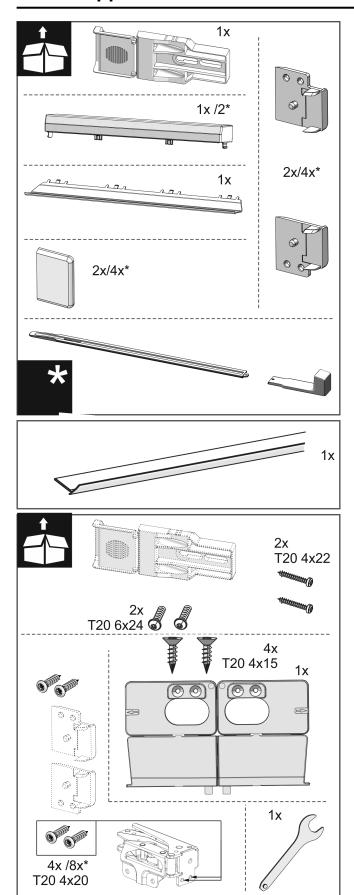


Fig. 25


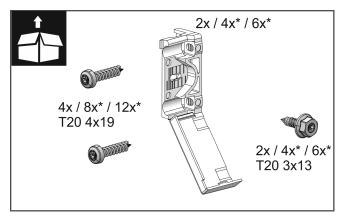


Fig. 26

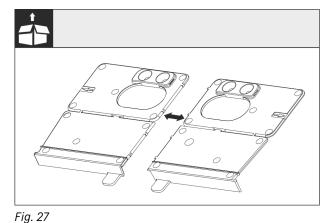


▶ Separate the floor mounting bracket Fig. 27 () at the perforation.

NOTICE

Correct installation depth of the appliance.

Using the mounting bracket ensures the correct installation depth of the appliance.

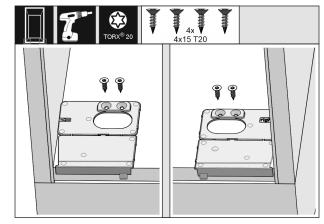

Screw the mounting brackets on the left and right of the recess floor, flush to the side wall.

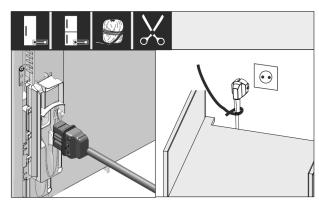


Fig. 29

- Remove the power cable from the package and plug it into the back of the appliance.
- Use a string to route the power plug cord to the accessible socket.

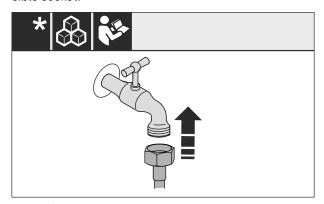


Fig. 30 *

► If necessary, install the water connection at this point, following the instructions in the User Guide.*

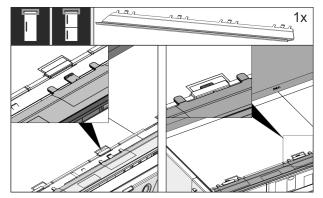


Fig. 31

► Insert the adapter panel on the top of the appliance. The panel can be moved to both sides.

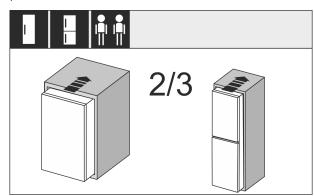


Fig. 32

► Slide the appliance 2/3 of the way into the cabinet recess.

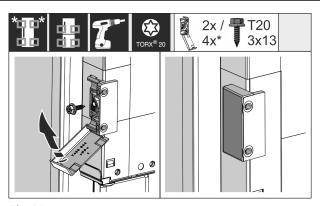


Fig. 33

- ➤ Fit the mounting bracket. Attach the mounting bracket at the height of the custom door panel handles. For a large door, use four mounting brackets.
- ► After assembly, fold the covers onto the bracket.


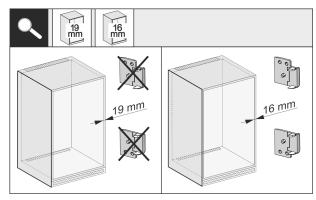


Fig. 34

► Check whether the unit side wall is 16 mm or 19 mm thick.

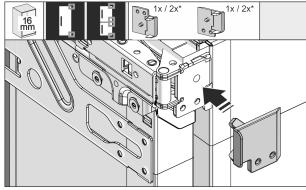

Fia. 35

- ▶ 16 mm thick unit side walls: Put a spacer on all hinges.
- ▶ 19 mm thick unit side walls: You do not need a spacer.

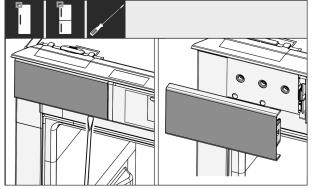


Fig. 36

► Use a screwdriver to loosen the cover at the top left and then remove it.

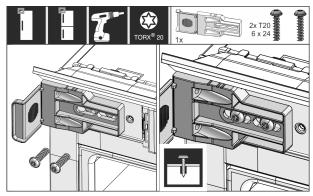


Fig. 37

▶ Loosely screw on the mounting bracket. The bracket should still be easy to move.

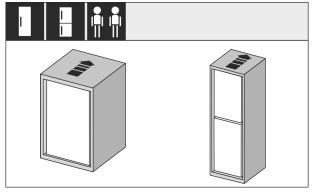


Fig. 38

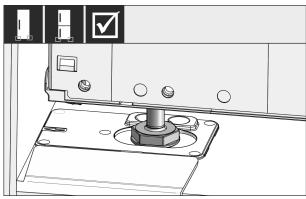


Fig. 39

▶ Push the appliance all the way into the unit recess. The adjustable feet must rest in the recesses in the brackets on both sides.

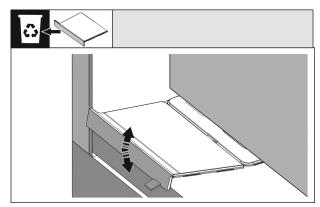


Fig. 40

Remove the floor mounting bracket stopper. Loosen the stopper by moving it and, if necessary, pull it off with the help of pliers.

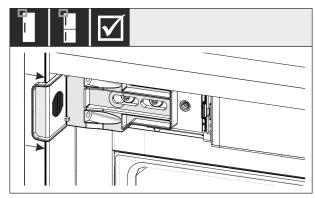


Fig. 41

► Check that the appliance is flush in the cabinet recess. The mounting bracket must be attached to the side wall of the cabinet recess.

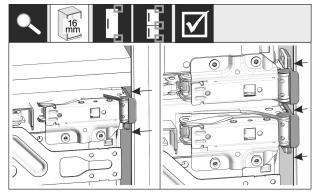


Fig. 42

NoteWith 16 mm unit side walls, the spacers fit against the unit recess on the hinge side.

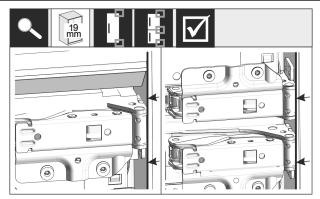


Fig. 43

▶ 19 mm thick unit side walls: Align the front of the hinges flush with the unit side wall.

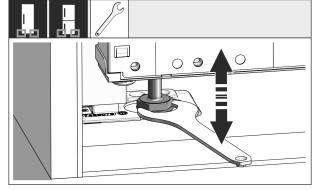


Fig. 44

▶ If necessary, level the appliance using the adjusting feet.

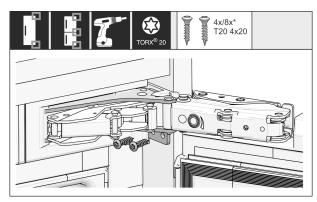


Fig. 45

► Screw on the appliance on the hinge side.

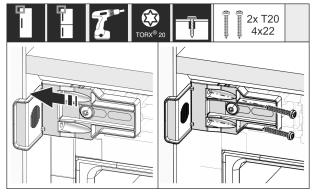


Fig. 46

- ▶ Move the bracket so it sits flush on the side wall of the cabinet recess.
- ► Tighten all the screws securely.

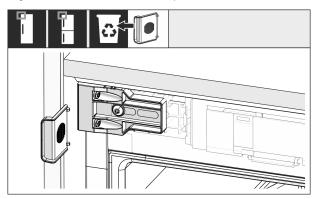


Fig. 47

► Remove the stop from the bracket on the handle side and dispose of it.

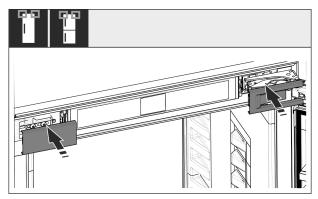


Fig. 48

▶ Place the cover.

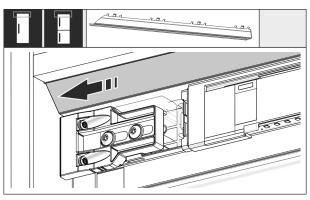


Fig. 49

▶ Slide the panel so that it sits flush with the side of the cabinet wall

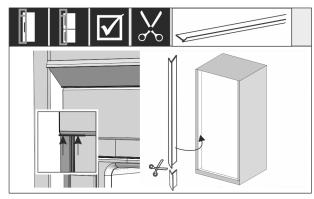


Fig. 50

- ► If necessary: Shorten the sealing strip as necessary with a sharp pair of scissors.
- ▶ Position the sealing strip below the top cover and press it in. The sealing strip is magnetic.

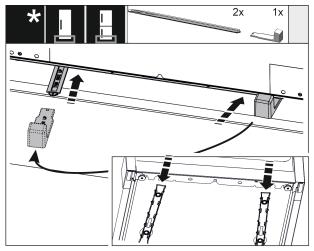


Fig. 51

The height adjustment is only supplied as standard for recess heights of 1400 mm and above. It is used for sound optimization. Both parts of the height adjuster are included in the accessory kit.

Stabilize the bottom of the appliance at the rear:

- ▶ Plug the grip into the height adjuster rail.
- ▶ Push the rail into the bottom of the appliance.
- ► Pull off the grip.
- ▶ Do the same thing with the second rail.

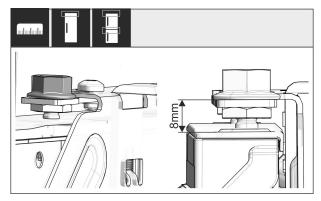


Fig. 52

- Close the door.
- ► Check the preset of 8 mm from the upper edge of the appliance door to the crosspiece support.

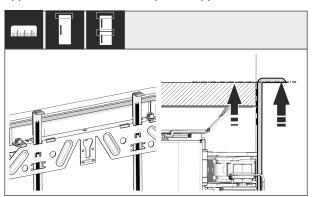


Fig. 53

► Push up mounting aids to the height of the cabinet door. Bottom stop edge of the fitting aid = top edge of the door to be fitted.

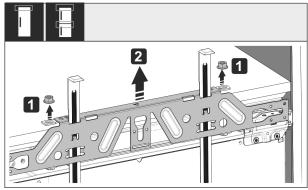


Fig. 54

- ► Loosen locknuts Fig. 54 (1).
- ► Remove crosspiece Fig. 54 (2).

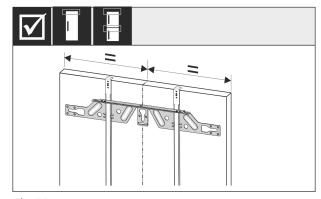


Fig. 55

► Center-align the crosspiece on the inside of the cabinet

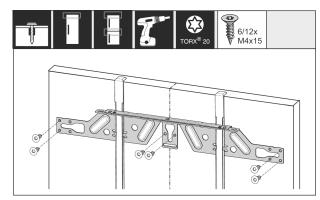


Fig. 56

► Fix the crosspiece using at least 6 screws for chipboard doors and at least 4 screws for panel doors.

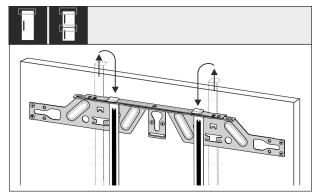


Fig. 57

▶ Remove the fitting aids, turn round and insert into the adjacent opening.

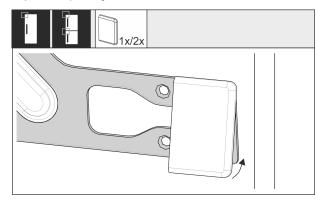


Fig. 58

▶ Put the cover on the crosspiece on the handle side.

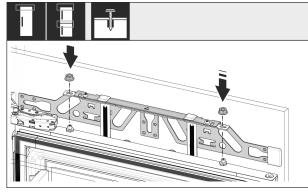


Fig. 59

Attach the custom panel and loosely screw the lock nuts onto the adjusting bolts.

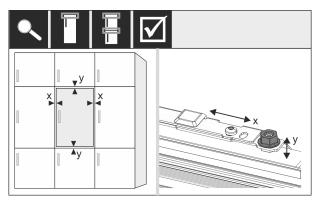


Fig. 60

► Align the custom panel in the X and Y direction using the adjusting bolts.

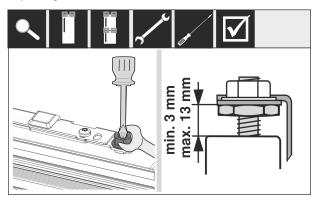


Fig. 61

- ► Tighten the lock nuts.
- ► Check the adjusted height.

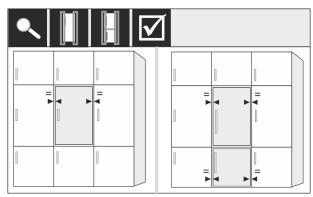


Fig. 62

For front panels thicker than 19 mm:

► Check the dimensions, weights and information in the following sections: (see 6 Custom panel weights) (see 17 Cabinet fronts)

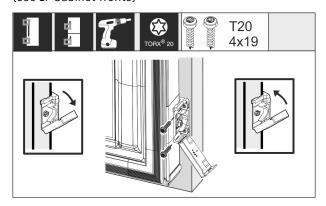


Fig. 63

Mounting the fastening bracket on the custom panel:

- ► Open the cover.
- Mounting the fastening bracket on the custom panel:
- ► Align the front edge of the mounting bracket parallel with the custom door panel edge and screw the bracket down tightly.
 - Mounting the fastening bracket on the custom panel:
- Fold up the cover.

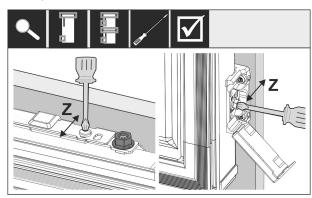


Fig. 64

Align the unit door in the Z direction:

- ▶ Loosen the adjusting screw on the crosspiece and the screw on the mounting bracket.
- Move the door.


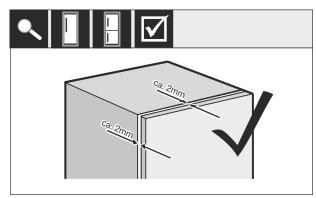


Fig. 65

- Check the gap between the custom panel and the unit body.
- ► Check all the screws and tighten them if necessary.

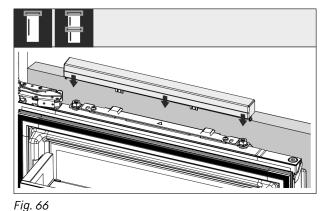

► Put on the top cover.

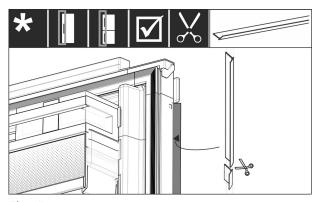


Fig. 67

- ► Cut the sealing strip to the required length.
- ► Insert the sealing strip between the front panel and the appliance door.

To make sure the appliance is correctly installed and there will not be any icing up, condensation or malfunctions, the following criteria apply:

- The door must close properly.
- The custom door panel must not touch the body of the unit.
- The seal on the upper corner on the handle side must be fitted securely.
- ► Check recess installation according to the criteria above.

17 Cabinet fronts

17.1 Dimensions

Depending on your model, you will need one or two cabinet doors. The size of the cabinet door(s) depends on the overall recess size and cabinet unit thickness.

Note

Observe the appliance and recess dimensions and follow the installation diagrams . See the relevant catalog for the installation diagrams.

General requirements:

- Please refer to our catalogs for appliance-specific recommendations on size and weight for fixed door installations.
- The body of the unit should be at least 16 mm thick but not more than 19 mm.
- When mounting a 2-door cabinet door, observe the recommended clearance.

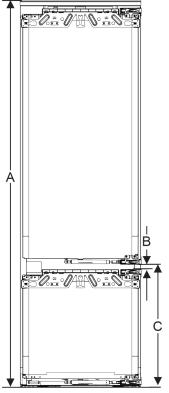


Fig. 68 Clearances for a 2-door cabinet door*

| Recess height 178-2 drawers* | | | | |
|----------------------------------|-----------------------|--|--|--|
| Appliance height (A) (mm) | 1770 | | | |
| Distance (B) (mm) | 15 | | | |
| Clearance (C) door-on-door (mm) | 549+15 (21 5/8 + 5/8) | | | |

| Recess height 178-3 drawers* | | | | |
|----------------------------------|-----------------------|--|--|--|
| Appliance height (A) (mm) | 1770 | | | |
| Distance (B) (mm) | 15 | | | |
| Clearance (C) door-on-door (mm) | 695+15 (27 3/8 + 5/8) | | | |

Other cabinet door above, below or next to it:

- The vertical gap between custom panels must be 4 mm.
- The horizontal gap between custom panels must be 4 mm. Check the risk of them clashing here. (see 17.3 Setting the clearance to avoid collision)

Weight and hinges:

- Heavy cabinet fronts increase the stress on the hinge. The hinge may be damaged. As such, refer to the catalog for the maximum weight specification for your appliance.
- If the cabinet front exceeds the maximum permitted weight, an appliance with door-tracking device can help by loading the weight over several concealed hinges on the cabinet.
- If you use long unit fronts that protrude far above the appliances, we recommend an additional door hinge (e.g. Kamat), which must have the same pivot point as the fixed door hinge used with your appliance. By using another hinge (Kamat), the weight is shared over several points. The use of a milled compensating fastening is recommended for high unit fronts to counteract warping (convex/concave).

17.2 Mounting the cabinet front(s)

When installing, note:

- Cabinet front must be installed symmetrically to the refrigerator door.
- Adjoining cabinet front is exactly level.
- Adjoining cabinet front has the same edge radius as the front of the appliance.
- Cabinet front is flat and tension-free.
- The front panel has a minimum depth setting of approx. 2 mm to the body.
- ► Install the appliance in the recess. (see 16 Fit the appliance into the recess)
- ► Fasten the front panel to the appliance door. (see 16 Fit the appliance into the recess)
- ► Check that the front panel can close unobstructed. (see 17.3 Setting the clearance to avoid collision)

17.3 Setting the clearance to avoid collision

After installing the cabinet front(s), check that the cabinet fronts do not collide.

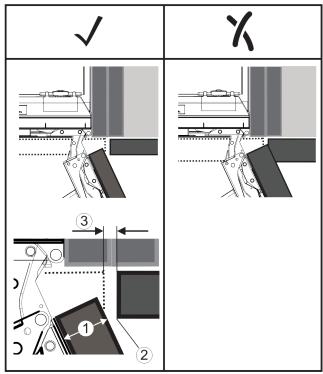


Fig. 69

- (1) Front thickness (FD)
- (3) Clearance size (S)
- (2) Edge radius (R)

| | R (2) = 0 mm | | R = 1,2 mm | | R = 2 mm | | R = 3 mm | |
|------------|--------------|------|------------|------|----------|------|----------|------|
| FD(1) (mm) | Gmin | Gmax | Gmin | Gmax | Gmin | Gmax | Gmin | Gmax |
| 16 | 0,3 | 0,9 | 0,1 | 0,4 | 0,1 | 0,2 | 0,1 | 0,2 |
| 19 | 0,7 | 2,4 | 0,3 | 1,9 | 0,23 | 3,25 | 0,1 | 0,8 |
| 20 | 2 | 4,3 | 1,5 | 3,6 | 1 | 3,1 | 0,6 | 2,7 |
| 22 | 3,5 | 6,3 | 3 | 5,6 | 2,6 | 5,3 | 2,1 | 4,6 |
| 24 | 5,5 | 8,3 | 5 | 7,8 | 4,5 | 7,4 | 4 | 6,9 |
| 26 | 7,6 | 10,7 | 7 | 10,3 | 6,6 | 9,9 | 6,2 | 9,4 |

Fig. 70 Table of clearance limits

G_{min} = min. clearance in mm

 G_{max} = max. clearance in mm

Note

When making adjustments, always make sure that the cabinet front suits the general appearance.

Check the collision factors and adjust them accordingly:

- ▶ Determine the front thickness and edge radius.
- ► Refer to the table for the min./max. clearance dimensions
- ► Check the clearance size against the table.
- ▶ Do one of the following depending on the measured clearance size.

| Clearance size | Description |
|-----------------------------|---|
| S > G _{max} | If the clearance size is greater than the two limits, you do not need to make any adjustments. |
| S < G _{min} | If the clearance size is below the limits, you must increase it. Another option is to increase the edge radius. |
| $G_{min} \le S \le G_{max}$ | If the clearance is between the two limits, you have to be careful. This will quickly lead to collisions. |

18 Water tank*

Depending on your model, the InfinitySpring water tank is behind the lowest drawer in the fridge or BioFresh compartment

18.1 Inserting the water tank

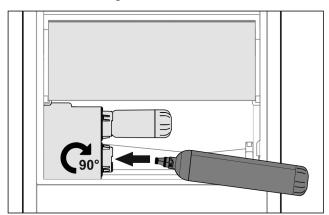


Fig. 71

- ► Remove the drawer.
- ▶ Insert the water tank and turn approx. 90° to the right until it engages.
- ► Check that the water tank is sealed and no water leaks out.
- ► Insert the drawer.
- ➤ Vent the water system (see Installation Instructions, Water Connection)

Instead of the water filter, you can use an additional water tank.

Note

The water tank is available as a spare part.

19 Water filter*

Depending on your model, the water filter is behind the lowest drawer in the fridge or BioFresh compartment.

It absorbs deposits in the water and reduces the taste of chlorine.

Connecting the appliance to the power supply

- □ Replace the water filter at least every 6 months under the specified usage conditions or if the flow rate drops significantly.
- ☐ The water filter contains carbon and can be disposed of with the regular household waste.

Note

The water filter can be purchased from the Liebherr-Hausgeräte store at home.liebherr.com/shop/de/deu/zubehor.html.

19.1 Installing the water filter

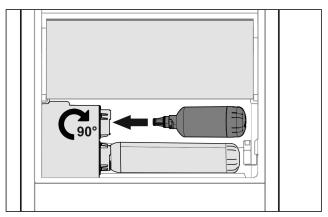


Fig. 72

- Remove the drawer.
- ► Insert the water filter and turn clockwise approx. 90° until it engages.
- Make sure the filter does not leak and no water is coming out.
- Insert the drawer.



CAUTION

New water filters may contain particulate matter.

- Draw 3 l of water from the InfinitySpring and dispose of it.
- > The water filter is now ready for use.

20 Connecting the appliance to the power supply



WARNING

Danger of electric shock and injury due to damaged appliance or damaged mains cable!

Cuts and fatal injury. If the appliance or the mains cable is damaged during transport, you may be electrocuted. You could also cut yourself on damaged parts of the appliance housing.

- ► Check the appliance and the mains cable for damage after transport.
- Never put the appliance into operation if the appliance or the mains cable are damaged.
- ► Contact Customer Service.

You can connect your appliance to the mains using the power cable supplied separately. The mains power cable has an appliance coupler at one end and a mains plug at the other end.

Make sure that the following requirements are fulfilled:

- The appliance and power cable are undamaged.
- The appliance is installed in accordance with the regulations. (see 16 Fit the appliance into the recess)

- Requirements for the electrical connection are met. (see 2.3 Electrical connection)
- Dimensions for connection in accordance with regulations are known and observed.
- Mains voltage and frequency correspond to the specifications on the type plate.
- The socket is grounded and fused in accordance with regulations.
- The tripping current for the fuse is between 10 A and 16 A.
- Outlet is easily accessible and is not behind the appliance (see 4 Recess dimensions).

NOTICE

Danger of damage to incorrect operation!

Damage to the electrical components of the appliance.

▶ Only use the supplied power cable.




WARNING

Danger of fire due to incorrect connection! Burns.

Damage to the appliance.

- ▶ Do not use an extension cord.
- ▶ Do not use a multipoint connector strip.



NOTICE

Danger of damage to incorrect connection! Damage to the appliance.

- Do not connect the appliance to a stand-alone inverter, e.g. solar power systems and petrol generators.
- Connect the mains plug of the power cable to the power supply.
- The Liebherr logo appears in the display.*
- ▷ The display switches to the standby symbol.*
- ▷ If no action is taken within 60 seconds: Standby symbol fades or disappears.
- Appliance is connected. For initial commissioning, see the next chapter or the operating instructions.

| Connecting the appliance to the power supply |
|--|
| |
| |
| |
| |
| |
| |
| |
| |
| |
| |
| |
| |
| |
| |
| |
| |
| |
| |
| |
| |



home.liebherr.com/fridge-manuals

Refrigerators and freezers for integrated use, door-on-door

Part number index: 7088411-00

Issue date: 20240208