
Operating instructions Multi-temperature wine cabinet Read the operating instructions before switching on for the first time



Page 14

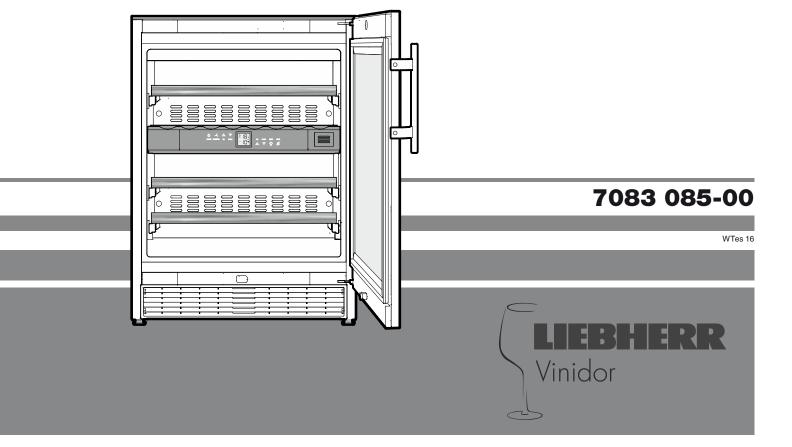

Content

Disposal notes	14
Description of the appliance	14
Range of appliance use	14
Safety instructions and warnings	15
Climate rating	15
Setting up	16
Appliance dimensions	16
Levelling the appliance	16
Mounting the dust filter	16
Air circulation in the appliance plinth area	16
Mounting the ventilation grille	
Electrical connection	17
Operating and control elements	17
Switching the appliance on and off	17
Setting the temperature	

Disposal notes

The appliance contains reusable materials and should be disposed of properly - not simply with unsorted household refuse. Appliances which are no longer needed must be disposed of in a professional and appropriate way, in accordance with the current local regulations and laws.



When disposing of the appliance, ensure that the refrigerant circuit is not damaged to prevent uncontrolled escape of the refrigerant it contains (data on type plate) and oil.

- Disable the appliance.
- Pull out the mains plug.
- Cut through the connection cable.

Danger of suffocation due to packing material and plastic film!

Do not allow children to play with packaging material.

Take the packaging material to an official collection point.

Fan 17
Door open alarm
Temperature alarm
Setup mode 18
Interior light
Labels
Air exchange with activated charcoal filter20
Safety lock
Storage diagram
Cleaning
Cleaning the dust filter
Removing and inserting the wooden shelves
Malfunctions
Shutting your appliance down
Changing over door hinges

Range of appliance use


The appliance is suitable solely for storing wine in a domestic environment or similar. This includes, for example, use

- in staff kitchenettes, bed and breakfast establishments,
- by guests in cottages, hotels, motels and other forms of accommodation,
- in catering and similar services in the wholesale trade.

Use the appliance solely as is customary within a domestic environment. All other types of use are inadmissible.

The appliance is not suitable for storing and cooling medicines, blood plasma, laboratory preparations or similar substances and products covered by the 2007/47/EC Medical Devices Directive. Any misuse of the appliance may result in damage to or spoilage of stored goods.

Furthermore, the appliance is not suitable for operation in potentially explosive atmospheres.

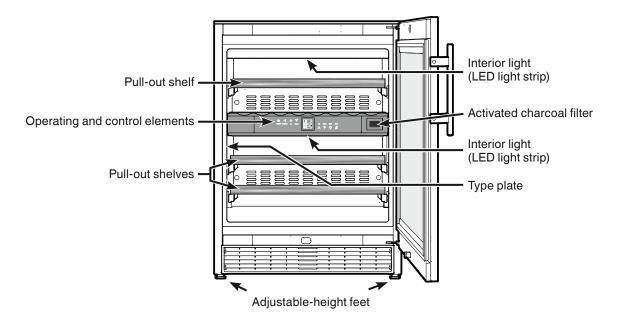

Description of the appliance

Safety instructions and warnings

- To prevent injury or damage to the unit, the appliance should be unpacked and set up by two people.
- In the event that the appliance is damaged on delivery, contact the supplier immediately before connecting to the mains.
- To guarantee safe operation, ensure that the appliance is set up and connected as described in these operating instructions.
- Disconnect the appliance from the mains if any fault occurs. Pull out the plug, switch off or remove the fuse.
- When disconnecting the appliance, pull on the plug, not on the cable.
- Any repairs and work on the appliance should only be carried out by the customer service department, as unauthorised work could prove highly dangerous for the user. The same applies to changing the mains power cable.
- Do not allow naked flames or ignition sources to enter the appliance. When transporting and cleaning the appliance, ensure that the refrigerant circuit is not damaged. In the event of damage, make sure that there are no ignition sources nearby and keep the room well ventilated.
- Do not stand on the plinth, drawers or doors or use them to support anything else.
- This appliance can be used by children of 8 years old and over, and also by persons with restricted physical, sensory or mental capacity or lack of experience and knowledge, if they are supervised or have been instructed on safe use of the appliance and understand the resulting risks. Children must not be allowed to play with the appliance. Cleaning and user maintenance must not be carried out by children without supervision.
- Avoid prolonged skin contact with cold surfaces or chilled/frozen food. This could cause pain, numbness and frostbite. In the case of prolonged skin contact, protective measures should be taken, e.g. gloves should be worn.
- Do not consume food which has been stored for too long, as it could cause food poisoning.

- Do not store explosives or sprays using combustible propellants such as butane, propane, pentane, etc. in the appliance. Electrical components might cause leaking gas to ignite. You may identify such sprays by the printed contents or a flame symbol.
- Do not use electrical appliances inside the appliance.
- If you have a lockable appliance, do not keep the key near the appliance or within reach of children.
- The appliance is designed for use in enclosed areas. Do not operate the appliance outdoors or in areas where it is exposed to splash water or damp conditions.
- The LED light strips illuminate the interior of the appliance. They are not suitable for lighting a room.
- When transporting or operating the appliance at an altitude of more than 1500 m above sea level, the glass pane in the door can break due to the reduction in air pressure. Broken fragments are sharp-edged and can cause serious injury.

Climate rating

The climate rating indicates the room temperature at which the appliance may be operated in order to achieve full refrigeration performance.



The climate rating is indicated on the type plate.


The position of the type plate is shown in the section entitled **Description of the appliance**.

Climate rating	Room temperature
SN	+10°C to +32°C
Ν	+16°C to +32°C
ST	+16°C to +38°C
Т	+16°C to +43°C
SN-ST	+10°C to +38°C
SN-T	+10°C to +43°C


Do not operate the appliance outside the specified room temperature range.

Setting up

- Avoid positioning the appliance in direct sunlight or near cookers, radiators and similar sources of heat.
- Standard EN 378 specifies that the room in which you install your appliance must have a volume of 1 m³ per 8 g of R 600a refrigerant used in the appliance, so as to avoid the formation of inflammable gas/air mixtures in the room where the appliance is located in the event of a leak in the refrigerant circuit. The quantity of refrigerant used in your appliance is indicated on the type plate on the inside of the appliance.
- Always install the appliance directly against the wall.
- Do not cover ventilation openings or grille.



Appliance dimensions

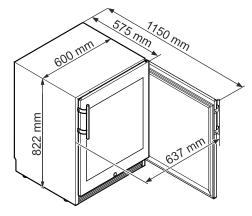



Levelling the appliance

- Place the appliance in its final position at the place of installation.
- Compensate floor unevenness using the adjustable feet.

Important

The appliance must be aligned horizontally and vertically. If the appliance is not level, the main body of the appliance can be deformed and the door will not close properly.





Turn the spanner clockwise to raise the appliance and anticlockwise to lower it.

Position the spanner accordingly.


Mounting the dust filter

The supplied dust filter prevents that dirt enters the motor compartment, reducing the refrigeration performance. Therefore always install the dust filter.



Remove the protective film from the dust filter.

Insert the filter at the bottom and click into place at the top.




Air circulation in the appliance plinth area


The refrigeration unit is located in the appliance plinth.

To ensure proper air circulation in the plinth area, install the foam moulding provided as shown in the illustration.


Important

If the foam moulding is not installed, the appliance will not achieve its full refrigeration performance during operation.

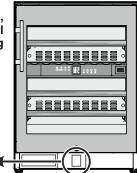



Mounting the ventilation grille

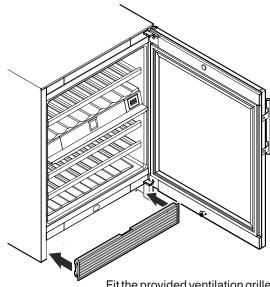

Fit the provided ventilation grille at the front and click into place.

Electrical connection

Only operate the appliance with alternating current (AC).

The permissible voltage and frequency are indicated on the type plate. The position of the type plate is shown in the section entitled Description of the appliance.

The socket must be properly earthed and protected by a fuse.

The tripping current of the fuse must be between 10 A and 16 A.

The socket must not be situated behind the appliance and must be easily accessible.

Do not connect the appliance using an extension cable or extension socket.




Do not use stand-alone inverters (conversion of direct current to alternating/three-phase current) or energy-saving plugs. Risk of damage to the electronic control system!

Operating and control elements

The electronic control panel has the new "touch capacitance technology". Any function can be activated by touching the corresponding icon.

The exact contact point is between the symbol and its label

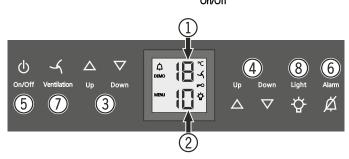

- ① Upper compartment temperature display
- ② Lower compartment temperature display
- ③ Upper compartment temperature setting buttons
- ④ Lower compartment temperature setting buttons
- ⑤ On/Off button (switching the appliance on and off)
- 6 Audible warning On/Off button
- ⑦ Fan switch
- ⑧ Interior light On/Off button

Symbols in the display

- Alarm (symbol flashes if the temperature inside the appli-Λ ance is too high or too low)
- DEMO Demo mode is activated
- MENU Setup mode is activated (activating the child lock and adjusting the display brightness
- 4 The interior fan runs constantly
- Child lock is activated
- The interior light is switched on constantly

Switching the appliance on and off

Switching the appliance on

Press the On/Off button until the temperature display lights up.

Switching the appliance off

On/Off

Keep the On/Off button pressed for approx. 3 seconds so that the temperature display goes out.

Setting the temperature

The temperature of both compartments can be set separately.

- ① Upper compartment
- ② Lower compartment

Reducing the temperature

Press the **Down** button.

Increasing the temperature

Press the Up button.

- When pressing one of the buttons for the first time, the display will start to flash.

 \wedge ∇

Ur

18

27

(1)

- Pressing this button again enables you to change the temperature settina.
- The electronic control system will switch over automatically about 5 seconds after the last time you pressed the button, and the actual temperature will be displayed.

The temperature can be set at between +5°C and +20°C.

The following drinking temperatures are recommended for the various types of wine.

Red wines: +14°C to +20°C

Rosé wines: +10°C to +12°C

White wines: +8°C to +12°C

Sparkling wines, Prosecco: +7°C to +9°C

Champagne: +5°C to +7°C

If you are storing wine for long periods of time, it should be stored at a temperature of between +10°C and +12°C.

Fan

The interior fan ensures a constant and even interior temperature and a suitable climate for wine storage.

The humidity in the appliance can be increased even further by activating the Ventilation button. This has a particularly positive effect for long-term storage.



The increased level of humidity prevents the corks from drying out.

Door open alarm

If the door is left open for more than 60 seconds, the audible warning signal will sound.

If the door must be opened for a lengthy period to place items into the appliance, cancel the audible warning signal by pressing the **Alarm** button.

The alarm switches back to standby when the door is shut.

Temperature alarm

If the temperatures in the interior are out of the permitted range, the audible warning signal will sound and the temperature display will flash.

• Cancel the audible warning signal by pressing the Alarm button.

After a lengthy power failure, the temperature in the interior may have risen to too high a level. After the power supply returns, the fall in temperature can be watched on the display.

The temperature display will stop flashing as soon as the temperature in the interior has reached the set value.

Temperature alarm after a fault in the appliance

If the appliance develops a fault, the temperature in the interior may rise too high or fall too low. The audible warning signal will sound and the temperature display will flash.

• Cancel the audible warning signal by pressing the Alarm button.

If the temperature displayed is too high (warm), first check whether the door is closed correctly.

If the temperature display continues to show a value that is too high or too low after one hour, contact the customer service department.


If **F1**, **F8**, **S1**, **S2**, **S7** or **S8** appears in the display, the appliance has suffered a fault.

In this case, contact the customer service department.


Set-up mode

In set-up mode, you can set the child lock and adjust the brightness of the display. The child lock is designed to protect the appliance from being switched off and the temperature setting from being changed accidentally.


Activating the child lock

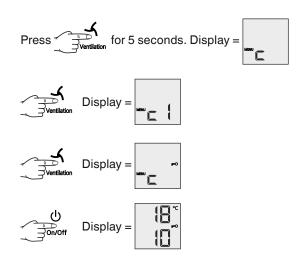

Deactivating the child lock

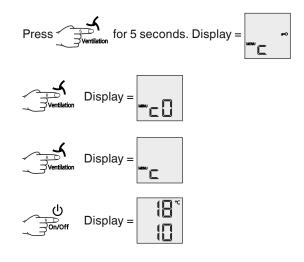


Adjusting the display brightness

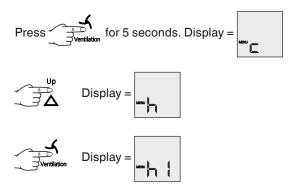

Use buttons Up and Down to select the desired setting.

h0 = display lighting offh1 = minimum brightnessh5 = maximum brightness



The adjusted brightness will be activated after one minute.

Note

If a button is pressed, the display lights up for one minute at maximum brightness.


When commissioning the appliance, the adjusted brightness will only be active once the set interior temperature of the appliance has been reached.

Demo mode

Demo mode can be activated for presenting the appliance at exhibitions or in salesrooms as though in normal operating mode. **DEMO** appears in the display.

When in this mode, the cooling circuit is switched off!

If this mode is activated by accident, it can be deactivated as detailed below.

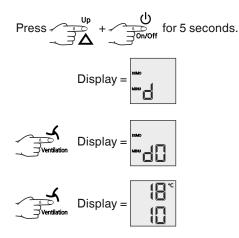

The refrigeration unit switches on. The temperature display flashes.

The appliance is now in normal operating mode.

Interior light

The interior of the appliance is lit by an LED light strip at the top of each compartment.

The interior light will always switch on when the appliance door is opened.

The interior light will go out approx. 5 seconds after the door is closed.

Press the **Light** button if you want the interior light to be on even when the door is closed.

Note

This function applies to the lighting of both compartments.

Furthermore, the brightness of the lighting can be adjusted.

- Press the Light button.
- Press and hold the Light button and at the same time press the temperature setting buttons to increase or decrease the brightness.




Note: The brightness will change in all compartments.

The light intensity of the LED light corresponds to laser class 1/1M.

Important

The light cover may only be removed by customer service staff.

If the cover is removed, do not look directly at the light through optical lenses from close distance. This can damage your eyes.

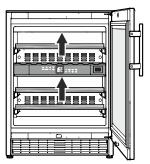


Labels


The appliance is supplied with one label for each wooden shelf.

Use these to label the type of wine stored on each shelf.

Additional labels can be obtained from your dealer.

Click the label holder into place and slide the label in from the side.



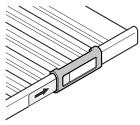


Air exchange with activated charcoal filter

The way in which wines continue to mature depends on the ambient conditions.

The quality of the air is therefore decisive for preserving the wine.


We recommend that you replace the illustrated filter once a year. Filters can be obtained from your dealer.

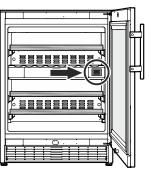


Changing the filter



• Push the filter in and release it again.




filter.

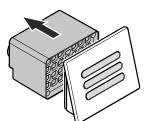

• Fit the new filter to the cover.

· Remove the back part of the

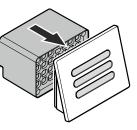

 Insert the filter, push it in as far as it will go and then release it again.
The filter is automatically locked into place.
You will hear a click.




Safety lock

The lock in the appliance door is equipped with a safety mechanism.

Locking the appliance

- Insert the key as shown by arrow 1.
- Turn the key 90°.


To unlock the appliance, the same procedure must be repeated in the same order.

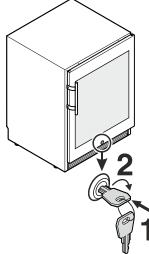

Storage diagram

for 0.75 I Bordeaux bottles to standard NF H 35-124

Number of bottles

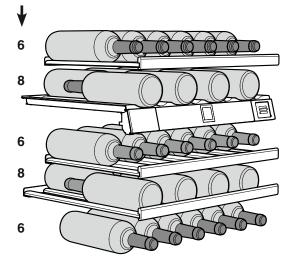

Total 34 bottles

/ Important

The maximum load per wooden shelf is 25 kg.

Cleaning

Before cleaning, always switch off the appliance. Disconnect from the mains or switch off or unscrew the fuse.


- Clean the inside and outer walls with lukewarm water and a little detergent. Do not use abrasive or acid cleaners or chemical solvents.
- Use a glass cleaner to clean the glass surfaces and a commercially available stainless-steel cleaning agent for the stainless-steel surfaces.

Do not use steam cleaners because of the risk of injury and damage.


- Ensure that no cleaning water penetrates into the electrical components or ventilation grille.
- Do not damage or remove the type plate on the inside of the appliance. It is very important for servicing purposes.

Cleaning the dust filter

The dust filter in the appliance plinth must be cleaned at least once a year.

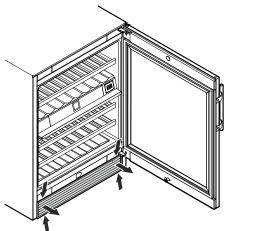

• Take hold of the ventilation grille at top and bottom in the places shown and pull towards you.

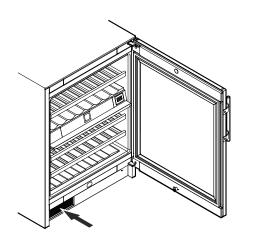


- Clean the dust filter using a vacuum cleaner.
- Click the ventilation grille back into place.


Removing and inserting the wooden shelves

The wooden shelves can be removed for easier cleaning of the inside of the appliance.

Removing the wooden shelf

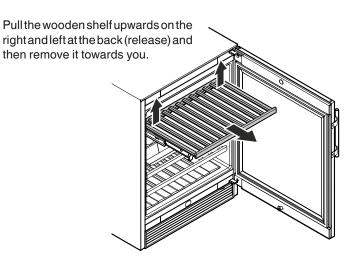


Inserting the wooden shelf

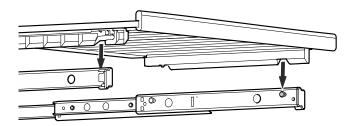

Extend the pull-out rails as far as they will go. Place the front recesses of the wooden shelf on the securing pins.

Slide the wooden shelf together with the pull-out rails into the appliance as far as they will go.

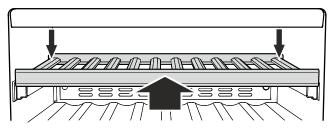

Push the wooden shelf right to the back so that it clicks into place at the front.

Push the wooden shelf downwards on the right and left at the back and click into place.

Malfunctions

- F1, F8, S1, S2, S7 or S8 appears in the display.
- The appliance has suffered a fault. Contact the customer service department.
- The fans inside the appliance are running although the fan function has been deactivated and the compressor (refrigeration unit) is idle.
- This is a normal operating state depending on the set interior temperature and ambient temperature at the place of installation.

You may be able to rectify the following faults by checking the possible causes yourself.

Appliance does not function:

- Is the appliance switched on?
- Is the plug correctly fitted in the mains socket?
- Is the fuse intact?
- When inserting the mains plug, the refrigeration unit does not switch on, but a value is shown in the temperature display.
- Demo mode is activated. Deactivate demo mode as described in the section entitled **Demo mode**.

· Loud running noise:

- Is the appliance set up firmly on the floor?
- Does the appliance cause nearby items of furniture or objects to vibrate? Please note that noises caused by the refrigerant circuit cannot be avoided.

• The temperature is not low enough:

- Is the temperature setting correct (see "Setting the temperature")?
- Does the separately installed thermometer show the correct reading?
- Is the ventilation system working properly?
- Is the dust filter in the appliance plinth soiled? See section entitled "Cleaning the dust filter".
- Is the appliance set up too close to a heat source?

If none of the above causes apply and you cannot rectify the fault yourself, contact the nearest customer service department stating the type designation ①, service number ② and appliance number ③ as indicated on the type plate.



The position of the type plate is shown in the section entitled **Description of the appliance**.

Shutting your appliance down


If your appliance is to be shut down for any length of time, switch it off and disconnect the plug or switch off or unscrew the fuse.


Clean the appliance and leave the door open in order to prevent unpleasant smells.

The appliance complies with the relevant safety regulations and EC Directives 2004/108/EC and 2006/95/EC.


Changing over door hinges

Door hinges should only be changed by a trained expert. Changing the door hinges must be done by two people.

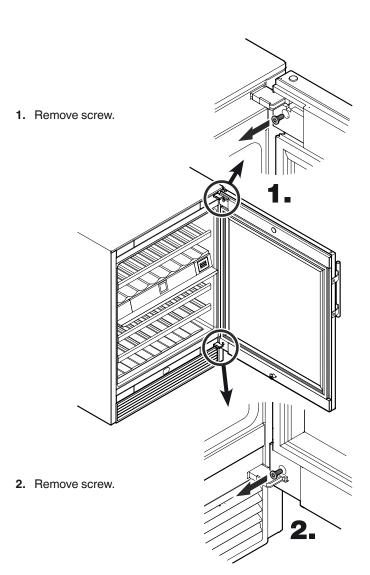

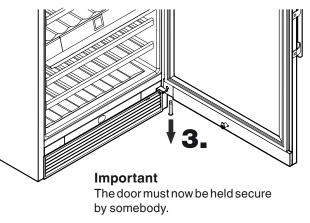


3. Pull out hinge pin.

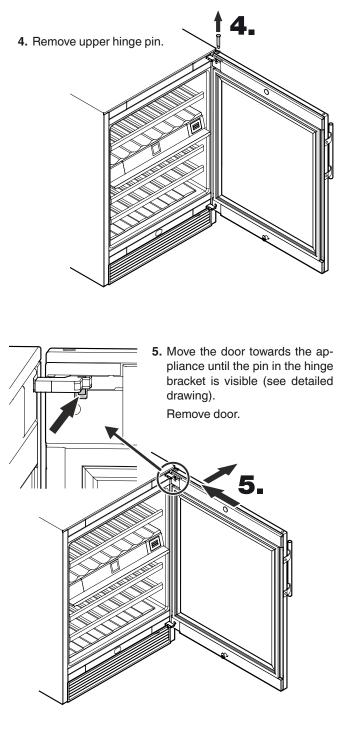

9. Click cover into place.

opposite side.


 Compress the covers in the places shown and release. Turn the covers through 180° and click into place on the

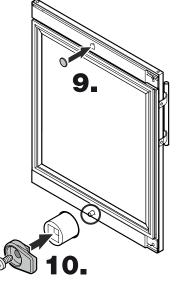


10. Screw on the door latch.


6. Remove cover.

7. Unscrew door latch.

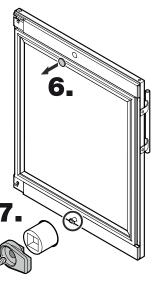

11. Transfer door handle and plugs to the opposite side.

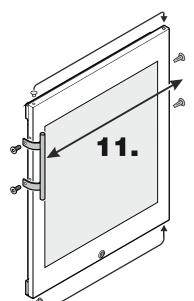

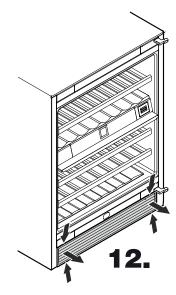


12. Take hold of the ventilation grille at top and bottom in the places shown and pull towards you.


13. Remove the covers.

15. Unscrew the hinge bracket and re-fit on the left at the bottom.

Insert screws in the marked openings.

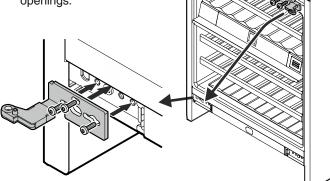


15.

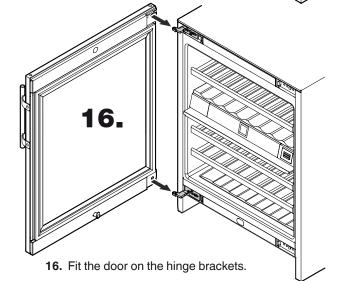

Important

The door must now be held secure by somebody.

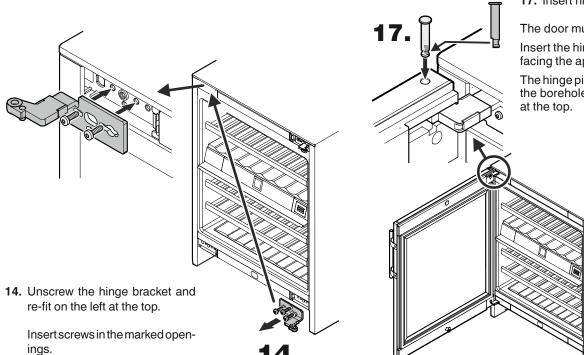

17. Insert hinge pin.

The door must be open 90°.

Insert the hinge pin with the flat part facing the appliance.

The hinge pin must be full inserted in the borehole and must not protrude at the top.

