



Installation Guide

Quality, Design and Innovation





home.liebherr.com/fridge-manuals



LIEBHERR

General safety instructions

Contents

| 1 | General safety instructions | 2 |
|--------------|--------------------------------------------------------------------------|----------|
| 2 | Installation conditions | 3 |
| 2.1 | Location | 3 |
| 2.2 2.3 | Installing multiple appliances Mains connection | 3 4 |
| 3 | Appliance dimensions | 4 |
| 4 | Recess dimensions | 4 |
| 5 | Ventilation requirements | 5 |
| 6 | Unit front weights | 5 |
| 7 | Water connection* | 5 |
| 7.1 | Dimensions for the water connection | 5 |
| 7.2 | Water pressure | 5 |
| 8 | Transporting appliance | 5 |
| 9 | Unpacking the appliance | 5 |
| 10 | Setting up the appliance | 6 |
| 10.1 | After installation | 6 |
| 11 | Disposing of packaging | 6 |
| 12 | What the symbols mean | 6 |
| 13 | Reversing the door | 7 |
| 14 | Connecting the appliance to the water supply* | 9 |
| 14.1 | Connecting the hose | 9 |
| 14.2 | Checking the water system | 10 |
| 15 | Installing the appliance in the recess | 10 |
| 16 | Unit fronts | 17 |
| 16.1 | Dimensions | 17 |
| 16.2 16.3 | Fitting the unit front(s) Adjusting the gap dimension without collisions | 17 17 |
| 10.5 17 | | 18 |
| 1/ | Connecting device | то |


The manufacturer is continually working on the further development of all types and models. Please be aware that we reserve the right to make changes to the shape, equipment and technology.

| Symbol | Explanation | | |
|--------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--|--|
| | Read instructions Please read the information in these instructions carefully to understand all of the benefits of your new appliance. | | |
| | Additional information on the Internet The digital manual with additional information and in other languages can be found via the QR code on the front of the manual or by entering the service number at home.liebherr.com/fridge-manuals. The service number can be found on the serial tag: Fig. Example illustration | | |

| | Symbol | Explanation |
|-------------|--------|---------------------------------------------------------------------------------------------------------------------------------------------------------|
| | | Check appliance Check all parts for transport damage. If you have any complaints, please contact your agent or customer service. |
| Differences | | Differences |
| | * | These instructions apply to a range of models, so differences are possible. Sections that apply to certain models only are marked with an asterisk (*). |
| | 7 | Instructions and results |
| | | Instructions are marked with a ▶. |
| | | Results are marked with a ▷. |
| | | Videos |
| | | Videos about the appliances are available on the YouTube channels of Liebherr-Hausgeräte. |


1 General safety instructions

- Please keep this assembly manual in a safe place so you can refer back to it at any time.
- If you pass the appliance on, please hand this assembly manual to the next user.
- Read this assembly manual carefully before installation and use to ensure safe and correct use of the appliance. Follow the instructions, safety instructions and warning messages included at all times. They are important for ensuring you can operate and install the appliance safely and without any problems.
- First read the general safety instructions in the "General safety instructions" section of the **operating instructions**, which accompany these installation instructions, and follow them. If you cannot find the **operating instructions**, you can download the **operating instructions** from the internet by entering the service number at **home.liebherr.com/fridge-manuals**. The service number can be found on the serial



tag:

 Observe the warning messages and other detailed information in the other sections when installing the appliance:



| | WARNING | identifies a dangerous situation which, if not obviated, may result in death or severe bodily injury. |
|----------|---------|-------------------------------------------------------------------------------------------------------|
| <u> </u> | CAUTION | identifies a dangerous situation which, if not obviated, may result in minor or medium bodily injury. |
| | NOTICE | identifies a dangerous situation which, if not obviated, may result in damage to property. |
| | Note | identifies useful instructions and tips. |

2 Installation conditions



WARNING

Fire hazard due to dampness!

If live parts or the mains lead become damp this may cause short circuits.

► The appliance is designed for use in enclosed areas. Do not operate the appliance outdoors or in areas where it is exposed to splash water or damp conditions.

Intended use

- Install and use the appliance in indoor spaces only.
- Use the appliance only once installed.

2.1 Location



WARNING

Leaking coolant and oil!

Fire. The coolant contained in the appliance is eco-friendly, but also flammable. The oil contained in the appliance is flammable. Escaping coolant and oil can ignite if the concentration is high enough and in contact with an external heat source.

- Do not damage the pipelines of the coolant circuit and the compressor.
- If the appliance is installed in a very humid environment, condensation can build up on the outside of the unit.
 Always ensure good airlow and ventilation in the installation location.
- The more refrigerant there is in the appliance, the larger the space that it is installed in must be. If the space is too small, any leak may create a flammable mixture of gas and air. For every 8 g of refrigerant, the installation space must be at least 1 m³. Information regarding the coolant can be found on the serial tag inside the appliance.

2.1.1 Supporting floor

- The floor of the installation site must be horizontal and even.
- If you are installing the unit in a cabinet standing on an uneven floor: level the cabinet.

2.1.2 Positioning

- Do not install the appliance in direct sunlight or near radiators or similar sources of heat.
- You can install the appliance directly next to an oven.

- If the appliance is installed directly next to an oven, the energy consumption may increase slightly. This is dependent on the service life and usage intensity of the oven
- Only fit the appliance into solid kitchen units.

Note

Please contact Customer Services to acquire a kit to limit the door opening angle to 90° for appliances with soft close mechanisms.

2.2 Installing multiple appliances

The appliances have been developed for different installation methods. If you wish to install several appliances next to each other or on top of each other, ensure that the following requirements are met:

- Only install appliances next to or on top of each other if they have been developed for this.
- ☐ Observe notices and the following table.

NOTICE

Risk of damage due to condensate!

Do not place the appliance directly next to another cooling/refrigeration unit.

NOTICE

Risk of damage due to condensation!

Do not place the appliance directly on top of another cooling/refrigeration unit.

| Model | Installation method |
|------------------------------------------------------------------------------------------------------------------|------------------------|
| All models | Standalone |
| Models with a model designation starting with S . | Side-by-Side (SBS) |
| Models up to a maximum niche height of 880 mm and with a heated ceiling can be installed "on top of each other". | |
| Top appliance: up to a maximum niche height of 140 mm | |

Models and their installation method

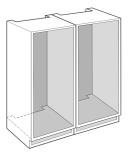


Fig. 1

Install each appliance into a separate unit niche.

2.3 Mains connection



WARNING

Danger of fire due to incorrect positioning!

If the mains cable or plug touches the back of the appliance, the vibration can damage the mains cable or the plug resulting in a short circuit.

- Make sure the mains cable is not trapped under the appliance when you position the appliance.
- Stand the appliance so that it is not touched by connectors or main cables.
- ► Do not connect any appliances to sockets in the area of the back of the appliance.
- ▶ Do not place and operate multi-sockets/power distributors and other electronic devices (such as halogen transformers) at the back of the appliances.

3 Appliance dimensions

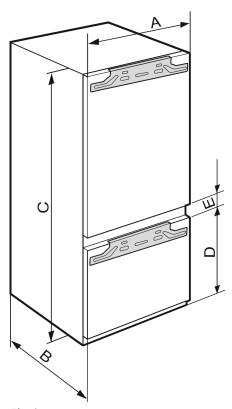


Fig. 2

| ICN 56.3 / ICBN(i) 56.3 | |
|-------------------------|------|
| A (mm) | 559 |
| B (mm) | 546 |
| C (mm) | 1938 |
| D (mm) | 695 |
| E (mm) | 15 |

4 Recess dimensions

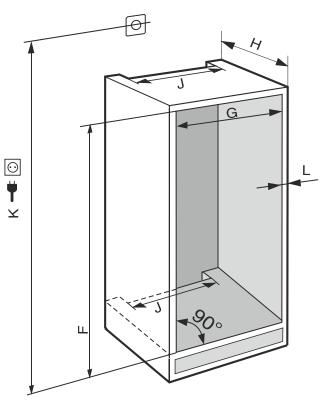


Fig. 3 (K): max. 2100 mm

Observe the following information for appliances with a fixed water connection:

- Water connection (see 7 Water connection*)
- Connecting the appliance to the water supply (see 14 Connecting the appliance to the water supply*)

| ICN 56 / ICBN 56 | |
|-----------------------------------------|------------|
| F (mm) 1772 to 1788 | |
| G (mm) | 560 to 570 |
| H (mm) min. 550, recommended 560 | |
| J (mm) | min. 500 |
| L (mm) | max. 19 |

The specified energy consumption was determined with a kitchen unit depth of 560 mm. The appliance will work properly at a kitchen unit depth of 550 mm, but with a slightly higher energy consumption.

- ► Check the wall thickness of adjacent cabinets: They must have a minimum of 16 mm.
- ▶ Only fit the appliance into stable, solid kitchen units. Secure the unit against tipping.
- ▶ Align the cabinets with a spirit level and a try square. If necessary, level them by putting something underneath them.
- Make sure that the floor and the side panels of the cabinet are at right angles to each other.

5 Ventilation requirements

NOTICE

Covered vents!

Damage. Appliance can overheat, which can reduce the service life of various parts of the appliance and lead to operational impairments.

- ► Always make sure there is good ventilation.
- ► Always keep vents or ventilation grids in the appliance housing and in the kitchen furniture (fully integrated appliance) unobstructed.
- ► Always keep the fan air vents unobstructed.

Always follow the required ventilation gaps:

- The depth of the ventilation shaft at the back of the cabinet must be at least 38 mm.
- At least 200 cm² is required for the ventilation gap cross sections in the plinth and the housing cabinet.
- As a rule, the larger the ventilation cross-section, the more efficiently the appliance will run.

Sufficient ventilation is required for the operation of the appliance. The ventilation grids provided ensure an effective ventilation cross-section on the appliance of 200 cm². If you replace the ventilation grids with a cover plate the ventilation cross-section must be as least as large as the ventilation grid provided by the manufacturer.

6 Unit front weights

NOTICE

A heavy unit door may pose a risk of damage!

If the unit door is too heavy, damage to the hinges cannot be ruled out, which may compromise functionality.

Before fitting the unit door, ensure that the unit door does not exceed the permissible weight.

| | Maximum weight of the unit door (kg) | | |
|------|--------------------------------------|-------------------------------|--|
| (mm) | Fridge compartment door | Freezer compart- ment door | |
| 1940 | 18 | 12 | |

Combinations

7 Water connection*

If your appliance has a fixed water connection, a hose is supplied with it.

Note

You can purchase a hose of a different length as an accessory.

| Overview of dimensions for the water connection: | (see 7.1 Dimensions for the water connection) |
|--------------------------------------------------|--------------------------------------------------------|
| Requirements for the water pressure: | (see 7.2 Water pressure) |
| Make the water connection: | (see 14 Connecting the appliance to the water supply*) |

7.1 Dimensions for the water connection

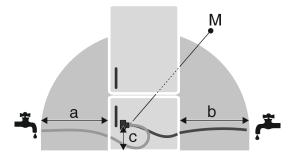


Fig. 4

- (a) Maximum available hose length
- (b) Maximum available hose length
- (c) Distance of solenoid valve to floor
- (M) Solenoid valve

| а | b | С |
|-----------|-----------|---------|
| ~ 1200 mm | ~ 1200 mm | ~ 55 mm |

7.2 Water pressure

The water connection line and solenoid valve of the appliance are suitable for a water pressure of up to 1 MPa (10 har).

To ensure that the appliance functions correctly (flow rate, ice cube size, noise level), maintain the following water pressure:

| Water pressure: | | |
|-----------------|------------|--------------|
| | bar | MPa |
| | 1.5 to 6.2 | 0.15 to 0.62 |

If the pressure is higher than 6.2 bar:

- Fit a pressure reducer.
- Make the water connection. (see 14 Connecting the appliance to the water supply*)

8 Transporting appliance

Note when transporting the appliance:

- ► Transport the appliance upright.
- ▶ Use two people to transport the appliance.

During first use:

► Transport the appliance packaged.

When transporting appliances after initial commissioning (e. g. moving or cleaning):

- ► Empty the appliance.
- ► Secure the door against unintentional opening.

9 Unpacking the appliance

Before you connect the appliance, report any damage immediately to the delivery company.

- ► Check the appliance and the packaging for damage during transport. Contact the supplier immediately if you suspect any level of damage.
- Remove all materials from the back or the side walls of the appliance that may prevent proper installation or ventilation.
- ► Remove all protective films from the appliance. Do not use sharp or pointed objects for this.

10 Setting up the appliance

<u>^</u>

CAUTION

Risk of injury due to heavy appliance!

Have two people transport the appliance to its installation site.



WARNING

Danger of injury and damage due to the appliance being unstable!

The appliance can topple over.

► Secure the appliance as described in the instructions.



WARNING

Fire hazard and danger of damage!

Do not place appliances emitting heat e.g. microwaves, toasters etc. on the appliance!

If possible, have the appliance installed in the kitchen unit by a professional.

Do not install the appliance on your own.

10.1 After installation

► Remove all transport safety components.


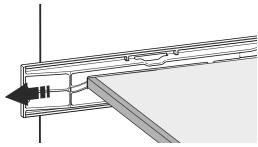


Fig. 5 *

► Pull off the transport lock on the appliance door.



Clean the appliance (see User Guide, Cleaning the appliance).

11 Disposing of packaging



WARNING

Danger of suffocation due to packing material and plastic film!


▶ Do not allow children to play with packing material.

The packaging is made of recyclable materials:

- corrugated board/cardboard
- expanded polystyrene parts
- polythene bags and sheets
- polypropylene straps
- nailed wooden frame with polyethylene panel*
- Take the packaging material to an official collecting point.

12 What the symbols mean

| the a step nce. |
|--------------------|
| tep nce. the |
| the le. |
| |
| o a ble- |
| pli- or r. |
| our fini- |
| iten |
| |
| step |
| seat |
| ure- |
| |
| ess om- the |
| |

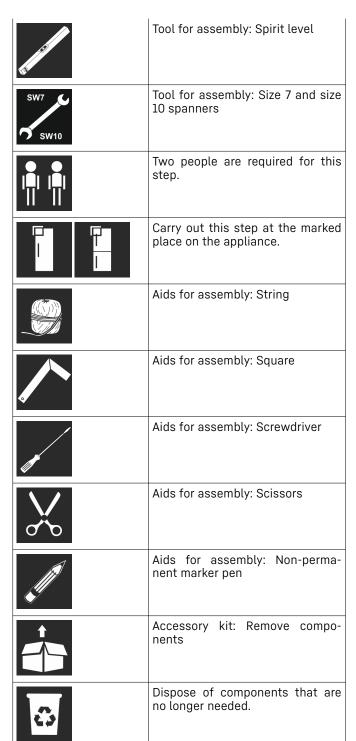

13 Reversing the door

Tool







Fig. 6

NOTICE

Live parts!

Damage to electrical components.

▶ Remove the mains plug before you reverse the door.

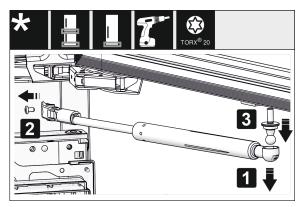


Fig. 7

► Removing the soft stop damper: Remove the soft stop damper from the ball stud (1). Unscrew the retainer (2). Remove the ball stud with a screwdriver (3).

Note

If the closing damper is only slightly above the floor, you can only remove the ball pins when the door is removed.

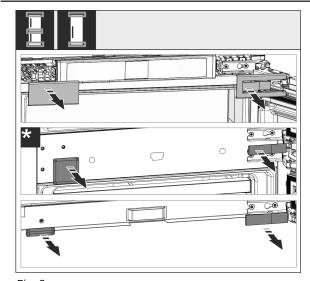


Fig. 8

► Remove covers.

Note

When removing the covers, ensure that the surface does not get scratched.

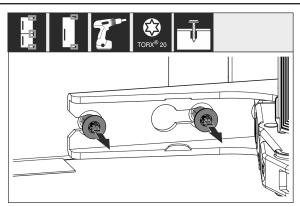


Fig. 9

▶ Loosen the screws on **all** hinges but do not remove them.

Reversing the door

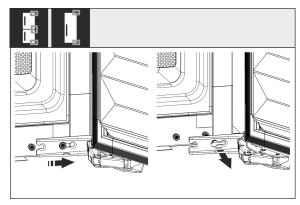


Fig. 10

► Removing the door: Push the door forward and then out, unhang it and put it to one side.

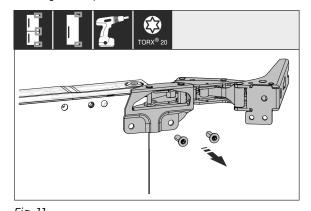


Fig. 11

➤ Unscrew all hinges and set aside together with the screws.

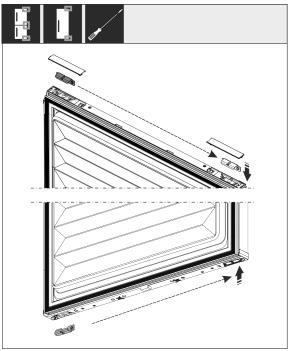


Fig. 12▶ Loosen and shift the bracket at the top and bottom of the door. The bracket must be shifted so you can screw on the hinges.

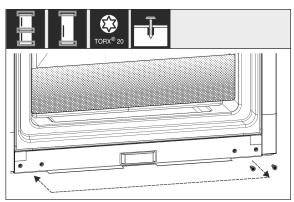


Fig. 13

► Shift the screws to fasten the hinge. Do not screw tightly after shifting – you need to hang the hinges later.

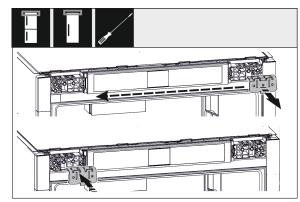


Fig. 14

► Move the fixing bracket to the opposite side.

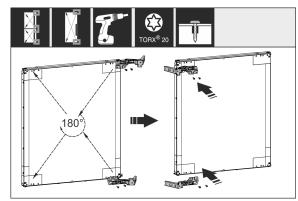


Fig. 15

► Turn all hinges 180° to the opposite side and screw firmly.

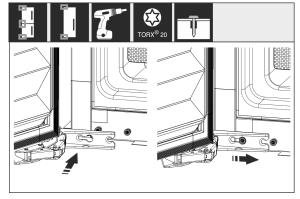


Fig. 16

Refitting the door: Hang the door with its hinges and tighten the screws.

Connecting the appliance to the water supply*

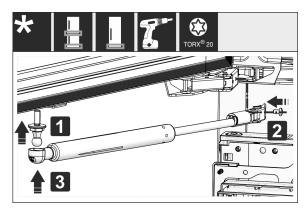


Fig. 17

- ▶ Refitting the closing dampers: Screw in the ball studs (1), tighten the bracket (2) and hang the closing dampers in the ball studs.
- ► Check all screws and retighten if necessary.

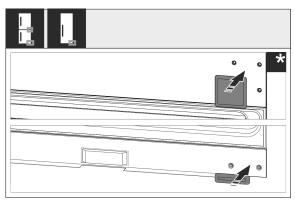


Fig. 18

Reassemble the bottom and centre cover. Only replace the remaining covers after installing the appliance back into the cabinet.

14 Connecting the appliance to the water supply*

Make sure that the following requirements are fulfilled:

- □ The dimensions for the water supply connection are known and complied with. (see 7.1 Dimensions for the water connection)
- ☐ The correct water pressure is maintained. (see 7.1 Dimensions for the water connection)
- Water is supplied to the appliance via a cold water pipe which can withstand the operating pressure and is connected to the drinking water supply.
- □ All equipment and devices used to supply water must comply with the regulations in force in the respective country.
- ☐ The rear of appliance is accessible so that you can connect the appliance to the drinking water supply.
- ☐ The supplied hose is used. Old hoses have been disposed
- ☐ The hose connector contains a filter with a seal.
- ☐ There is a tap between the hose line and the domestic water connection so that you can turn off the water supply if necessary.
- □ The tap is not directly behind the appliance and is easily accessible. This way, you can push the appliance as far as possible into the cabinet recess and can quickly turn off the tap if necessary.



WARNING

Risk of electric shock from water!

- ► Before connecting to the water pipe: Disconnect the appliance from the mains.
- ▶ Before connecting to water supply lines: Shut off the water supply.
- Make sure that only qualified personnel connect the device to the drinking water supply.



WARNING

Risk of poisoning due to contaminated water!

Only connect to the drinking water supply.

14.1 Connecting the hose

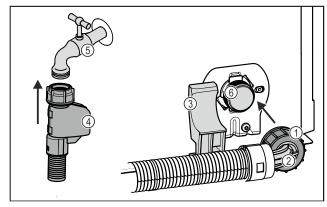


Fig. 19

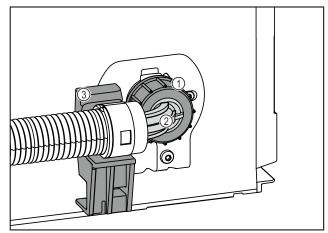


Fig. 19

- (1) Nut
- (2) Angled hose end
- (3) Bracket
- (4) Straight hose end
- **(5)** Tap
- (6) Solenoid valve: The solenoid valve is at the bottom on the back of the appliance. It has an R3/4 connecting thread.

NOTICE

Risk of damage from incorrect installation!

- ▶ Do not damage or kink the hose.
- ▶ Do not damage or kink the hose during installation in the cabinet recess.

Connecting the hose to the appliance:

- ▶ Position and hold the angled hose end *Fig. 19 (2)* horizontally on the bracket *Fig. 19 (3)*.
- Screw on the nut *Fig. 19 (1)* on by hand until it is firmly in place.

▶ The hose is connected to the appliance.

Connecting the hose to the tap:

- ► Connect the straight hose end Fig. 19 (4) to the tap Fig. 19 (5).
- > The hose is connected to the tap.

14.2 Checking the water system

Before you completely install the appliance in the cabinet recess, Liebherr recommends checking the water system for leaks.

- ► Slowly turn on the tap.
- ► Check the hose, water feed and connections for leaks.
- The water system has now been checked for leaks.
- > The water system is not leaking: You can install the appliance completely in the cabinet recess.

Note

IceMaker: Before the first use, you must clean the IceMaker. (see Quick Start Guide or operating instructions)*

15 Installing the appliance in the recess

Tool

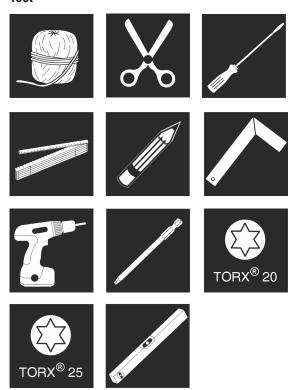


Fig. 20
Supplied assembly parts

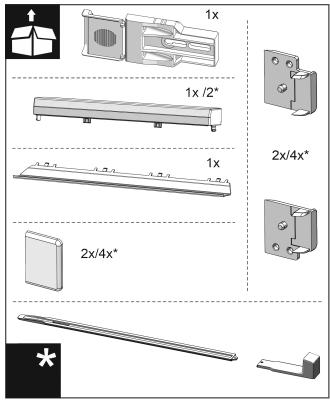


Fig. 21




Fig. 22

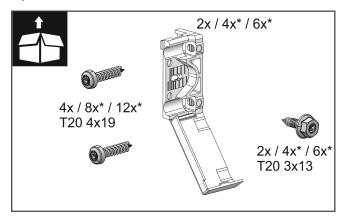


Fig. 23

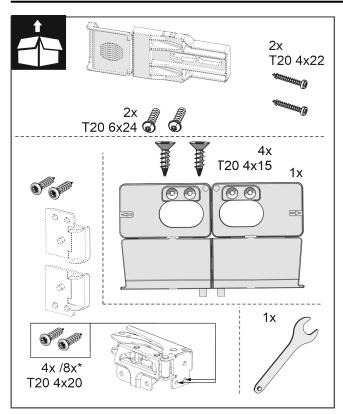


Fig. 24

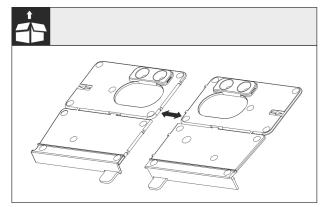


Fig. 25

Disconnect the base installation bracket at the perforation.

NOTICE

Correct installation depth of the appliance.

Using the mounting bracket ensures the correct installation depth of the appliance.

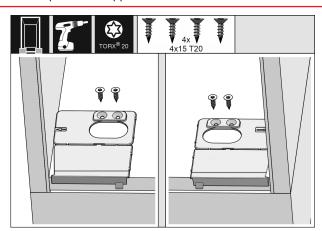


Fig. 26

► Screw the mounting brackets on the left and right of the recess floor, flush to the side wall.

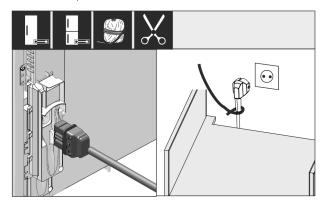


Fig. 27

- ► Remove the mains cable from the package.
- ▶ Plug the mains cable's IEC socket completely into the appliance plug on the back of the appliance. Ensure that the IEC socket is tight.
- Use a cord to lay the mains plug to a freely accessible socket.

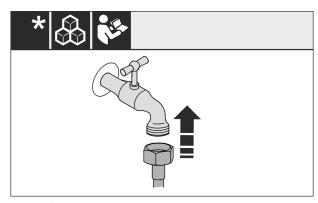


Fig. 28 *

► If necessary, install the water connection at this point, following the instructions in the User Guide.*

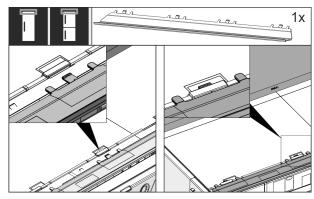


Fig. 29

▶ Insert the adapter panel on the top of the appliance. The panel can be moved to both sides.

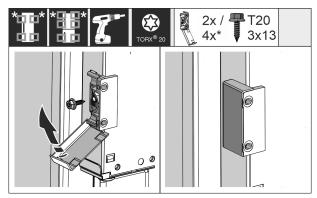


Fig. 30

- ► Fit the mounting bracket. Attach the mounting bracket at the height of the custom door panel handle. For a large door, use four mounting brackets.
- ▶ After assembly, fold the covers onto the bracket.

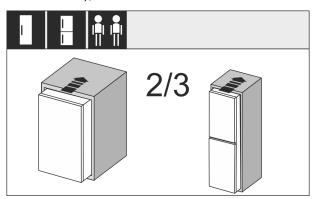


Fig. 31

▶ Insert the appliance 2/3 of the way into the recess.

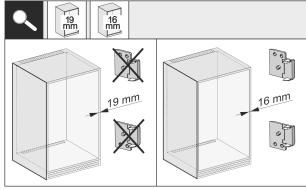


Fig. 32

► Check whether the unit side wall is 16 mm or 19 mm thick.

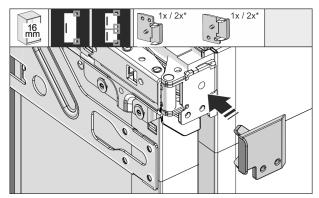


Fig. 33

- ▶ 16 mm thick unit side walls: Put a spacer on all hinges.
- ▶ 19 mm thick unit side walls: You do not need a spacer.

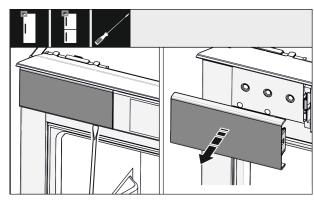


Fig. 34

► Use a screwdriver to loosen the cover at the top left and remove it

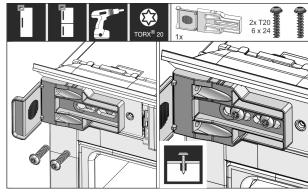


Fig. 35

► Loosely tighten the mounting bracket screw. The bracket should still be easy to move.

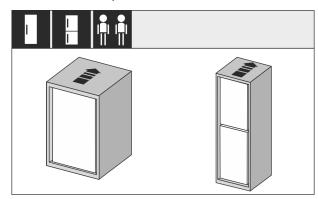


Fig. 36

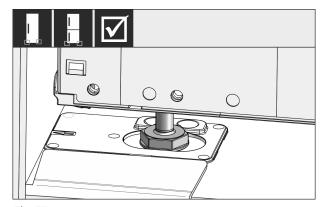


Fig. 37



WARNING

Risk of fire due to short circuit!

- ▶ When you push the appliance into the niche: do not kink, jam or damage the mains cable.
- ► The appliance must not be operated with a defective mains cable.
- ▶ Push the appliance all the way into the unit recess. The adjustable feet must rest in the recesses in the brackets on both sides.

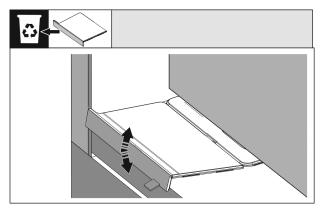


Fig. 38

▶ Remove the floor mounting bracket stopper. Loosen the stopper by moving it and, if necessary, pull it off using pliers.

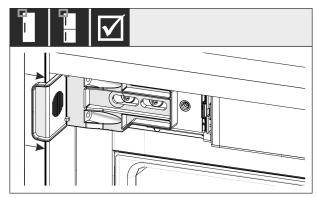


Fig. 39

► Check that the appliance is flush in the cabinet recess. The mounting bracket must be attached to the side wall of the cabinet recess.

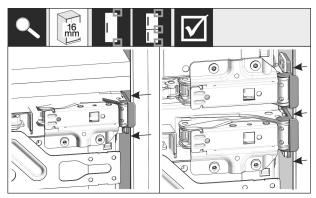


Fig. 40

Note

With 16 mm unit side walls, the spacers fit against the unit recess on the hinge side.

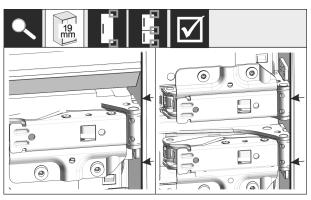


Fig. 41

▶ 19 mm thick unit side walls: Align the front of the hinges flush with the unit side wall.

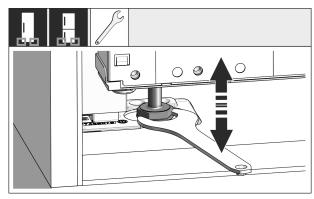


Fig. 42

► If necessary, use the adjustable feet to correct the tilt of the appliance.

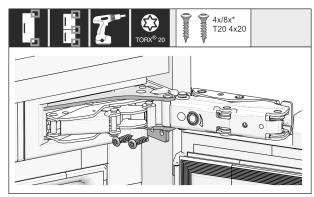


Fig. 4

Screw on the appliance on the hinge side.

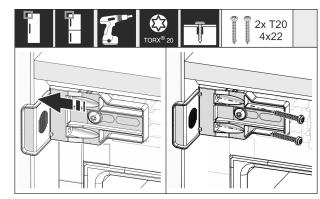


Fig. 44

- Move the bracket so it sits flush on the side wall of the cabinet recess.
- ► Tighten all the screws securely.

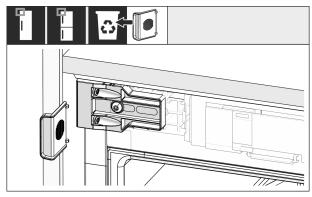


Fig. 45

Remove the stop from the bracket on the handle side and dispose of it.

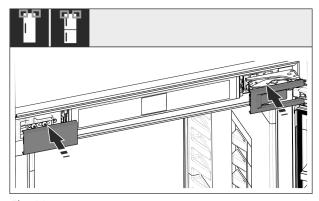


Fig. 46

▶ Put covers into position.

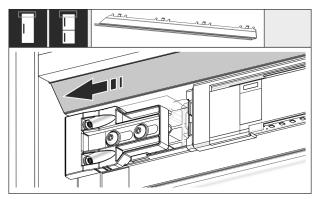


Fig. 47

► Slide the panel so that it sits flush with the side of the cabinet wall.

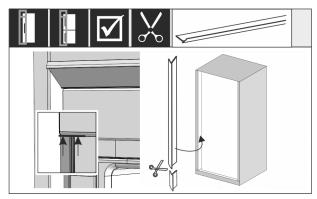


Fig. 48

- ► If necessary: Shorten the sealing strip as necessary with a sharp pair of scissors.
- ► Position the sealing strip below the top cover and press it in. The sealing strip is magnetic.

From a niche height of 1400 mm, install levelling rails:



Fig. 49

You must installed levelling rails under the appliance from a niche height of 1400 mm. The levelling rails **reduce the noise level**. Two levelling rails and an installation handle are enclosed as standard from a niche height of 1400 mm.

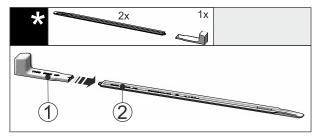


Fig. 50

▶ Attach the installation handle *Fig. 50 (1)* to the levelling rail *Fig. 50 (2)*.

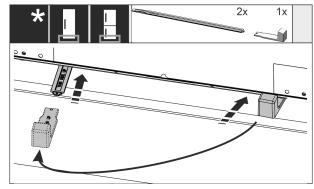


Fig. 51

- ▶ Push the levelling rail into the guide under the appliance base until it reaches the stop.
- ▶ Remove the installation handle and attach it to the second levelling rail.
- Proceed in the same way for the second levelling rail.

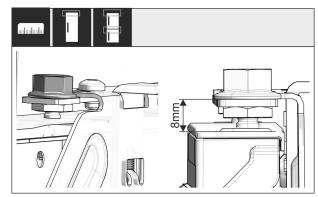


Fig. 52

- Close the door.
- ► Check the preset of 8 mm from the upper edge of the appliance door to the crosspiece support.

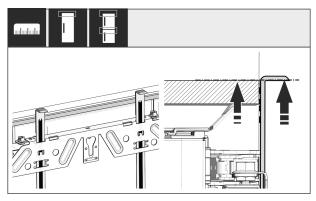


Fig. 53

▶ Push the assembly aids to the unit door height. Lower stop edge of the assembly aid = upper edge of the door to be assembled.

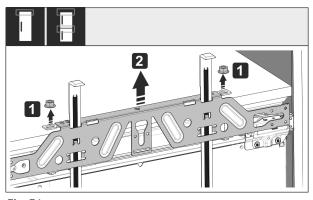


Fig. 54

- ► Loosen locknuts Fig. 54 (1).
- ► Remove crosspiece Fig. 54 (2).

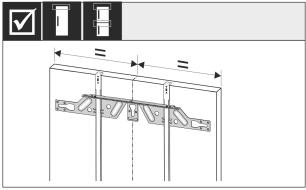


Fig. 55

► Hang the crosspiece on the inside of the unit door and make sure it is central

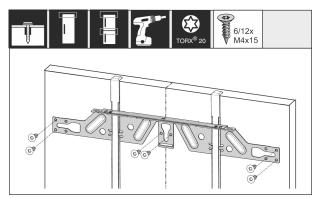


Fig. 56

► Fix the crosspiece using at least 6 screws for chipboard doors and at least 4 screws for panel doors.

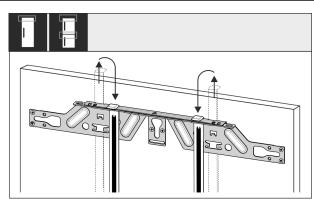


Fig. 57

► Remove the fitting aids, turn round and insert into the adjacent opening.

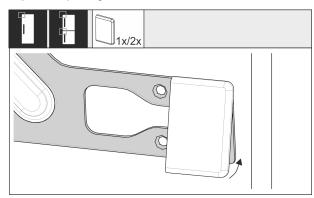


Fig. 58

▶ Put the cover on the crosspiece on the handle side.

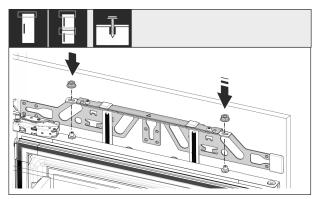


Fig. 59

► Attach the custom panel and loosely screw the lock nuts onto the adjusting bolts.

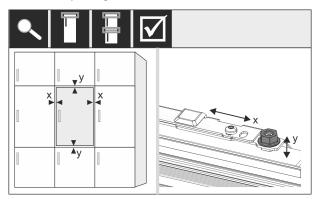


Fig. 60

► Align the custom panel in the X and Y direction using the adjusting bolts.

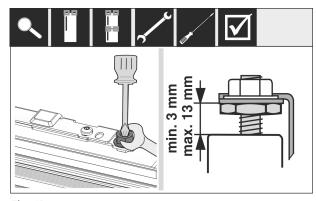


Fig. 61

- ► Tighten the lock nuts.
- ► Check the adjusted height.

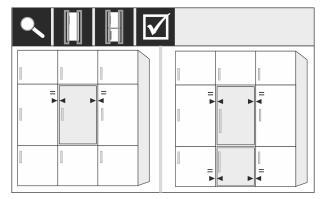


Fig. 62

For front panels thicker than 19 mm:

► Check the dimensions, weights and information in the following sections:

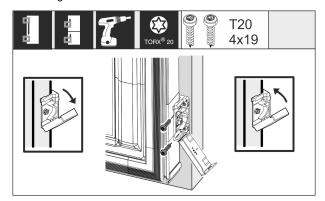


Fig. 63

Mounting the fastening bracket on the custom panel:

- ▶ Open the cover.
 - Mounting the fastening bracket on the custom panel:
- ► Align the front edge of the mounting bracket parallel with the custom door panel edge and screw the bracket down tightly.
- Mounting the fastening bracket on the custom panel:
- ► Fold up the cover.

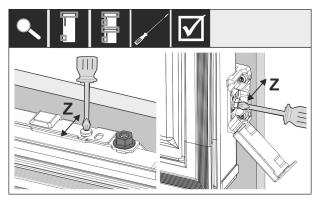


Fig. 64

Align the custom panel in the Z direction:

- ▶ Loosen the adjusting screw on the crosspiece and the screw on the mounting bracket.
- Move the door.

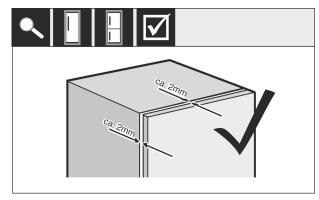


Fig. 65

- ► Check the gap between the custom panel and the unit body.
- ► Check all the screws and tighten them if necessary.

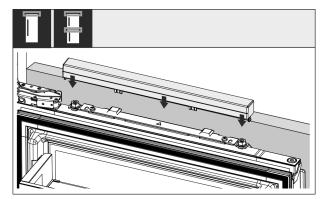


Fig. 66

▶ Put on the top cover.

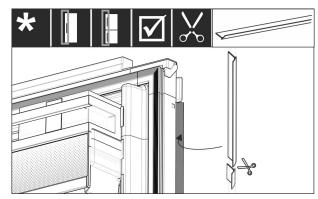


Fig. 67

► Cut the sealing strip to the required length.

► Insert the sealing strip between the front panel and the appliance door.

To make sure the appliance is correctly installed and there will not be any icing up, condensation or malfunctions, the following criteria apply:

- The door must close properly.
- The custom door panel must not touch the body of the unit.
- The seal on the upper corner on the handle side must be fitted securely.
- ► Check recess installation according to the criteria above.

16 Unit fronts

16.1 Dimensions

You require one unit door or two unit doors depending on the appliance variant. The size of the applicable unit door(s) depends on the total niche size and the unit body thickness.

Note

Observe the corresponding appliance and niche dimensions, and installation sketches. (see 3 Appliance dimensions) (see 4 Recess dimensions).

General specifications:

- Please note our appliance-specific recommendations on size and weight for fixed door installation. (see 6 Unit front weights)
- The unit body thickness should be at least 16 mm and no more than 19 mm.
- Pay attention to the gap position in the event of double unit door installation.

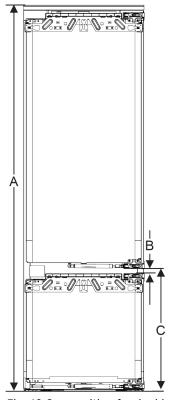


Fig. 68 Gap position for double-door unit front

| Niche height 194 (3 drawers) | |
|------------------------------|------|
| Appliance height (A) (mm) | 1938 |
| Gap (B) (mm) | 15 |

| Nich | e height 1 | 94 (3 | dra | wers) | | |
|-------------|------------|-------|-----|-------|------|-------------------------|
| Gap (mm | | (C) | for | fixed | door | 695 + 15 (27 3/8 + 5/8) |

Additional unit door above, below or adjacent:

- The vertical gap dimension between the unit doors must be 4 mm.
- The horizontal gap dimension between the unit doors must be 4 mm. Check the collision properties here. (see 16.3 Adjusting the gap dimension without collisions)

Weight and hinges:

- If the unit fronts are heavy, the stress on the hinge is very high. The hinge may be damaged. Please note the maximum weight specification for your appliance in the Unit front weights chapter. (see 6 Unit front weights)
- If the unit front exceeds the maximum permissible weight, an appliance with sliding door technology can help, as the weight is divided over several concealed hinges on the unit.
- If you use long unit fronts that extend a long way over the appliances, we recommend an additional hinge (e.g. Kamat) that has exactly the same pivot point as the fixed door hinge used on your appliance. Using a further hinge (Kamat) divides the weight over several points. We recommend using a milled compensation fitting for high unit fronts, in order to counteract warping (convex/ concave).

16.2 Fitting the unit front(s)

Note the following when installing:

- The unit front must be installed symmetrically to the fridge door.
- The adjacent unit front is on the exact same level.
- The adjacent unit front has the same edge radius as the appliance front.
- The unit front is level and not strained.
- The unit front has a minimum depth setting of around 2 mm to the body.
- ► Install the appliance in the niche. (see 15 Installing the appliance in the recess)
- ► Fasten the unit front to the appliance door. (see 15 Installing the appliance in the recess)
- ► Check the unit front for collisions. (see 16.3 Adjusting the gap dimension without collisions)

16.3 Adjusting the gap dimension without collisions

After you have installed the unit front(s), you must check to ensure that the unit fronts do not collide.

Connecting device

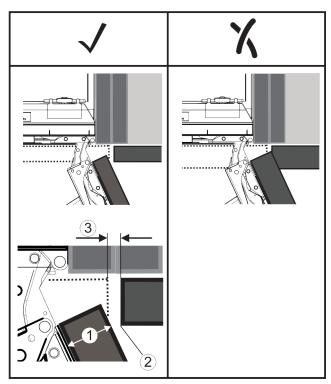


Fig. 69

- (1) Front thickness (FT)
- (2) Edge radius (R)
- (3) Gap dimension (G)

| | R (2) = 0 mm | | R = 1,2 mm | | R = 2 mm | | R = 3 mm | |
|------------|--------------|------|------------|------|----------|------|----------|------|
| FD(1) (mm) | Gmin | Gmax | Gmin | Gmax | Gmin | Gmax | Gmin | Gmax |
| 16 | 0,3 | 0,9 | 0,1 | 0,4 | 0,1 | 0,2 | 0,1 | 0,2 |
| 19 | 0,7 | 2,4 | 0,3 | 1,9 | 0,23 | 3,25 | 0,1 | 0,8 |
| 20 | 2 | 4,3 | 1,5 | 3,6 | 1 | 3,1 | 0,6 | 2,7 |
| 22 | 3,5 | 6,3 | 3 | 5,6 | 2,6 | 5,3 | 2,1 | 4,6 |
| 24 | 5,5 | 8,3 | 5 | 7,8 | 4,5 | 7,4 | 4 | 6,9 |
| 26 | 7,6 | 10,7 | 7 | 10,3 | 6,6 | 9,9 | 6,2 | 9,4 |

Fig. 70 Gap dimension limit range table

 L_{min} = lower limit range for the gap dimension in mm

 L_{max} = upper limit range for the gap dimension in mm

Note

When correcting, always ensure that the unit front is adapted to the general appearance of the front.

Check the collision properties and correct accordingly:

- ▶ Determine the front thickness and edge radius.
- ▶ Read the limit range for the gap dimension from the table.
- ► Compare the gap dimension to the values from the table.
- ▶ Perform one of the following actions according to the evaluated gap dimension.

| Gap dimen- sion | Description |
|-----------------------------------------|------------------------------------------------------------------------------------------------------------------------------------|
| G > L _{max} | If the gap dimension is greater than both limit values, you do not have to make any corrections. |
| G < L _{min} | If the gap dimension is below the limit values, you must increase the gap dimension. Increasing the edge radius is another option. |
| L _{min} ≤ G ≤ L _{max} | If the gap dimension is between both limit values, you must work precisely. Collisions may occur quickly in these situations. |

17 Connecting device



WARNING

Danger of fire due to incorrect connection! Burns.

Damage to the appliance.

- ► Do not use an extension cable.
- Do not use distributor blocks.

NOTICE

Danger of damage to incorrect connection! Damage to the appliance.

▶ Do not connect the appliance to a stand-alone inverter, e.g. solar power systems and petrol generators.

Note

Only use the supplied mains cable.

➤ A longer mains cable can be ordered from Customer Service

Ensure that the following conditions are met:

- The type of current and voltage at the installation site match the information on the serial tag.
- The socket is earthed according to the regulations and fused.
- The fuse tripping current is between 10 and 16 A.
- The socket is easily accessible.
- ► Check the electrical connection.
- ► Connect the mains plug to the power supply.
- The Liebherr logo appears on the screen.
- > The display switches to the standby symbol.

| Connecti | ına d | evice |
|----------|-------|-------|



home.liebherr.com/fridge-manuals

EN built-in fridge/freezer